


Alarms

 
Alarm indication

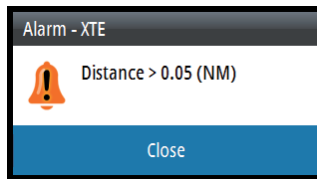


Acknowledging the alarms

Acknowledge alarms by pressing the rotary knob. A reminder reappears at given intervals for as long as the alarm condition exists.

Enabling the alarm system and the alarm siren

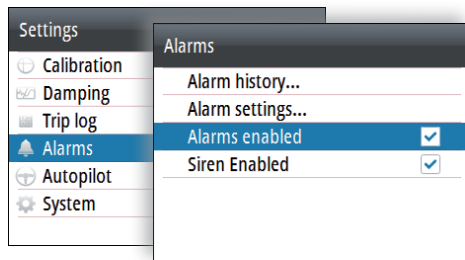


Accessing the Device list

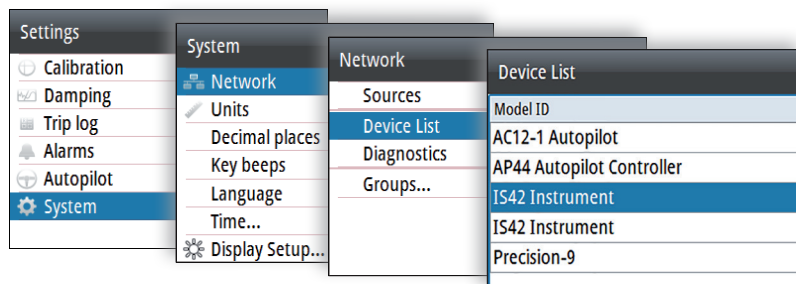 


AP44

 Quick Guide

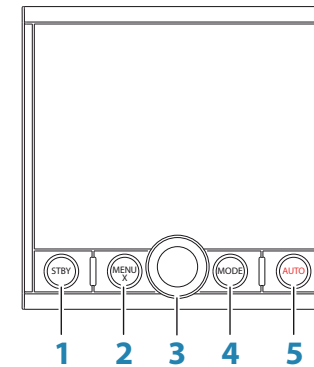

1	STBY key Press to turn the autopilot to Standby mode.
2	MENU/X key With no menu active: <ul style="list-style-type: none">• Press to display the Settings menu• Press and hold to display the Display setup dialog Menu and dialog operation: <ul style="list-style-type: none">• Press to return to previous menu level or to exit a dialog.
3	Rotary knob Menu and dialog operation: <ul style="list-style-type: none">• Turn to move up and down in menus and dialogs• Turn to adjust a value• Press to select a menu option and to enter the next menu level In FU mode: <ul style="list-style-type: none">• Turn to set rudder angle In AUTO, NoDrift and Wind mode: <ul style="list-style-type: none">• Turn to change set heading/set course/set wind angle
4	MODE key Press to display the Mode list
5	AUTO key Press to turn the autopilot to AUTO mode

 
The autopilot page

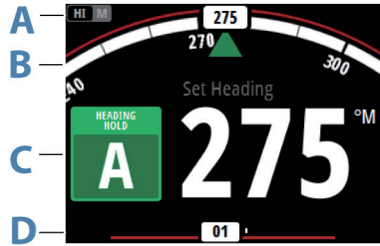

The content varies with active mode. All modes include:

- Response (AC12N/AC42N/SG05) / Profile (NAC-2/NAC-3) mode (A)
- Heading indicator, analog and digital (B)
- Autopilot mode indication (C)
- Rudder indicator, analog and digital (D)

 
Display setup

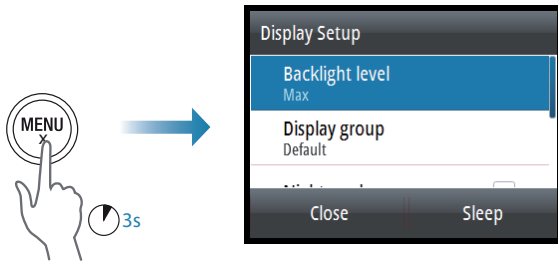

When the Backlight level field is active, subsequent presses on the **MENU** key adjusts backlight level in decrements of 30% .

Selecting an autopilot mode using the MODE key

 Press the **MODE** key and select the relevant option from the Mode list.

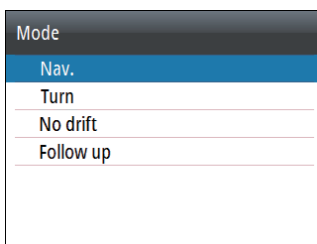

Autopilot modes

Mode	Activate	Mode display	Rotary knob	
			Press	Rotate
Standby			Switch to FU mode	No action
Follow-up	From any mode: select the Follow-up option in the Mode list. From Standby mode: press the rotary knob.		No action	Set the rudder angle
AUTO			No action	Adjust the set heading
Wind*	From AUTO mode: select the Wind option in the Mode list		No action	Adjust set wind
NoDrift	From AUTO mode: select the NoDrift option in the Mode list.		No action	Adjust the set course
NAV	From any mode: select the NAV option in the Mode list.		No action	No action

➔ **Note:** * Mode is only available when the boat type is set to SAIL.