

STANDARD HORIZON

Nothing takes to water like Standard Horizon

QUANTUM GX6500E/GX6000E

25 Watt VHF/FM

Marine Transceiver

Owner's Manual

SVMB

TABLE OF CONTENTS

Quick Reference Guide.....	4	7.11 PA/FOG OPERATION.....	48
1 GENERAL INFORMATION.....	5	7.11.1 Operating the PA HAIL mode.....	49
2 PACKING LIST.....	6	7.11.2 Operating the FOG HORN mode.....	50
3 OPTIONAL ACCESSORIES.....	6	7.11.3 Fog Signal Timing Chart.....	51
4 GETTING STARTED.....	7	7.11.4 Operating the HORN mode.....	52
4.1 PROHIBITED COMMUNICATIONS.....	7	7.12 INTERCOM OPERATION.....	52
4.2 ABOUT VHF RADIO.....	7	7.12.1 Communication.....	52
4.3 SELECTING AN ANTENNA.....	7	7.12.2 Calling.....	53
4.4 COAXIAL CABLE.....	8	7.13 VOICE SCRAMBLER.....	53
4.5 DISTRESS AND HAILING (CHANNEL 16).....	8	7.14 DEMO MODE.....	54
4.6 CALLING ANOTHER VESSEL (CHANNEL 16 OR 9).....	9	7.15 OPERATION MENU.....	55
4.7 MAKING TELEPHONE CALLS.....	10	8 GPS OPERATION.....	57
4.8 BRIDGE CHANNELS 13 AND 67.....	10	8.1 DISPLAYING POSITION INFORMATION.....	57
4.9 AUTOMATED RADIO CHECK SERVICE.....	11	8.1.1 GPS Information Numerical Display.....	57
4.10 WHAT IS THE RANGE FOR AIS RECEIVERS?.....	12	8.1.2 GPS Information Compass Display.....	57
5 INSTALLATION.....	13	8.2 CHECKING GPS STATUS.....	58
5.1 SAFETY / WARNING INFORMATION.....	13	8.3 GPS LOGGER OPERATION.....	59
5.2 LOCATION.....	13	9 DIGITAL SELECTIVE CALLING (DSC).....	60
5.3 MOUNTING THE RADIO.....	14	9.1 GENERAL.....	60
5.3.1 Supplied Mounting Bracket.....	14	9.2 DSC DISTRESS ALEART.....	61
5.3.2 Optional MMB-84 Flush Mount Bracket.....	15	9.2.1 Transmitting a DSC Distress Alert.....	61
5.4 ELECTRICAL CONNECTIONS.....	16	9.2.2 Receiving a DSC Distress Alert.....	64
5.5 REAR PANEL.....	17	9.3 ALL SHIPS CALL.....	66
5.6 CONNECTION OF EXTERNAL DEVICES TO THE RADIO.....	19	9.3.1 Transmitting an All Ships Call.....	66
5.6.1 Connecting the SCU-31 External GPS Antenna to the Radio.....	19	9.3.2 Receiving an All Ships Call.....	67
5.6.2 Connecting the NMEA 0183/NMEA 0183-HS to the Radio.....	19	9.4 INDIVIDUAL CALL.....	68
5.6.3 Accessory Cables and NMEA 0183 Cables.....	20	9.4.1 Setting up the Individual / Position Call Directory.....	68
5.6.4 NMEA 0813/NMEA 0183-HS to Chart Plotter.....	21	9.4.2 Setting up the Individual Call Reply.....	70
5.6.5 Connection to External GPS or Chart Plotter.....	23	9.4.3 Enabling the Individual Call Acknowledgment.....	70
5.6.6 Connection to External PA/HAIL Speaker.....	25	9.4.4 Transmitting an Individual Call.....	71
5.6.7 Rear Microphone Installation.....	26	9.4.5 Receiving an Individual Call.....	73
5.6.8 Optional SSM-70H (RAM4) Installation.....	26	9.4.6 Setting up the Individual Call Ringer.....	75
5.7 INITIAL SETUP REQUIRED WHEN TURNING ON THE POWER FOR THE FIRST TIME.....	29	9.5 GROUP CALL.....	77
5.7.1 Setting the Welcome Screen and Region.....	29	9.5.1 Setting up a Group Call.....	77
5.7.2 Maritime Mobile Service Identity (MMSI).....	29	9.5.2 Transmitting a Group Call.....	79
5.8 CHECKING GPS SIGNAL (GPS STATUS DISPLAY).....	30	9.5.3 Receiving a Group Call.....	82
5.9 GPS CONFIGURATION.....	32	9.5.4 Setting up the Group Call Ringer.....	83
5.9.1 Changing the Gps Time.....	32	9.6 POSITION REQUEST.....	84
5.9.2 Changing the Time Area.....	33	9.6.1 Setting up a Position Request Reply.....	84
5.9.3 Changing the Time Format.....	33	9.6.2 Transmitting a Position Request to Another Vessel.....	85
5.9.4 Changing Cog to True or Magnetic.....	34	9.6.3 Receiving a Position Request.....	87
6 CONTROLS AND INDICATORS.....	35	9.6.4 Manual Input of Position Information.....	88
6.1 FRONT PANEL.....	35	9.6.5 Setting up a Position Request Ringer.....	89
6.2 MICROPHONE.....	37	9.7 POSITION REPORT.....	90
7 BASIC OPERATION.....	39	9.7.1 Transmitting a DSC Position Report Call.....	90
7.1 TURNING ON AND OFF THE TRANSCEIVER.....	39	9.7.2 Receiving a DSC Position Report Call.....	92
7.2 RECEPTION.....	39	9.7.3 Navigating to the Reported Position.....	92
7.3 TRANSMISSION.....	39	9.7.4 Saving the Reported Position as a Waypoint.....	93
7.3.1 Transmit Power.....	40	9.7.5 Setting up a Position Report Ringer.....	94
7.4 TRANSMIT TIME-OUT TIMER (TOT).....	40	9.8 POLLING CALL.....	95
7.5 SIMPLEX/DUPLEX CHANNEL USE.....	40	9.8.1 Transmitting a Polling Call to a Vessel.....	95
7.6 INTERNATIONAL, USA AND CANADA MODE.....	41	9.8.2 Receiving a Polling Call.....	97
7.7 MULTI WATCH (TO PRIORITY CHANNEL).....	42	9.9 AUTO POSITION POLLING.....	97
7.7.1 Setting up the Multi Watch Operation.....	42	9.9.1 Setting up the Polling Operation.....	97
7.7.2 Starting the Dual Watch.....	43	9.9.2 Setting up the Polling Time Interval.....	98
7.8 SCANNING.....	43	9.9.3 Selecting Vessels to be Automatically Polled.....	98
7.8.1 Selecting the Scan Type.....	43	9.9.4 Enabling/Disabling Auto POS Polling.....	99
7.8.2 Programming Scan Memory.....	44	9.10 DSC TEST.....	100
7.8.3 Memory Scanning (M-SCAN).....	45	9.10.1 Programming MMSI into Individual Directory.....	100
7.8.4 Priority Scanning (P-SCAN).....	45	9.10.2 Transmitting a DSC Test to Another Vessel.....	100
7.9 PRESET CHANNELS: INSTANT ACCESS.....	46	9.10.3 Receiving a DSC Test Call.....	102
7.9.1 Programming.....	46	9.11 DSC LOG OPERATION.....	102
7.9.2 Operation.....	47	9.11.1 Reviewing and Resending a Transmitted Logged Call.....	102
7.9.3 Deletion.....	47	9.11.2 Reviewing a Logged DSC RX Distress Call.....	103
7.10 MOB OPERATION.....	47	9.11.3 Reviewing Other Logged Calls.....	104
		9.11.4 Deleting Logged Calls from the DSC Log Directory.....	105
		9.12 DSC LOOP BACK OPERATION.....	106
		10 NAVIGATION.....	107



TABLE OF CONTENTS

10.1	WAYPOINT OPERATION	107	15.12.3	Setting for End of Tone	155
10.1.1	Starting and Stopping Navigation	107	15.12.4	Data Erase	156
10.1.2	Setting Up Waypoint Directory	109	15.13	SCRAMBLER SETUP	157
10.1.3	Selecting the Display Range	113	15.14	SUMMARY OF THE CHANNEL FUNCTION SETUP	158
10.1.4	Selecting the Arrival Range	114	16 DSC SETUP	159	
10.2	ROUTING OPERATION	115	16.1	INDIVIDUAL DIRECTORY	159
10.2.1	Setting Up Routing Directory	115	16.2	INDIVIDUAL REPLY	159
10.2.2	Starting and Stopping Route Navigation	118	16.3	INDIVIDUAL ACKNOWLEDGMENT	159
10.2.3	Changing the Destination	119	16.4	INDIVIDUAL RINGER	159
10.2.4	Selecting Automatic or Manual Routing	119	16.5	GROUP DIRECTORY	159
11 GM OPERATION	120		16.6	POSITION REPLY	160
11.1	SETTING UP GM OPERATION	120	16.7	AUTO POSITION POLLING	160
11.1.1	Setting Up GM Group Directory	120	16.8	AUTO POSITION INTERVAL	160
11.1.2	Setting Up the Polling Time Interval	122	16.9	AUTO CHANNEL CHANGE	160
11.1.3	Enabling/Disabling Transmission during GM Operation	122	16.10	NO ACTION TIMER	161
11.2	STARTING GM OPERATION	123	16.11	WAIT TIME FOR POSITION FIX	162
11.2.1	Changing the GM Group Being Monitored	124	16.12	DSC BEEP	162
11.2.2	Transmitting a DSC Call to a Group Member	124	16.13	SUMMARY OF THE DSC SETUP MENU	163
11.2.3	Starting Navigation to a Group Member	125	17 GPS SETUP	164	
12 AUTOMATIC IDENTIFICATION SYSTEM (AIS)	126		17.1	ORDER OF PRIORITY	164
12.1	GENERAL	126	17.2	DISPLAY DIRECTION	165
12.2	AIS OPERATION	127	17.3	LOCATION FORMAT	165
12.2.1	Displaying the AIS Target Information Screen	127	17.4	TIME OFFSET	166
12.2.2	Changing the AIS Range	129	17.5	TIME AREA	166
12.2.3	Transmitting an Individual Call to an AIS Ship	129	17.6	TIME FORMAT	166
12.2.4	CPA/TCPA Alarm Functions	130	17.7	UNITS OF MEASURE	166
12.2.5	Changing the Compass Display	131	17.8	MAGNETIC VARIATION	167
12.3	AIS SETUP	131	17.9	NMEA 0183 IN/OUT	167
12.3.1	Transponder (Only for GX6500)	131	17.9.1	Data Speed	167
12.3.2	Vessel Information (Only for GX6500)	131	17.9.2	Output Sentences	168
12.3.3	CPA	133	17.10 OPTION GPS UNIT	169	
12.3.4	TCPA	134	17.10.1	Unit Power	169
12.3.5	CPA/TCPA Alarm	135	17.10.2	Position Data Output	170
13 NMEA 2000 SETUP	136		17.10.3	Pinning	171
13.1	SELECT DIVICE	136	17.10.4	SBAS (Satellite Based Augmentation System)	171
13.2	DIVICE INSTANCE	136	17.10.5	Logger Interval	172
13.3	SYSTEM INSTANCE	137	17.10.6	Log Erase	173
13.4	SUMMARY OF THE NMEA 2000 SETUP	138	17.11	SUMMARY OF THE GPS SETUP	174
13.5	COMPATIBLE NMEA-2000 PGN LIST	138	18 SSM-70H (RAM4) REMOTE MIC OPERATION	175	
14 CONFIGURATION SETUP	140		18.1	REMOTE MIC CONTROLS	175
14.1	DISPLAY MODE	140	18.2	RAM4 SOFT KEY ASSIGNMENT	178
14.2	DIMMER ADJUSTMENT	141	18.2.1	Key Assignment	179
14.3	DISPLAY CONTRAST	141	19 CONNECTING A USB DATA TERMINAL TO THE PC	180	
14.4	KEY BEEP	142	20 MAINTENANCE	181	
14.5	FOG ALERT TONE FREQUENCY	142	20.1	REPLACEMENT PARTS	181
14.6	LISTEN BACK	143	20.2	FACTORY SERVICE	182
14.7	STATION NAME	143	20.3	TROUBLESHOOTING CHART	182
14.8	SOFT KEYS	145	21 ATIS SETUP	184	
14.8.1	Key Assignment	145	21.1	ATIS CODE PROGRAMMING	184
14.8.2	Key Timer	146	21.2	ATIS CH GROUP	185
14.9	RESET	147	22 CHANNEL ASSIGNMENTS	186	
14.10	SUMMARY OF THE CONFIGURATION SETUP	148	23 WARRANTY	188	
15 CHANNEL FUNCTION SETUP	149		24 SPECIFICATIONS	190	
15.1	CHANNEL GROUP	149	24.1	GENERAL	190
15.2	WEATHER ALERT	149	24.2	TRANSMITTER	190
15.3	SCAN MEMORY	149	24.3	TRANSMITTER (for AIS) *GX6500 Only	191
15.4	SCAN TYPE	149	24.4	RECEIVER (for Voice and DSC)	191
15.5	SCAN RESUME	150	24.5	RECEIVER (for AIS)	191
15.6	MULTI WATCH	150	24.6	GPS RECEIVER	191
15.7	PRIORITY CHANNEL	150	24.7	NMEA OUTPUT	192
15.8	SUB CHANNEL	151	24.8	SCU-31 EXTERNAL GPS ANTENNA (*GX6000 Optional)	192
15.9	CHANNEL NAME	151			
15.10	NOISE CANCELLATION	152			
15.11	AUDIO FILTER OPERATION	153			
15.12	RX RECORDER	154			
15.12.1	RX Recorder Function ON/OFF	154			
15.12.2	Setting for Recording Delay Time	154			

QUICK REFERENCE GUIDE

The **GX6500E/GX6000E** is equipped with the E2O (Easy-To-Operate) menu system. Basic operation may be accomplished by following the procedure below:

- ① Press and hold the **⏻** key to turn on or off the radio.
- ② The **MODE/STATUS** indicator indicates the status of the transceiver. **RED**: XXXXX. **BLUE**: XXXXX.
- ③ Rotate the **SQL** knob clockwise to squelch or counter clockwise to un-squelch the radio.
- ④ Rotate the **VOL** knob to adjust the speaker audio volume.
- ⑤ Press the **MENU** key to access MENU.
- ⑥ Press the **16/S** key on the radio or the microphone to select channel 16. Press and hold the **16/S** key on the radio or the microphone to select sub channel. Press again to revert to the last selected channel.
- ⑦ Activates a DSC distress call. Lift the red cover, press the **DISTRESS** once, then press and hold until the radio alarms.
- ⑧ These three programmable soft keys can be customized through the setup menu mode. By pressing one of these keys briefly, display the key functions at the bottom of the display.
- ⑨ Press the **▲/▼** key (or press the microphone's **▲/▼** keys) to select the operating channel. While the MENU screen is displayed, press the key to slide the on-screen menu upward/downward.
- ⑩ Press the **▶/◀** key to switch the function menu. While the MENU screen is displayed, press the key to slide the on-screen menu to the right/left side.
- ⑪ Press the **CLEAR** key to cancel a function or menu selection.
- ⑫ While the normal screen is displayed, rotate the **DIAL/ENT** knob to select your desired channel. While the MENU screen is displayed, rotate the knob to select your desired menu item.
- ⑬ To transmit: place your mouth about 1/2 inch away from Mic hole and speak in a normal voice level while pressing the **PTT** switch.
- ⑭ Press the **H/L** key to toggle the transmit power between High (25W) and Low (1W).

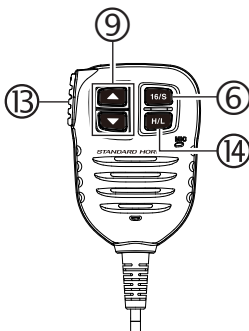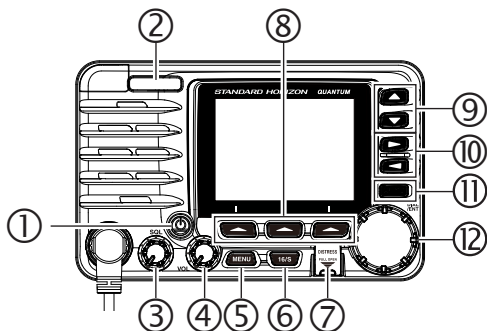

1 GENERAL INFORMATION

The STANDARD HORIZON **GX6500E/GX6000E** Marine VHF/FM Marine transceiver is designed to be used in USA, International, and Canadian Marine bands. The **GX6500E/GX6000E** can be operated from 11 to 16 VDC and has a switchable RF output power of 1 watt or 25 watts.

The **GX6500E/GX6000E** integrates a dual channel AIS (Automatic Identification System) receiver to display AIS vessel information (MMSI, Call Sign, Ship Name, BRG, DST, SOG and COG) directly on the VHF radio, so you will know what is out there in any conditions. The **GX6500E/GX6000E** built-in antenna jack and receiver enable you to receive AIS signals while receiving a voice channel signals. The **GX6500E/GX6000E** is also capable of entering and saving up to 250 waypoints, which may be selected and navigated to by using a unique navigation compass display. The **GX6500E/GX6000E** allows you to contact an AIS ship directly using DSC, show your vessels position in relation to AIS targets and alert you when an AIS ship may be approaching too close to your location via the Closest Point of Approach (CPA) Alarm. To receive AIS targets from ships with AIS class A or B transponders, simply connect the normal VHF antenna (only one antenna needed!).

The **GX6500E/GX6000E** is capable of DSC (Digital Selective Calling) ITU-R M.493 Class D operation. Class D operation allows continuous receiving of Digital Selective Calling functions on channel 70 even if the radio is receiving a call. The **GX6500E/GX6000E** operates on all currently-allocated marine channels which are switchable for use with USA, International, or Canadian regulations. Emergency channel 16 can be immediately selected from any channel by pressing the red **16/S** key. NOAA weather channel can also be accessed immediately by pressing the **[WX]** soft key.

Other features of the **GX6500E/GX6000E** includes: Noise canceling function for transmit and receive audio, NMEA 2000 compatibility, high expandability, two-minute recording function for listening to important conversations later, speaker microphone, 30W PA/Fog, optional **RAM4** second station remote-control microphone with AIS display, intercom between radio and optional **RAM4**, scanning, priority scanning, submersible speaker microphone, high and low voltage warning, and GPS repeatability.

2 PACKING LIST

When the package containing the transceiver is first opened, please check it for the following contents:

- **GX6500E/GX6000E** Transceiver
- Hand Microphone
- Power Cord
- Mounting Bracket and Hardware
- Owner's Manual
- DSC Warning Sticker
- Flush Mount Template
- **SCU-31** External GPS Antenna (GX6500 only)
- **T9101606** USB Cable (Type USB "A" plug to Type USB micro "B" plug)

3 OPTIONAL ACCESSORIES

MMB-84	Flush-Mount Bracket
SSM-70H	Remote-Access Microphone (RAM4 Mic)
SCU-31	External GPS Antenna (for GX6000)
CT-100	23 Feet Microphone Extension Kit for connection to rear panel
MLS-300	External Loud Speaker
220SW5" Round 30 Watt Hail/PA Horn
240SW	5" × 8" Rectangular 40 Watt Hail/PA Horn
SCU-31	External GPS Antenna with 49 Feet of Cable

4 GETTING STARTED

4.1 PROHIBITED COMMUNICATIONS

The FCC prohibits the following communications:

- False distress or emergency messages;
- Messages to “any boat” except in emergencies and radio tests;
- Messages to or from a vessel on land;
- Transmission while on land;
- Obscene, indecent, or profane language (potential fine of \$10,000).


4.2 ABOUT VHF RADIO

The radio frequencies used in the VHF marine band lie between 156 and 158 MHz with some shore stations available between 161 and 163 MHz. The marine VHF band provides communications over distances that are essentially “line of sight” (VHF signals do not travel well through objects such as buildings, hills or trees). Actual transmission range depends much more on antenna type, gain and height than on the power output of the transmitter. On a fixed mount 25W radio transmission expected distances can be greater than 15 miles, for a portable 5W radio transmission the expected distance can be greater than 5 miles in “line of sight”.

4.3 SELECTING AN ANTENNA

Marine antennas are made to radiate signals equally in all horizontal directions, but not straight up. The objective of a marine antenna is to enhance the signal toward the horizon. The degree to which this is accomplished is called the antenna’s gain. It is measured in decibels (dB) and is one of the major factors in choosing an antenna. In terms of effective radiated power (ERP), antennas are rated on the basis of how much gain they have over a theoretical antenna with zero gain. A 3-foot, 3dB gain antenna represents twice as much gain over the imaginary antenna.


Typically a 3-foot 3dB gain stainless steel whip is used on a sailboat mast. The longer 8-foot 6dB fiberglass whip is primarily used on power boats that require the additional gain.

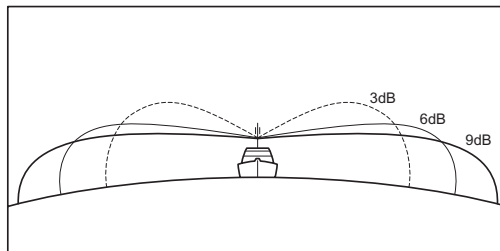

4.4 COAXIAL CABLE

VHF antennas are connected to the transceiver by means of a coaxial cable – a shielded transmission line. Coaxial cable is specified by its diameter and construction.

For runs less than 20 feet, RG-58/U, about 1/4 inch in diameter is a good choice. For runs over 20 feet but less than 50 feet, the larger RG-8X or RG-213/U should be used for cable runs over 50 feet RG-8X should be used. For installation of the connector onto the coaxial cable refer to the figure below.

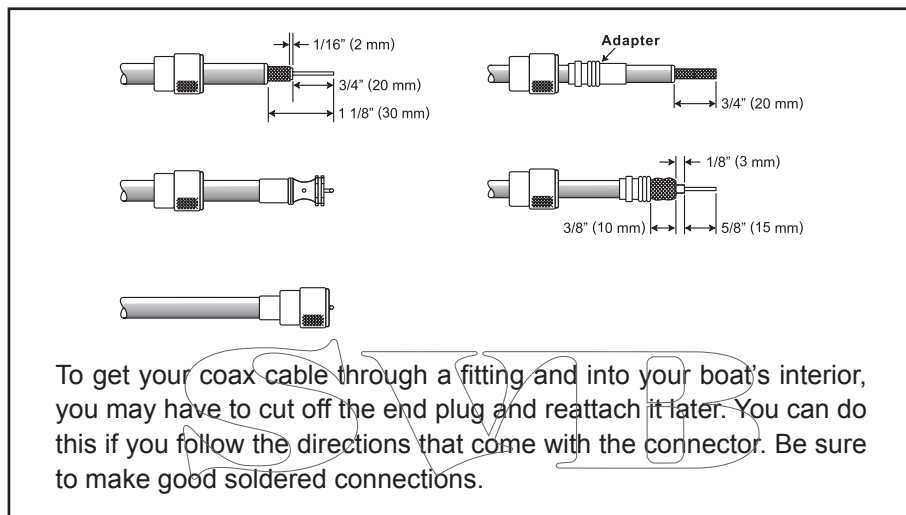

4.5 DISTRESS AND HAILING (CHANNEL 16)

Channel 16 is known as the Hail and Distress Channel. An emergency may be defined as a threat to life or property. In such instances, be sure the transceiver is on and set to CHANNEL 16. Then use the following procedure:

1. Press the microphone push-to-talk switch and say "**Mayday, Mayday, Mayday**. This is _____, _____, _____" (your vessel's name).
2. Then repeat once: "**Mayday**, _____" (your vessel's name).
3. Now report your position in latitude/longitude, or by giving a true or magnetic bearing (state which) to a well-known landmark such as a navigation aid or geographic feature such as an island or harbor entry.
4. Explain the nature of your distress (sinking, collision, aground, fire, heart attack, life-threatening injury, etc.).
5. State the kind of assistance your desire (pumps, medical aid, etc.).
6. Report the number of persons aboard and condition of any injured.
7. Estimate the present seaworthiness and condition of your vessel.

8. Give your vessel's description: length, design (power or sail), color and other distinguishing marks. The total transmission should not exceed 1 minute.
9. End the message by saying "**OVER**". Release the microphone switch and listen.
10. If there is no answer, repeat the above procedure. If there is still no response, try another channel.

NOTE

The **GX6500E/GX6000E** has the DSC Distress calling, that can transmit a distress call digitally to all ships with compatible DSC radios. Refer to section "**10 DIGITAL SELECTIVE CALLING (DSC)**".

4.6 CALLING ANOTHER VESSEL (CHANNEL 16 OR 9)

Channel 16 may be used for initial contact (hailing) with another vessel. However, its most important use is for emergency messages. This channel must be monitored at all times except when actually using another channel.

It is monitored by the U.S. and Canadian Coast Guards and by other vessels.

Use of channel 16 for hailing must be limited to initial contact only. Calling should not exceed 30 seconds, but may be repeated 3 times at 2-minute intervals. In areas of heavy radio traffic, congestion on channel 16 resulting from its use as a hailing channel can be reduced significantly in U.S. waters by using **channel 9** as the initial contact (hailing) channel for non-emergency communications. Here, also, calling time should not exceed 30 seconds but may be repeated 3 times at 2-minute intervals.

Prior to making contact with another vessel, refer to the channel charts in this manual, and select an appropriate channel for communications after initial contact. For example, Channels 68 and 69 of the U.S. VHF Charts are some of the channels available to non-commercial (recreational) boaters. Monitor your desired channel in advance to make sure you will not be interrupting other traffic, and then go back to either channel 16 or 9 for your initial contact.

When the hailing channel (16 or 9) is clear, press the **PTT** switch on the mic and state the name of the other vessel you wish to call and then "this is" followed by the name of your vessel and your Station License (Call Sign) then release the **PTT** switch on the mic. When the other vessel returns your call, immediately request another channel by pressing the **PTT** switch on the mic and saying "**go to**," the number of the other channel, say "**over**" and release the **PTT** switch on the mic. Then switch to the new channel. When the new channel is not busy, call the other vessel.

After a transmission, say “**over**,” and release the microphone’s push-to-talk (**PTT**) switch. When all communication with the other vessel is completed, end the last transmission by stating your Call Sign and the word “**out**.” Note that it is not necessary to state your Call Sign with each transmission, only at the beginning and end of the contact.

Remember to return to Channel 16 when not using another channel. Some radios automatically monitor Channel 16 even when set to other channels or when scanning.

4.7 MAKING TELEPHONE CALLS

To make a radiotelephone call, use a channel designated for this purpose. The fastest way to learn which channels are used for radiotelephone traffic is to ask at a local marina. Channels available for such traffic are designated **Public Correspondence** channels on the channel charts in this manual. Some examples for USA use are Channels 24, 25, 26, 27, 28, 84, 85, 86, and 87. Call the marine operator and identify yourself by your vessel’s name. The marine operator will then ask you how you will pay for the call (telephone credit card, collect, etc.) and then link your radio transmission to the telephone lines.

The marine telephone company managing the VHF channel you are using may charge a link-up fee in addition to the cost of the call.

4.8 BRIDGE CHANNELS 13 AND 67

Channel 13 is used at docks, bridges and by vessels maneuvering in port. Messages on this channel must concern navigation only, such as meeting and passing in restricted waters.

Channel 67 is used for navigational traffic between vessels.

By regulation, power is normally limited to 1 Watt on these channels. Your radio is programmed to automatically reduce power to this limit on these channels. However, in certain situations it may be necessary to temporarily use a higher power. See Page 40 for means to temporarily override the low-power limit on these two channels.

4.9 AUTOMATED RADIO CHECK SERVICE

In areas across the country, Sea Tow offers boaters a way to conduct radio checks. To use Sea Tow's free Automated Radio Check service, simply tune your VHF radio to the appropriate channel for your location and conduct a radio check as you typically would. Upon releasing your radio's microphone, the system will play an automated message and relay your transmission back to you, thereby letting you know how your signal will sound to other boaters.

The Automated Radio Check Service is currently available in the areas listed below.

- West Coast** Sea Tow Newport/LA - Ch. 27
 Sea Tow San Diego - Ch. 27
- Northeast** Sea Tow Portland-Midcoast (Maine) - Ch. 27
 Sea Tow Boston - Ch. 27
 Sea Tow South Shore (Mass.) - Ch. 28
 Sea Tow Rhode Island - Ch. 24
 Sea Tow Eastern Long Island - Ch. 27
 Sea Tow Huntington (N.Y.) - Ch. 27
 Sea Tow Manasquan (N.J.) - Ch. 28
- Mid-Atlantic** Sea Tow Northern Chesapeake (Md.) - Ch. 28
 Sea Tow Central Chesapeake (Md.) - Ch. 27
 Sea Tow Hampton Roads (Va.) - Ch. 28
- North Carolina** Sea Tow Wrightsville Beach - Ch. 28
 Sea Tow Ocean Isle Beach - Ch. 28
- Florida** Sea Tow Sebastian - Ch. 28
 Sea Tow Fort Lauderdale - Ch. 27
 Sea Tow Charlotte Harbor - Ch. 24
 Sea Tow Tampa Bay - Ch. 27
 Sea Tow Horseshoe Beach - Ch. 27
 Sea Tow Carrabelle/St. Marks - Ch. 27
 Sea Tow Pensacola/Orange Beach (Ala.) - Ch. 27

4.10 WHAT IS THE RANGE FOR AIS RECEIVERS?

Since AIS uses similar frequencies as a marine VHF radio, it has similar radio reception capabilities - which are basically line of sight. This means that the higher the VHF antenna is mounted, the greater the reception area will be. Reception from Class A vessels that are 20 or even 30 miles away on open water is not uncommon as their antennas are mounted high off the water. Class B transponders use lower power for transmissions; therefore you can expect Class B vessels to be acquired when they are 5 to 10 miles away.

NOTE

The **GX6500E/GX6000E** does not require a special marine VHF antenna to receive AIS transmissions. The **GX6000** does not transmit AIS signals, it is NOT recommended to use an antenna dedicated for AIS operation.

For additional information on AIS visit the USCG website:

<<http://www.navcen.uscg.gov/marcomms/ais.htm>>

The logo consists of the letters 'S', 'V', 'M', and 'B' in a large, stylized, outlined font. The 'S' is on the left, followed by 'V', 'M', and 'B' to its right. The letters are interconnected and have a decorative, slightly calligraphic feel.

5 INSTALLATION

5.1 SAFETY / WARNING INFORMATION

This radio is restricted to occupational use, work related operations only where the radio operator must have the knowledge to control the exposure conditions of its passengers and bystanders by maintaining the minimum separation distance of 3 feet (1 m). Failure to observe these restrictions will result in exceeding the FCC RF exposure limits.

Antenna Installation:

The antenna must be located at least 3 feet (1 m) away from passengers in order to comply with the FCC RF exposure requirements.

5.2 LOCATION

The radio can be mounted at any angle. Choose a mounting location that:

- is follow the compass safe distances shown in the table below to prevent interference to a magnetic compass

Transceiver Unit	1.0 m
Handset	0.5 m

- provides accessibility to the front panel controls
- allows connection to a power source and an antenna
- has nearby space for installation of a microphone hanger
- is at least 3 feet (1 m) away from the radio's antenna
- the signal from the GPS satellite can receive sufficiently

Note: To insure the radio does not affect the compass or radios performance is not affected by the antenna location, temporarily connect the radio in the desired location and:


- a. Examine the compass to see if the radio causes any deviation
- b. Connect the antenna and key the radio. Check to ensure the radio is operating correctly by requesting a radio check.

5.3 MOUNTING THE RADIO

5.3.1 Supplied Mounting Bracket

The supplied mounting bracket allows overhead or desktop mounting.

Use a 13/64" (5.2 mm) bit to drill the holes to a surface which is more 0.4" (10 mm) thick and can support more than 3.3 lbs (1.5 kg) and secure the bracket with the supplied screws, spring washers, flat washers, and nuts.

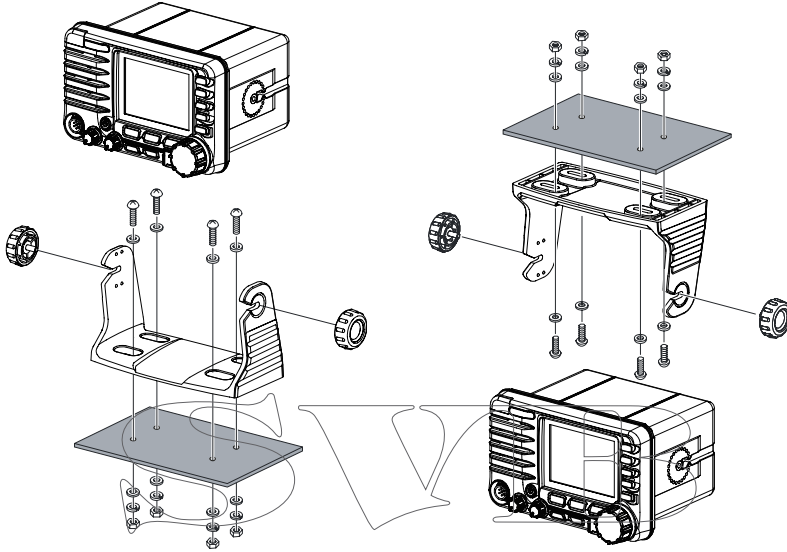


DESKTOP MOUNTING

OVERHEAD MOUNTING

5.3.2 Optional MMB-84 Flush Mount Bracket

1. Use the supplied template to mark the location where the rectangular hole is to be cut. Confirm the space behind the dash or panel is deep enough to accommodate the transceiver (at least 6.7" (17 cm) deep). There should be at least 1/2" (1.3 cm) between the transceiver's heatsink and any wiring, cables or structures.
2. Cut out the rectangular hole and insert the transceiver.
3. Fasten the brackets to the sides of the transceiver with the lock washer screw combination; so that the mounting screw base faces the mounting surface (see illustration below).
4. Turn the adjusting screw to adjust the tension so that the transceiver is tight against the mounting surface.

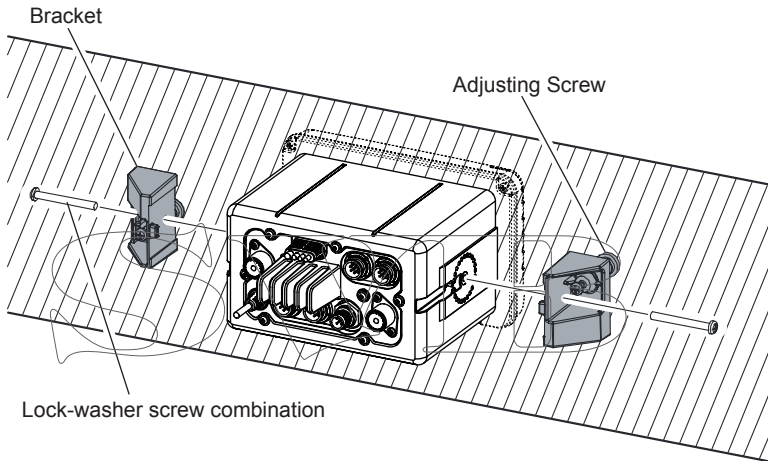


5.4 ELECTRICAL CONNECTIONS

CAUTION

Reverse polarity battery connections will damage the radio!


Connect the power cord and antenna to the radio. Antenna and Power Supply connections are as follows:

1. Mount the antenna at least 3 feet (1 m) away from the radio. At the rear of the radio, connect the antenna cable. The antenna cable must have a PL259 connector attached. RG-8/U coaxial cable must be used if the antenna is 25 feet (7.6 m) or more from the radio. RG58 cable can be used for distances less than 25 feet (7.6 m).
2. Connect the red power wire to a 13.8 VDC $\pm 20\%$ power source. Connect the black power wire to a negative ground.
3. If an optional remote extension speaker is to be used, refer to section 6.5 for connections.
4. It is advisable to have a Certified Marine Technician check the power output and the standing wave ratio of the antenna after installation.

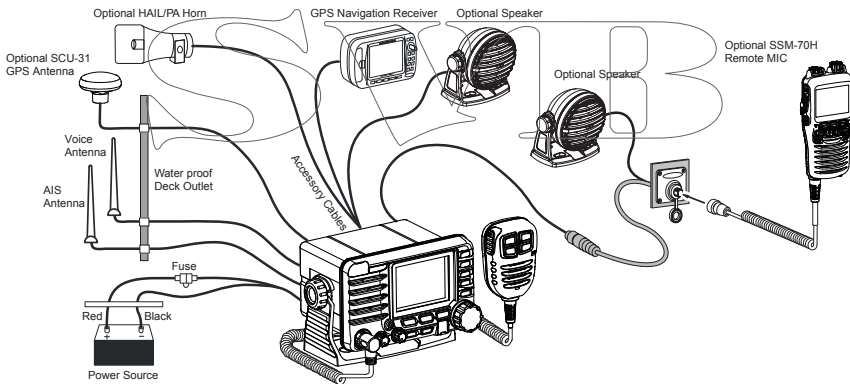


Fuse Replacement

To take out the fuse from the fuse holder, hold both ends of the fuse holder and pull the fuse holder apart without bending the fuse holder. When you replace the fuse, please confirm that the fuse is tightly fixed on the metal contact located inside the fuse holder. If the metal contact holding the fuse is loose, the fuse holder may heat up.

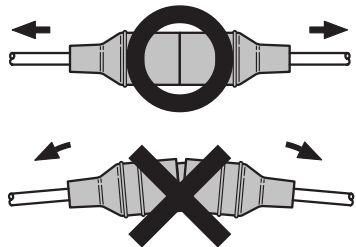


5.5 REAR PANEL

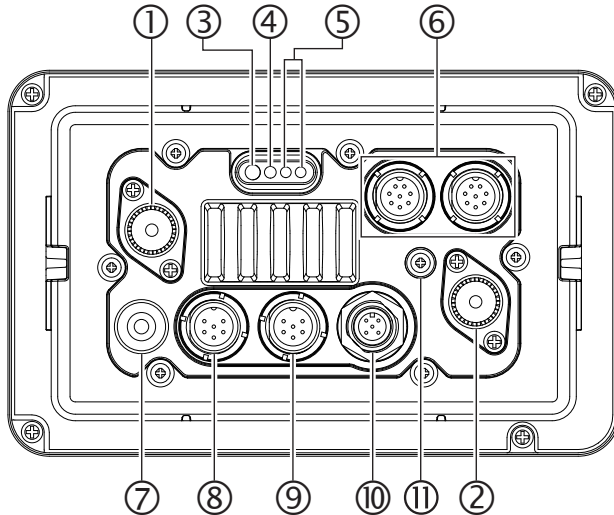

- ① **VHF ANT jack** (VHF antenna jack)
Connects an antenna to the transceiver. Use a marine VHF antenna with an impedance of 50 ohms.
Note: This **ANT** jack is used to receive marine receiver.
- ② **AIS ANT jack** (AIS antenna jack)
Connects an antenna to the transceiver. Use a marine VHF antenna with an impedance of 50 ohms.
Note: On the **GX6000** the antenna connection is used to AIS receiver.
- ③ **PA Speaker Connection Cable** (Orange, Yellow, Green & Blue)
Connects the **GX6500E/GX6000E** to PA speakers. See section “**3 OPTIONAL ACCESSORIES**” for a list of optional STANDARD HORIZON Speakers.
Green: PA FWD Speaker (+)
Blue: PA FWD Speaker (-)
Orange: PA AFT Speaker (+)
Yellow: PA AFT Speaker (-)
- ④ **EXTERNAL Speaker Connection Cable** (Red & White)
Connects the **GX6500E/GX6000E** to an optional external speaker. Refer to section “**3 OPTIONAL ACCESSORIES**” for a list of optional STANDARD HORIZON Speakers.
Red: External Speaker (+)
White: External Speaker (-)
- ⑤ **DC Input Cable**

Connects the radio to a DC power supply capable of delivering 11 to 16VDC.


- ⑥ **RAM4 Connector (SSM-70H Remote Station Microphone Connector)**
Connects the **GX6500E/GX6000E** to the **SSM-70H (RAM4)** Remote Station Microphone. Refer to section “**19 SSM-70H (RAM4) REMOTE MIC OPERATION**” for details.
- ⑦ **NMEA0183 In/Out & NMEA0183-HS OUT Connection Cable (Blue, Green, Gray, Brown, Yellow & White)**
Connects the **GX6500E/GX6000E** to a GPS chart plotter. Refer to section “**6.6 CONNECTION OF EXTERNAL DEVICES TO THE RADIO**”.
- ⑧ **Rear MIC Connector**
Connects the supplied hand microphone if desired. This connector provides the same function as that on the front panel and allows remote use of the microphone by using the optional **MEK-4** (microphone extension kit). Two microphones on the front and rear panels are available at the same time.
- ⑨ **GPS ANT Connector**
Connects the **SCU-31** external GPS antenna.
- ⑩ **NMEA 2000 Connector**
Connects to the NMEA 2000 network.
- ⑪ **GND Terminal (Ground Terminal)**
Connects the **GX6500E/GX6000E** to a good ground, for safe and optimum performance.
Use the screw supplied with the **GX6500E/GX6000E** only.

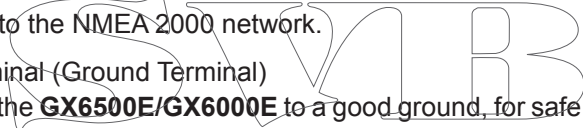

5.6 CONNECTION OF EXTERNAL DEVICES TO THE RADIO

5.6.1 Connecting the SCU-31 External GPS Antenna to the Radio

Connect the **SCU-31** cable to the GPS ANT (six pin) connector on the rear panel, then tighten the cable nut (see illustration at the right).

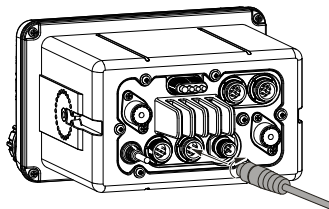

5.6.2 Connecting the NMEA 0183/NMEA 0183-HS to the Radio

External GPS Connections (NMEA 0183 4800 baud or NMEA 0183-HS 38400 baud)

The **GX6500E/GX6000E** can select the NMEA baud rate between “4800 bps” and “38400 bps”. Refer to section “**18.9 NMEA 0183 IN/OUT**” for selection.

NMEA Input (GPS Information)

- **GX6500E/GX6000E** can read NMEA 0183 version 2.0 or higher, and NMEA 0183-HS version 1.01 or higher.
- The NMEA 0183 input sentences are GLL, GGA, RMC, GNS, GSA, and GSV (RMC sentence is recommended).
- If 4800 baud (default) is selected:
 - a. If there is a selection for “PARITY” select “NONE”.
 - b. The Blue and Green wires of input are at 4800 baud.
- If 38400 baud is selected:

The Blue and Green wires of input are at 38400 baud.

NMEA Output (DSC and GPS information)

- The NMEA 0183 output sentences are DSC and DSE.
- If 4800 baud (default) is selected:
 - a. The Gray and Brown wires output DSC and DSE sentences.
 - b. The Yellow and White wires of output AIS VDM sentence at 38400 baud.
- If 38400 baud is selected:
 - a. The Gray and Brown wires of output are at 38400 baud and includes both DSC (DSC, DSE) and AIS (VDM) sentences.
 - b. The Yellow and White wires always output AIS sentences at 38400 baud.
- GSA, GSV, GLL, GGA, and RMC sentences can be output in the **GX6500E/GX6000E** by setting through the GPS setup menu (refer to section “**18.9 NMEA 0183 IN/OUT**”).

For further information on interfacing/setting up your GPS, please contact the

manufacturer of the GPS receiver externally connected.

If you have further inquiries, please feel free to contact Product Support at:

Phone: (800) 767-2450

Email: marinetech@yaesu.com

5.6.3 Accessory Cables and NMEA 0183 Cables

The image and table below show the wires of the **GX6500E/GX6000E** and the connections to optional devices such as an external GPS antenna, GPS chart plotter and an AIS receiver or transponder.

CAUTION

Care must be taken not to touch any of the NMEA wires to positive 12 VDC or the radio may be damaged.


When connecting the GPS navigation receiver, strip off about 1 inch (2.5 cm) of the specified wire's insulation, then splice the ends together.

The **GX6500E/GX6000E** uses NMEA 0183 protocol to share coordinates, DSC and AIS information to and from a GPS chart plotter. The **GX6500E/GX6000E** transfers AIS information to a GPS chart plotter at 38400 baud (sometimes called HS). GPS and DSC information is transferred between a GPS chart plotter with multiple ports (minimum 2) at 4800 baud (default setting).

To connect to a GPS chart plotter which has one NMEA port, the **GX6500E/GX6000E** may be setup to receive GPS coordinates, send DSC and AIS signals at 38400 baud. Refer to section "**18.9 NMEA 0183 IN/OUT**" for details.

5.6.4 NMEA 0813/NMEA 0183-HS to Chart Plotter

4800 Baud Connections

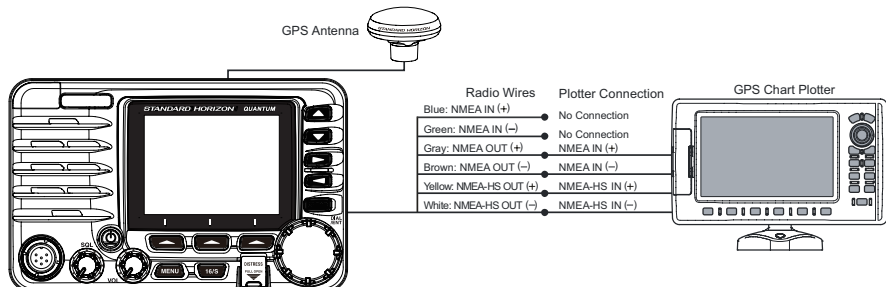


Wire Color/Description	Connection Examples
BLUE - NMEA GPS Input (+)	No connection
GREEN - NMEA GPS Input (-)	No connection
GRAY - NMEA DSC Output (+)	NMEA (+) input of GPS*1
BROWN - NMEA DSC Output (-)	NMEA (-) input of GPS*1
YELLOW - AIS Data Output (+)	NMEA-HS (+) input of AIS receiver*2
WHITE - AIS Data Output (-)	NMEA-HS (-) input of AIS receiver*2

*1: 4800 baud

*2: 38400 baud

Note: Some GPS chart plotters have a single wire for NMEA signal ground. In such a case connect the NMEA input (-) to the GPS chart plotter's single NMEA signal ground wire, and leave the NMEA output (-) open. In case the assignment of power supply and ground of a GPS chart plotter to be used is different from that of the radio, connect the signal ground wire of the GPS chart plotter to the ground terminal (GND) on the rear panel of the radio.

38400 Baud Connections

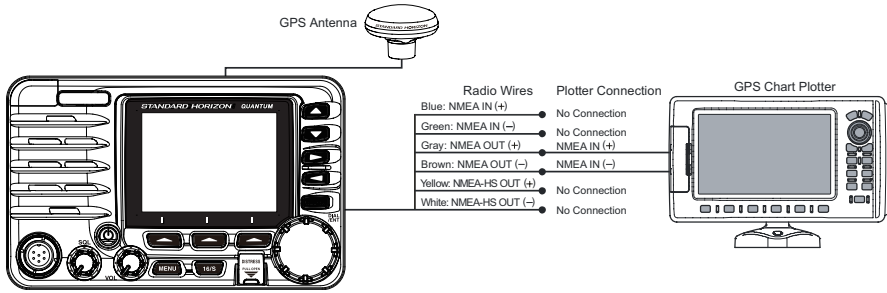

Wire Color/Description	Connection Examples
BLUE - NMEA GPS Input (+)	No connection
GREEN - NMEA GPS Input (-)	No connection
GRAY - NMEA DSC Output (+)	NMEA (+) input of GPS*1
BROWN - NMEA DSC Output (-)	NMEA (-) input of GPS*1
YELLOW - AIS Data Output (+)	No connection*2
WHITE - AIS Data Output (-)	No connection*2


*1: The GPS chart plotter ComPort must be setup to 38400 baud (HS) to receive DSC and AIS sentences from the **GX6500E/GX6000E** (Gray and Brown wires).

*2: The **GX6500E/GX6000E** always outputs NMEA 0183-HS VDM sentence at 38400.

Note: Some GPS chart plotters have a single wire for NMEA signal ground. In such a case connect the NMEA input (-) to the GPS chart plotter's single NMEA signal ground wire, and leave the NMEA output (-) open. In case the assignment of power supply and ground of a GPS chart plotter to be used is different from that of the radio, connect the signal ground wire of the GPS chart plotter to the ground terminal (GND) on the rear panel of the radio.

5.6.5 Connection to External GPS or Chart Plotter

4800 Baud Connections

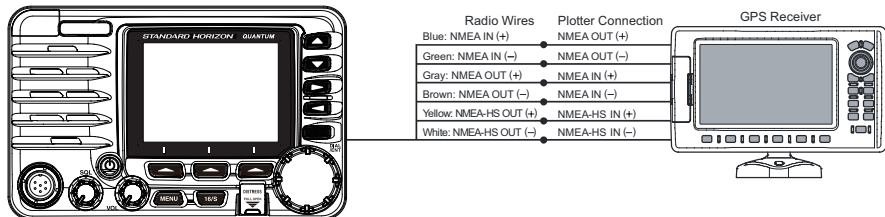


Wire Color/Description	Connection Examples
BLUE - NMEA GPS Input (+)	NMEA (+) output of GPS*1
GREEN - NMEA GPS Input (-)	NMEA (-) output or common ground of GPS*1
GRAY - NMEA DSC Output (+)	NMEA (+) input of GPS*1
BROWN - NMEA DSC Output (-)	NMEA (-) input of GPS*1
YELLOW - AIS Data Output (+)	NMEA-HS (+) input of AIS receiver*2
WHITE - AIS Data Output (-)	NMEA-HS (-) input of AIS receiver*2

*1: 4800 baud

*2: 38400 baud

Note: Some GPS chart plotters have a single wire for NMEA signal ground. In such a case connect the NMEA input (-) to the GPS chart plotter's single NMEA signal ground wire, and leave the NMEA output (-) open. In case the assignment of power supply and ground of a GPS chart plotter to be used is different from that of the radio, connect the signal ground wire of the GPS chart plotter to the ground terminal (GND) on the rear panel of the radio.

38400 Baud Connections

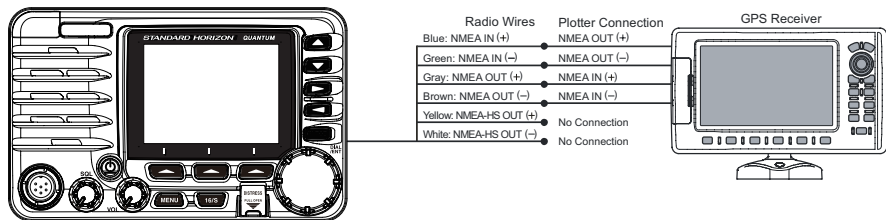


Wire Color/Description	Connection Examples
BLUE - NMEA GPS Input (+)	NMEA (+) output of GPS*1
GREEN - NMEA GPS Input (-)	NMEA (-) output or common ground of GPS*1
GRAY - NMEA DSC Output (+)	NMEA (+) input of GPS*1
BROWN - NMEA DSC Output (-)	NMEA (-) input of GPS*1
YELLOW - AIS Data Output (+)	No connection*2
WHITE - AIS Data Output (-)	No connection*2

*1: The GPS chart plotter ComPort must be setup to 38400 baud (HS) to send GPS coordinates to the **GX6500E/GX6000E** (Blue and Green wires) and to receive DSC and AIS sentences from the **GX6500E/GX6000E** (Gray and Brown wires).

*2: The **GX6500E/GX6000E** always outputs NMEA 0183 VDM sentence at 38400.


Note: Some GPS chart plotters have a single wire for NMEA signal ground. In such a case connect the NMEA input (-) to the GPS chart plotter's single NMEA signal ground wire, and leave the NMEA output (-) open. In case the assignment of power supply and ground of a GPS chart plotter to be used is different from that of the radio, connect the signal ground wire of the GPS chart plotter to the ground terminal (GND) on the rear panel of the radio.

5.6.6 Connection to External PA/HAIL Speaker

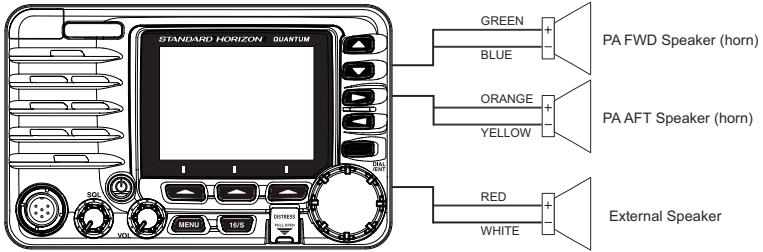


Wire Color/Description	Connection Examples
RED - External Speaker (+)	Positive wire of external 4 Ohm External speaker
WHITE - External Speaker (-)	Negative wire of external 4 Ohm External speaker
GREEN - PA FWD Speaker (+)	Positive wire of external 4 Ohm audio speaker (horn)
BLUE - PA FWD Speaker (-)	Negative wire of external 4 Ohm audio speaker (horn)
ORANGE - PA AFT Speaker (+)	Positive wire of external 4 Ohm audio speaker (horn)
YELLOW - PA AFT Speaker (-)	Negative wire of external 4 Ohm audio speaker (horn)

In some areas powerful AM broadcast stations may be heard when in listen-back mode. In this case change the speaker wire to 2-conductor shielded audio cable. See the illustration below for connections.

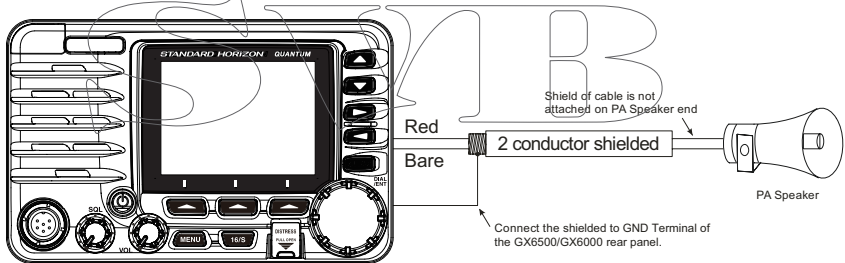

5.6.7 Rear Microphone Installation

Connect the optional **MEK-4** (microphone extension kit) to the Rear MIC (six pin) connector on the rear panel, then tighten the cable nut (see illustration at the right).

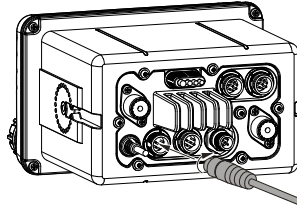


5.6.8 Optional SSM-70H (RAM4) Installation

The **GX6500E/GX6000E** is capable of using two **SSM-70H (RAM4)** Remote Station Microphones to remotely control the Radio, AIS, DSC and PA/Fog functions. In addition the **GX6500E/GX6000E** can operate as a full function intercom system between the **SSM-70H (RAM4)** and the **GX6500E/GX6000E**.


WARNING

Do not connect or remove the SSM-70H (RAM4) microphone while the radio is powered on. This may result in equipment failure.

1. Connect the CT-100 extension cable to the RAM 1 or RAM 2 (eight pin) connector on the rear panel, then tighten the cable nut (see illustration at the right).

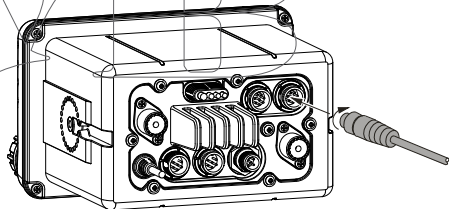


2. Install the ferrite core (supplied with the **SSM-70H** Remote Station Microphone) to the extension cable, then snap its two halves together, per the illustration on the next page.
3. Attach the ferrite core as close as possible to the MIC plug, as shown below.
4. Finally, wind some plastic tape around each ferrite core, to prevent vibration from causing the two halves to split apart.

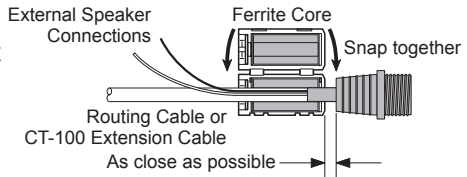

5. Referring to illustration below, make a 1.2" (30 mm) hole in the wall, then insert the extension cable into this hole. Connect the gasket and mount base to the extension cable connector using the nut.

6. Drill the four screw holes (approx. 2 mm) on the wall, then install the mounting base to the wall using four screws.
7. Put the rubber cap on to the nut. The installation is now complete.

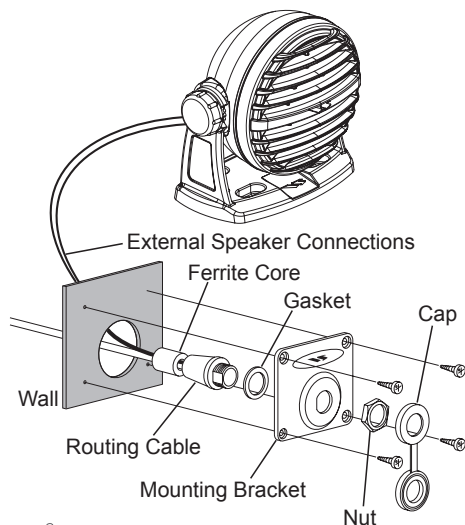

NOTE

Caution!: Before cutting the cable, it must be disconnected from the rear panel of the transceiver.

The routing cable can be cut and spliced, however care needs to be taken when reconnecting the wires to ensure water integrity.

After cutting you will notice there are the following wires:

Yellow, White, Brown, Gray, Blue, Green, Red/White*, Shield*

* The red/white and shield wires are wrapped in foil. Remove the foil, and separate the red/white and shield wires.




WARNING

It is not recommended to plug or unplug the **SSM-70H (RAM4)** Remote Station Microphone into the routing cable while the radio is on.

Connecting an External Speaker to the RAM4 Mic Cable

In noisy locations and optional external speaker may be connected to the white speaker wires on the **RAM4** routing cable. The **RAM4** can drive the internal speaker or the external speaker one at a time. When connecting an external speaker, follow the procedure below to turn off the **RAM4** audio and enable the external speaker wires on the **RAM4** routing cable.

1. On the **RAM4** mic, press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CONFIGURATION”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “SPEAKER SELECT”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “INTERNAL” or “EXTERNAL”, then press the **[SELECT]** soft key.
6. Press the **CLEAR/ON** key to return to radio operation.

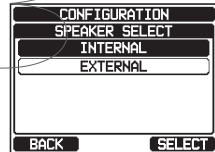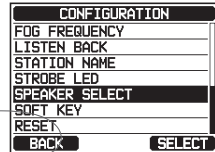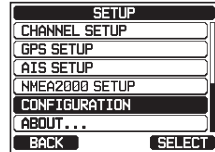

5.7 INITIAL SETUP REQUIRED WHEN TURNING ON THE POWER FOR THE FIRST TIME

5.7.1 Setting the Welcome Screen and Region

5.7.2 Maritime Mobile Service Identity (MMSI)

What is an MMSI?

An MMSI is a nine digit number used on marine transceivers capable of using Digital Selective Calling (DSC). This number is used like a telephone number to selectively call other vessels.

THIS NUMBER MUST BE PROGRAMMED INTO THE RADIO TO OPERATE DSC FUNCTIONS.

How can I obtain an MMSI assignment?

In the USA, visit the following websites to register:

<http://www.boatus.com/mmsi/>

<https://www.seatow.com/tools-and-education/mmsi>

http://wireless.fcc.gov/services/index.htm?job=licensing&id=ship_stations

In Canada, visit

<http://www.ic.gc.ca/epic/site/smt-gst.nsf/en/sf01032e.html>

WARNING


The MMSI can be inputted only once. Therefore please be careful not to input the incorrect MMSI number. If you need to change the MMSI number after it has been entered, the radio will have to be returned to Factory Service. Refer to the section “**21.2 FACTORY SERVICE**”.

Programming the MMSI


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “MMSI/POS INFO”, then press the [**SELECT**] soft key. (To cancel, press the [**BACK**] soft key.)



3. Press the **[MMSI]** soft key.

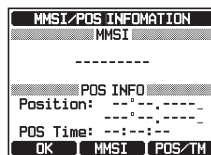


4. Rotate the **DIAL/ENT** knob to select the first number of your MMSI, then press the **[SELECT]** soft key to step to the next number.

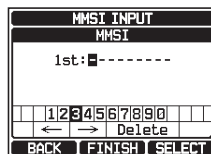


5. Repeat step 4 to set your MMSI number (9 digits).

6. If a mistake was made entering in the MMSI number, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 4.

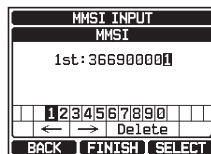


7. When finished programming the MMSI number, press the **[FINISH]** soft key. The radio will ask you to input the MMSI number again. Perform steps 4 through 6 above.

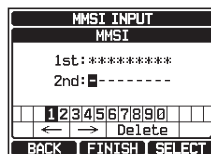

8. After the second number has been input, press the **[FINISH]** soft key to store the MMSI.

9. Press the **[OK]** soft key to return to radio operation.

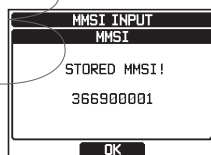

NOTE

To view your MMSI after programming to ensure it is correct, perform steps 1 to 2. Look that the MMSI number shown on the display is correct.


5.8 CHECKING GPS SIGNAL (GPS STATUS DISPLAY)

When the **GX6500E/GX6000E** receives the GPS signal, a small satellite icon “GPS” will appear on the display and your current location (latitude/longitude) is shown on the display.

NOTE

If there is a problem with the NMEA connection between the radio and the GPS, the GPS icon will blink continuously until the connection is corrected.



The **GX6500E/GX6000E** has a GPS status display which shows the satellites currently being received, along with a graphical (bar-graph) representation of the relative signal strengths from the satellites.

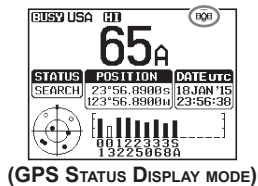

NOTE

For the **GX6500E/GX6000E** to properly show the GPS status page when an external GPS antenna or a chart plotter is connected it must be setup to output GSA and GSV NMEA 0183 sentences.

1. Press and hold the **⏻** key to turn the radio on.
2. Press the **MENU** key to display “MENU”.
3. Rotate the **DIAL/ENT** knob to select “GPS”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “GPS STATUS”, then press the **[ENTER]** soft key to display the GPS status currently being received.
5. Press the **CLEAR** key to return to radio operation.

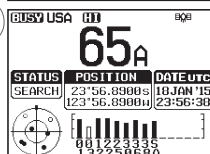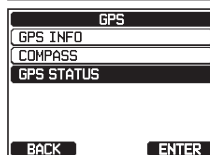


NOTE

When the **GX6500E/GX6000E** is first turned on, it may take several minutes to compute a fix of your position. This is normal, as the **GX6500E/GX6000E** is downloading “almanac” information from the GPS satellites.

5.9 GPS CONFIGURATION





5.9.1 Changing the Gps Time

From the factory the **GX6500E/GX6000E** shows GPS satellite time or UTC (Universal Time Coordinated) time. A time offset is needed to show the local time in your area. The time offset must be changed in order for the radio to display the current time in your area. See the Offset Time Table below.

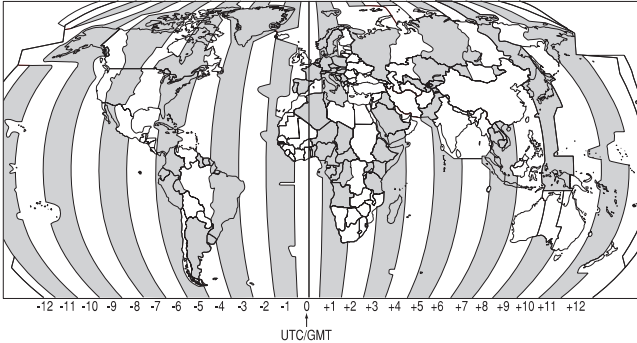

OFFSET TIME TABLE




1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “TIME OFFSET”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select time offset of your location. See illustration above to find your offset time. If “00:00” is assigned, the time is the same as UTC or GPS satellite time.
6. Press the **[ENTER]** soft key to store the time offset.
7. Press the **CLEAR** key to return to radio operation.

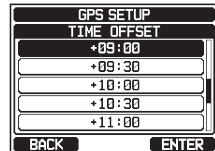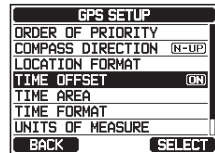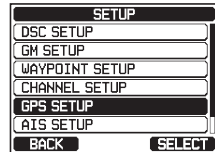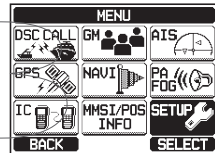

5.9.2 Changing the Time Area

This menu selection allows the radio to show UTC time or local time with offset.



1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “TIME AREA”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “UTC” or “LOCAL”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

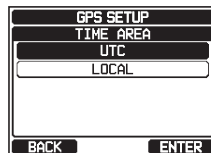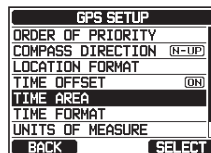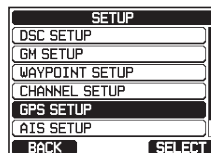


5.9.3 Changing the Time Format

This menu selection allows the radio to setup to show time in 12-hour or 24-hour format.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “TIME FORMAT”, then press the **[SELECT]** soft key.

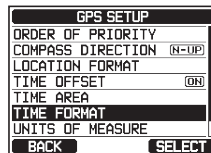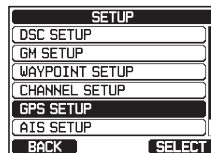

5. Rotate the **DIAL/ENT** knob to select “24hour” or “12hour”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

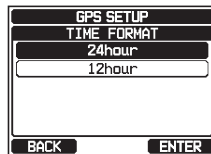


5.9.4 Changing Cog to True or Magnetic

Allows the GPS COG (Course Over Ground) and the BRG from an AIS target to be selected to show in ON or OFF. Factory default is “OFF” however by following the steps below the COG can be changed to “ON”.



1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.




3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.

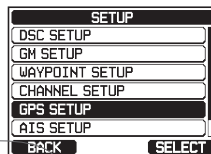

4. Rotate the **DIAL/ENT** knob to select “MAGNETIC VARIATION”, then press the **[SELECT]** soft key.

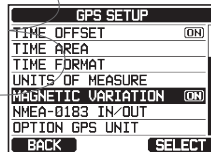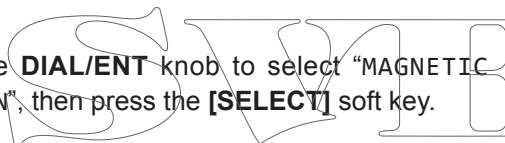

5. Rotate the **DIAL/ENT** knob to select “OFF” or “ON”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

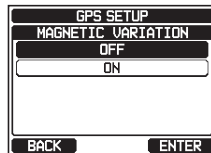


NOTE

Setting to “ON” is effective only when the RMC sentences with magnetic data are input from external devices such as a GPS receiver.

6 CONTROLS AND INDICATORS

This section defines each control of the transceiver. See illustration below for location of controls. For detailed operating instructions refer to chapter 8 of this manual.

6.1 FRONT PANEL

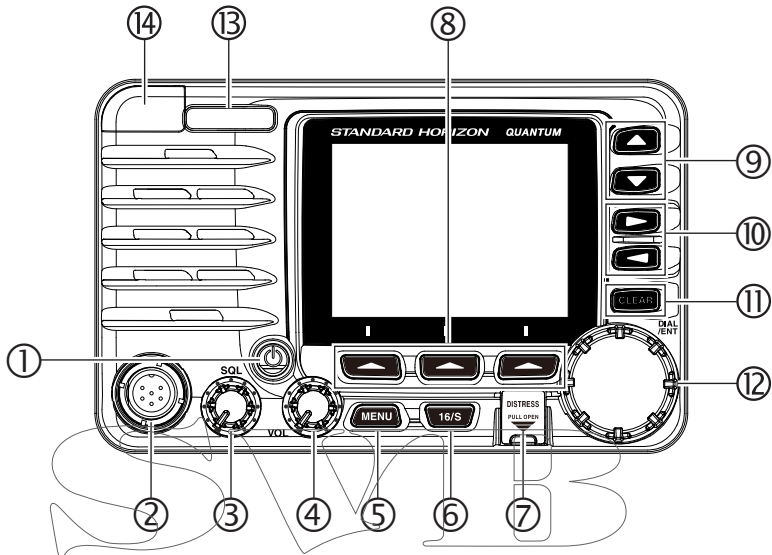

①  (Power) key

Press and hold to toggle the radio on or off. When the power is turned on, the transceiver is set to the last selected channel.

② MIC Connector

Connects to the supplied speaker microphone.

③ **SQL** knob (Squelch control)

Adjusting this control clockwise, sets the point at which random noise on the channel does not activate the audio circuits but a received signal does. This point is called the squelch threshold. Further adjustment of the squelch control will degrade reception of wanted transmissions.

④ **VOL** knob (Volume control)

Turns the adjusts the speaker volume.

Clockwise rotation of this knob increases the internal and speaker microphone volume.

SECONDARY USE

When in the PA or Fog mode, controls the listen-back volume.

⑤ **MENU** key

Press to access MENU. For details, refer to section “**8.16 OPERATION MENU**”.

⑥ **16/S** key

Pressing this key immediately recalls channel 16 from any channel location. Holding down this key recalls the SUB channel (The default setting is channel 9). Pressing this key again reverts to the previous selected working channel.

⑦ **DISTRESS** key

Used to send a DSC Distress Call. To send the distress call, refer to section “**10.2.1 Transmitting a DSC Distress Alert**”.

⑧ Soft keys

The 3 programmable soft keys can be customized by the Setup Menu mode described in section “**15.8 SOFT KEYS**”. When one of the soft keys is pressed briefly, the functions will appear above each key on the display.

⑨ **▲/▼** key

These keys are used to change the operating channel. These keys on the microphone can also be used to change the operating channel. Press the key momentarily, the channel increases/decreases one step. Holding the key, the channel increases/decreases continuously.

SECONDARY USE

- While the MENU screen is displayed, press the key to slide the on-screen menu upward/downward.
- When in the PA or Fog mode, press the key to change the channel.

⑩ **▶/◀** key

Press these keys to switch the function menu.

SECONDARY USE

While the MENU screen is displayed, press the key to slide the on-screen menu to the right/left side.

⑪ **CLEAR** key

Press this key to cancel a menu selection.

⑫ **DIAL/ENT** knob

While the normal screen is displayed, rotate the **DIAL/ENT** knob to select your desired channel. While the MENU screen is displayed, rotate the knob to select your desired menu item.

SECONDARY USE

- Press this knob to enter a selection in the MENU.
- When in the PA or Fog mode, rotate to change the channel.

⑬ MODE/STATUS indicator


Indicates the radio status with the four colors on the three positions of the mode/status indicator.

Position	Color	Description
Left	Blue	AIS-Board Working
	Purple	Receiving MSG23
	Red	AIS-Board Failed
Center	Red	AIS Transmitting (GX6500 Only)
	Orange	TX Time Out (GX6500 Only)
Right	Green	Data Receiving (registered MMSI)
	Orange	Data Receiving (unregistered MMSI)
	Red	Receive Error

⑭ DATA jack

Use the USB micro type B jack to output the NMEA data, configure the transceiver settings and download the GPS logger data.

6.2 MICROPHONE

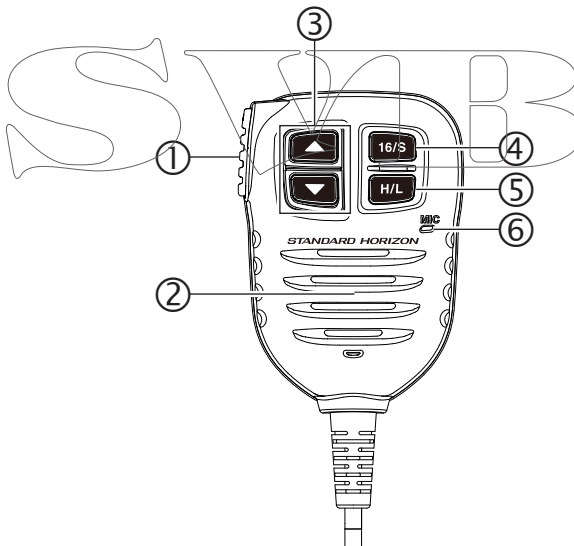

① PTT (Push-To-Talk) switch

When in radio mode and the **PTT** switch is pressed, the transmitter is enabled for voice communications to another vessel.

When PA mode is selected, pressing the **PTT** switch allows your voice to be amplified and supplied to a connected PA horn.

When an optional **RAM4** mic is connected and intercom mode is selected, pressing the **PTT** switch enables voice communications from the **GX6500E/ GX6000E** to the **RAM4** second station microphone.

② Microphone speaker

Audio heard through internal radio speaker is heard through speaker inside the microphone.

③ ▲/▼ key

These keys on the microphone are used to select channels and to choose menu items.

④ **16/S** key

Pressing this key immediately recalls channel 16 from any channel location. Holding down this key recalls the SUB channel (The default setting is channel 9). Pressing this key again reverts to the previous selected working channel.

⑤ **H/L** key

Press this key to toggle between 25 W (High) and 1 W (Low) power. When the TX output power is set to “Low” while the transceiver is on channel 13 or 67, the output power will temporarily switch from “Low” to “High” power until the **PTT** switch of the microphone is released. This key is not function on transmit inhibited and low power only channels.



⑥ Microphone

When spoken into transmits your voice with reduction of background noise, using Clear Voice Noise Reduction Technology.

Note: Position your mouth about 1/2” (1.5 cm) away from the microphone hole and speak in a normal voice.

7 BASIC OPERATION

7.1 TURNING ON AND OFF THE TRANSCEIVER

1. After the transceiver has been installed, ensure that the power supply and antenna are properly connected.
2. Press and hold the  key to turn the radio on.
3. Press and hold the  key again to turn the radio off.

7.2 RECEPTION

1. Rotate the **SQL** knob fully counterclockwise. This state is known as “squelch off”.
2. Turn up the **VOL** knob until noise or audio from the speaker is at a comfortable level.
3. Rotate the **SQL** knob, clockwise until the random noise disappears. This state is known as the “squelch threshold”.
4. Rotate the **DIAL/ENT** knob to select the desired channel. Refer to the channel chart on Pages 187 to 189 for available channels.
5. When a message is received, adjust the volume to the desired listening level. The “[BUSY]” indicator on the display indicates that communications are being received.




7.3 TRANSMISSION

1. Perform steps 1 through 4 of RECEPTION.
2. Before transmitting, monitor the channel to ensure it is clear.

THIS IS AN FCC REQUIREMENT!

3. Press the microphone's **PTT** (push-to-talk) switch. The “[TX]” indicator on the LCD is displayed.
4. Speak slowly and clearly into the microphone.
5. When the transmission is finished, release the microphone's **PTT** switch.

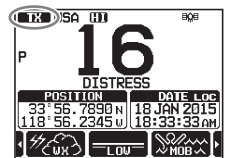

NOTE

Position your mouth about 1/2” (1.5 cm) away from the microphone hole and speak in a normal voice.

7.3.1 Transmit Power

The TX output power of the **GX6500E/GX6000E** is set to high level (25W) in factory default, and the “[HI]” indicator is displayed on the top part of the screen.

To switch the TX output power:

1. Press the ►/◀ key repeatedly until the [HI] or [LOW] soft key is displayed at the bottom of the screen.



2. Press the [HI] or [LOW] soft key to switch between HI (25W) or LO (1W) output power.

When the TX output power is set to “Low” while the transceiver is on channel 13 or 67, the output power will temporarily switch from “Low” to “High” power until the PTT switch of the microphone is released. This soft key is not function on transmit inhibited and low power only channels.



7.4 TRANSMIT TIME-OUT TIMER (TOT)

When the PTT switch on the microphone is held down, transmit time is limited to 5 minutes. This limits unintentional transmissions due to a stuck microphone. About 10 seconds before automatic transmitter shutdown, a warning beep will be heard from the speaker(s). The transceiver will automatically go to receive mode, even if the PTT switch is continually held down. Before transmitting again, the PTT switch must first be released and then pressed again.

NOTE

Once the transmitter is shut down by the TOT, transmission to the last channel is only allowed 10 seconds after the shutdown.

7.5 SIMPLEX/DUPLEX CHANNEL USE

Refer to the VHF MARINE CHANNEL CHART (Pages 187 to 189) for instructions on use of simplex and duplex channels.





NOTE

All channels are factory-programmed in accordance with FCC (USA), Industry Canada (Canada), and International regulations. Mode of operation cannot be altered from simplex to duplex or vice-versa.

7.6 INTERNATIONAL, USA AND CANADA MODE

To change the channel group from International to USA or Canada:

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “CHANNEL GROUP”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select desired channel group “USA”, “INTL”, or “CAN”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

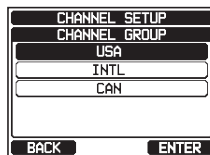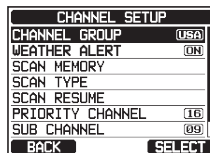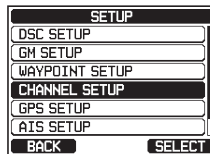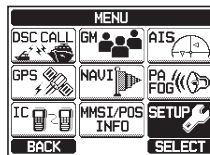

7.7 MULTI WATCH (TO PRIORITY CHANNEL)

Multi watch is used to scan two or three channels for communications.

- In Dual Watch, a normal VHF channel and the priority channel are scanned alternately.
- In Triple Watch, a normal VHF channel, the priority channel, and the sub channel are scanned alternately.


When a signal is received on the normal channel the radio briefly switches between the normal channel and the priority channel to look for a transmission. If the radio receives communications on the priority channel the radio stops and listens to priority channel until communication ends and then starts dual or triple watch scan again.

7.7.1 Setting up the Multi Watch Operation

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.




3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key

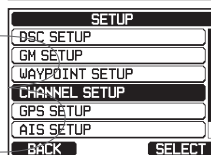


4. Rotate the **DIAL/ENT** knob to select “MULTI WATCH”, then press the **[SELECT]** soft key.

5. Rotate the **DIAL/ENT** knob to select “DUAL” or “TRIPLE”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

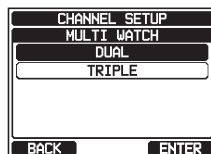

7.7.2 Starting the Dual Watch

1. Adjust the **SQL** knob until the background noise disappears.
2. Rotate the **DIAL/ENT** knob to select a channel you wish to watch.
3. Press ►/◀ key repeatedly until the **[DUAL WATCH]** soft key is displayed at the bottom of the screen, press the **[DUAL WATCH]** soft key.

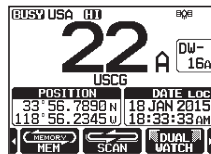

The radio will monitor the priority channel and the channel that was selected in step 2.

If a signal is received on the channel selected in step 2, the **GX6500E/GX6000E** will dual watch to priority channel.

4. To stop dual watch, press the **[DUAL WATCH]** soft key again. When selecting “TRIPLE” in the **SETUP** menu, **[TRIPLE WATCH]** will be displayed as the soft key instead of **[DUAL WATCH]**.

NOTE

The priority channel may be changed from CH16 (default) to another channel. Refer to section “**16.7 PRIORITY CHANNEL**”.


7.8 SCANNING

The **GX6500E/GX6000E** will automatically scan channels programmed into the preset channel memory and also the scan channel memory, and the last selected weather channel.




When an incoming signal is detected on one of the channels during scan, the radio will pause on that channel, allowing you to listen to the incoming transmission. The radio will automatically start scanning again after the transmission stops.

7.8.1 Selecting the Scan Type


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key

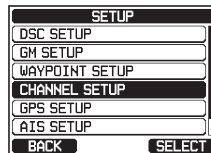

- Rotate the **DIAL/ENT** knob to select “SCAN TYPE”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “PRIORITY” or “MEMORY”.
- Press the **[ENTER]** soft key to store the selected setting.
- Press the **CLEAR** key to return to radio operation.

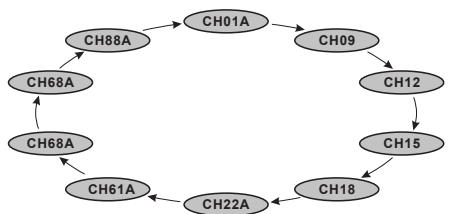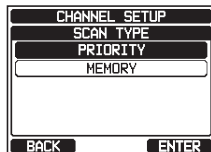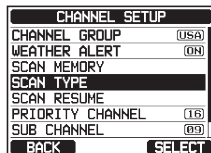




MEMORY SCAN (M-SCAN)

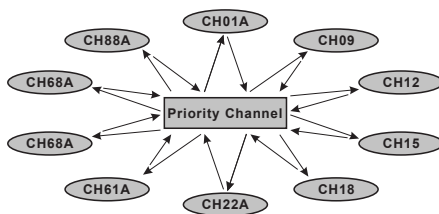

PRIORITY SCAN (P-SCAN)

7.8.2 Programming Scan Memory


- Press the **MENU** key to display “MENU”.
- Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “SCAN MEMORY”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select a desired channel to be scanned, then press the **[MEM]** soft keys. “ON” icon will appear at the right side of the selected channel.
- Repeat step 5 for all the desired channels to be scanned.

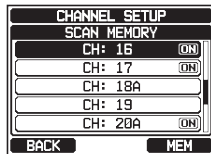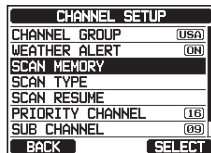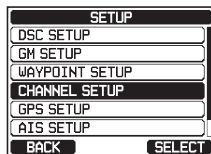

- To REMOVE a channel from the list, select the channel then press the **[MEM]** soft key. “ON” icon of the selected channel will disappear.
- When you have completed your selection, press the **CLEAR** key to return to radio operation.


To check channels to be scanned, rotate the **DIAL/ENT** knob. The “**[MEM]**” icon will appear when the memory channel is displayed.

Note: When “SCAN MEMORY” is assigned to the soft key, the memory function switches between on and off every time you press the **[MEM]** soft key.

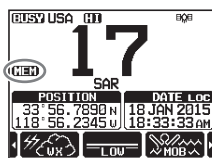


7.8.3 Memory Scanning (M-SCAN)

- Set the scan type to “MEMORY” in the SETUP menu (refer to “8.9.1 Selecting the Scan Type”).
- Adjust the **SQL** knob until the background noise disappears.
- Press the **▶/◀** key repeatedly, then press the **[SCAN]** soft key. “MEM SCAN” appears on the display. Scanning will proceed from the lowest to the highest programmed channel number and preset channel (described in the next section) and will stop on a channel when a transmission is received. The channel number will blink during reception.
- To stop scanning, press the **[SCAN]** soft key, **16/S** or **CLEAR** key.

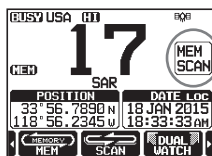

7.8.4 Priority Scanning (P-SCAN)

- Set the scan type to “PRIORITY” in the SETUP menu (refer to “8.9.1 Selecting the Scan Type”).
- Adjust the **SQL** knob until the background noise disappears.
- Press the **▶/◀** key repeatedly, then press the **[SCAN]** soft key. “PRI SCAN” appears on the display. Scanning will proceed between the memorized channels and preset channel (described in next section) and the priority channel. The priority channel will be scanned after each programmed channel.
- To stop scanning, press the **[SCAN]** soft key, **16/S** or **CLEAR** key.

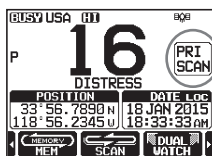

NOTE

In the default setting, Channel 16 is set as the priority channel. You may change the priority channel to the desired channel from Channel 16 on the SETUP menu. Refer to section “**16.7 PRIORITY CHANNEL**”.


7.9 PRESET CHANNELS: INSTANT ACCESS

10 preset channels can be programmed for instant access. Press the ►/◀ key repeatedly, then press the **[PRESET]** soft key. Pressing the **[PRESET]** key activates the user assigned channel bank. If the **[PRESET]** soft key is pressed and no channels have been assigned, an alert beep will be emitted from the speaker.


Before beginning the Instant Access operation, assign the “PRESET” command into one of the programmable keys, refer to section “**15.8 SOFT KEYS**”.

7.9.1 Programming

1. Rotate the **DIAL/ENT** knob to select the channel to be programmed.
2. Press the ►/◀ key repeatedly to indicate the function on the display, then press and hold the **[PRESET]** soft key until the “**P-SET**” icon and channel number are blinking.

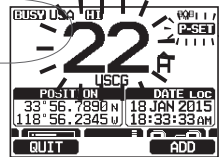


3. Press the **[ADD]** soft key to program the channel into the preset channel memory. “**[P-SET]**” icon will appear.
4. Repeat steps 1 through 3 to program the desired channels into the preset channels. Up to 10 channels can be registered. If you attempt to register the 11th channel, error beep will sound.

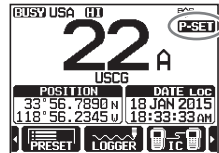


7.9.2 Operation

1. Press the ►/◀ key repeatedly, then press the **[PRESET]** soft key to recall the preset channel. The “**[P-SET]**” icon will appear on the display.
2. Rotate the **DIAL/ENT** knob to select the desired preset channel.
3. Press the **[PRESET]** soft key to return to the last selected channel. The “**[P-SET]**” icon will disappear from the display.

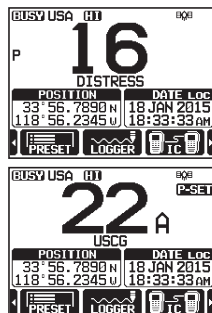

7.9.3 Deletion

1. Press the ►/◀ key repeatedly, then press the **[PRESET]** soft key to recall the preset channel.
2. Rotate the **DIAL/ENT** knob to select the preset channel to be deleted.
3. Press and hold the **[PRESET]** soft key until the “**[P-SET]**” icon and channel number are blinking.
4. Press the **[DELETE]** soft key to delete the channel from the preset channel memory.
5. Repeat steps 2 through 4 to delete the desired channels from preset channels.
6. To exit from deleting the preset channels, press the **[QUIT]** soft key.

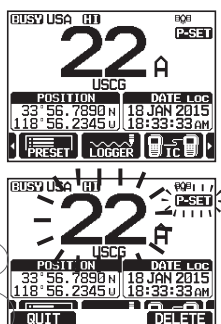


7.10 MOB OPERATION

The **GX6500E/GX6000E** provides a feature to memorize the position information instantly in case of MOB (Man Over-Board).

1. Press the ►/◀ key repeatedly, then press the **[MOB]** soft key.
2. Press the **[TO WPT]** soft key to start the navigation to the displayed position. For details about the navigation, see section “**11 NAVIGATION**”.
To modify the displayed position information, press the **[POS/TM]** soft key. For details about the modification, see “**Editing a Waypoint**” on page 111.



- To transmit a DSC distress message, lift the red spring loaded DISTRESS cover on the right side of the transceiver, then press and hold the **DISTRESS** key (see section “**10.2.1 Transmitting a DSC Distress Alert**” for details).

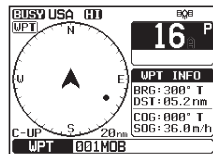

The nature of the distress call is automatically set to “MOB”.

7.11 PA/FOG OPERATION

The **GX6500E/GX6000E** has a 30W hailer built-in and can be used with any 4 Ohm PA horn. Standard Horizon offers two HAIL/PA horns, the **220SW** (5” round 30 Watt HAIL/PA horn) and the **240SW** (5” x 8” rectangular 40 Watt HAIL/PA horn). When the **GX6500E/GX6000E** is in PA Hail mode the PA speaker listens back (acts as a microphone and provides two-way communications through the HAIL/PA horn to the main radio).

NOTE

When in the PA HAIL or FOG HORN mode, the **GX6500E/GX6000E** will continue to receive DSC calls and communications on the last selected working channel prior to entering the PA HAIL or FOG HORN mode. Then the **GX6500E/GX6000E** AIS page can also be accessed when in the PA HAIL or FOG HORN mode.

PA HAIL mode:

PA HAIL mode allows the transceiver to be used as a power hailer when an optional STANDARD HORIZON **220SW** or **240SW** HAIL/PA horn is installed. The PA Hail mode has a listen-back feature which provides two way communication through the HAIL/PA horn.

FOG HORN mode:



Automatic signaling is transmitted through the HAIL/PA horn. When the fog horn signal is not being outputted the **GX6500E/GX6000E** listens back through the connected HAIL/PA horn.

HORN mode:

Foghorn sound or siren sound can be transmitted through the HAIL/PA horn. When the fog horn signal is not being outputted the **GX6500E/GX6000E** listens back through the connected HAIL/PA horn.

7.11.1 Operating the PA HAIL mode

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “PA FOG”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “PUBLIC ADDRESS”, then press the **[SELECT]** soft key.
4. Press the microphone’s **PTT** switch to speak through the HAIL/PA speaker.
Press the **[PA VOL]** soft key, then rotate the **DIAL/ENT** knob to control the AF output level. The AF output level can be set from 0 to 30 watts.
5. To listen back, rotate the **VOL** knob.
6. Press the **CLEAR** key to return to radio operation.


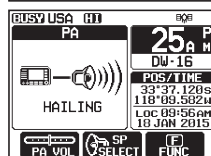
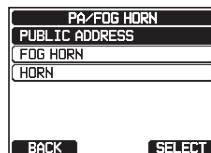


SVIB







7.11.2 Operating the FOG HORN mode

The user can select the type of horn from “Underway”, “Stop”, “Sail”, “Towing”, “Aground” and “Anchor”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “PA FOG”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “FOG HORN”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select one of the six functions described above, then press the **[SELECT]** soft key.
5. On the “FOG HORN” mode, press the **[FOG VOL]** soft key, then rotate the **DIAL/ENT** knob to control the AF output level. Press the **[ENTER]** soft key. The AF output level can be set from 0 to 30 watts.
6. To listen back, rotate the **VOL** knob.
7. Press the **CLEAR** key to return to radio operation.

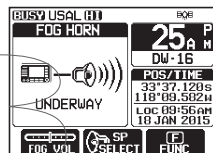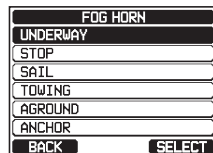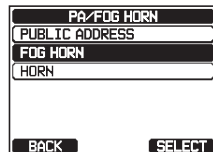





7.11.3 Fog Signal Timing Chart

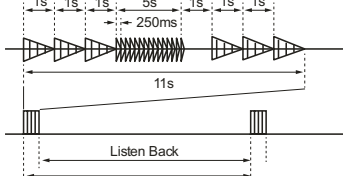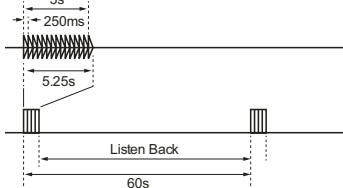TYPE	PATTERN	USAGE
UNDERWAY	<p>One 5-second blasts every 120 seconds.</p> 	<p>Motor vessel underway and making way.</p>
STOP	<p>Two 5-second blasts (separated by 2 seconds) every 120 seconds.</p> 	<p>Motor vessel underway but stopped (not making way).</p>
SAIL	<p>One 5-second blasts followed by two 1-second blasts (separated by 2 seconds) every 120 seconds.</p> 	<p>Sailing vessel underway, fishing vessel (underway or anchored), vessel not under command, a vessel restricted in her ability to maneuver (underway or at anchor), or a vessel towing or pushing another ahead.</p>
TOWING	<p>One 5-second blasts followed by three 1-second blasts (separated by 2 seconds) every 120 seconds.</p> 	<p>Vessel under tow (manned).</p>
AGROUND	<p>One 11-second rings every 60 seconds.</p> 	<p>Vessel is aground.</p>
ANCHOR	<p>One 5-second rings every 60 seconds.</p> 	<p>Vessel is at anchor.</p>

7.11.4 Operating the HORN mode

The user can select the type of horn from “Horn” and “Siren”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “PA FOG”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “HORN”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “HORN” or “SIREN”, then press the **[SELECT]** soft key.
5. On the “Horn” and “Siren” modes, press the **[HORN]** soft key to activate the tone through the HAIL/PA speaker.
Press the **[FOG VOL]** soft key, then rotate the **DIAL/ENT** knob to control the AF output level. Press the **[ENTER]** soft key. The AF output level can be set from 0 to 30 watts.
6. To listen back, rotate the **VOL** knob.
7. Press the **CLEAR** key to return to radio operation.

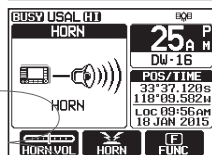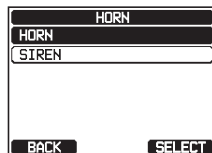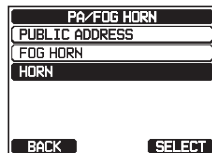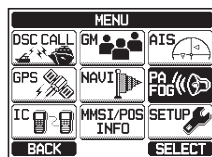

7.12 INTERCOM OPERATION

In addition an optional **RAM4** remote station microphone must be connected to perform intercom functions between the **GX6500E/GX6000E** and the **RAM4**.

NOTE



When using the intercom function, connect two **RAM4** Remote Station Microphones to the **GX6500E/GX6000E**.

7.12.1 Communication

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “IC”, then press the **[SELECT]** soft key.



3. Rotate the **DIAL/ENT** knob to select the device to which you want to communicate, then press the **[SELECT]** soft key. The “✓” icon will appear at the left side of the selected station.
4. Repeat step 3 for all the desired devices.
5. Press the **[ENTER]** soft key.
6. When the intercom mode is enabled, “**INTERCOM**” is displayed on the radio and **RAM4**.
7. Press the microphone’s **PTT** switch on the radio. “Talk” will be shown on the display.
Note: A warning beep will be heard when the radio’s **PTT** and **RAM4**’s **PTT** switches are pushed at the same time.
8. Speak slowly and clearly into the microphone, hold the microphone about 1/2” (1.5 cm) away from your mouth.
9. When finished, release the **PTT** switch.
10. Press the **CLEAR** key to return to radio operation.

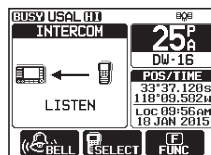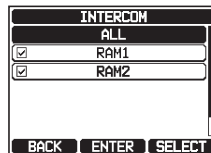


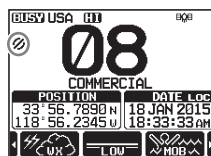
7.12.2 Calling

Pressing the **[BELL]** soft key when in intercom mode on either the radio or **RAM4** microphone will produce a calling beep to the other station.

7.13 VOICE SCRAMBLER

The voice scrambler function for the 4-code type (**CVS2500A** compatible) or the 32-code type (**FVP-42** compatible for Furuno Electric FM-4721) is available by configuring optional settings (For details, consult your dealer). Refer to the section “**16.13 SCRAMBLER SETUP**” to program the voice scrambler.

1. Select a channel that was programmed for scrambler mode (the “” icon will appear on the display).
2. Monitor the channel before transmitting.
3. Transmit the voice message. The signal sent will be scrambled.






7.14 DEMO MODE

This mode is used by Standard Horizon sales persons and dealers to demonstrate radio, DSC and AIS functions. Demo mode allows latitude, longitude and time to be entered to simulate radio displays. When the demo mode is enabled, the radio display will automatically switch from the NORMAL, COMPASS, WAYPOINT, AIS and GM displays.


NOTE

When demo mode is enabled and the radio is turned off and back on the radio will still be in the demo mode.


1. Press the **MENU** key to display "MENU".
2. Rotate the **DIAL/ENT** knob to select "SETUP", then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select "ABOUT...", then press the **[SELECT]** soft key
4. Rotate the **DIAL/ENT** knob to select "DEMO OPERATION", then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select "DEMO POSITION INPUT", then press the **[SELECT]** soft key.
6. Enter the latitude/longitude of your vessel and your local UTC time in the 24-hour notation by the **DIAL/ENT** knob. Rotate the **DIAL/ENT** knob to select the number and press the **[SELECT]** soft key to move the cursor to the next character.
7. If a mistake was made entering in the latitude/longitude of your vessel and your local UTC time, rotate the **DIAL/ENT** knob to select "←" or "→", press the **[SELECT]** soft key until the wrong character is selected, then perform step 6.
8. To store the data entered, press the **[FINISH]** soft key.

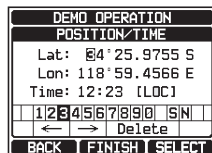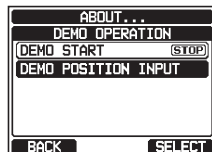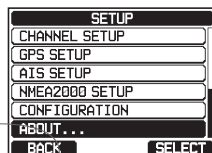

9. Rotate the **DIAL/ENT** knob to select “DEMO START”, then press the **[SELECT]** soft key.

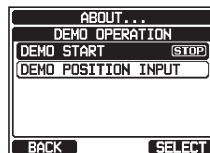

10. Rotate the **DIAL/ENT** knob to select “START”, then press the **[SELECT]** soft key.

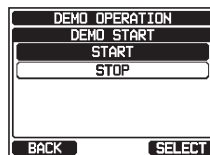

NOTE

To stop the demo mode, select “STOP” in step 10 above.

7.15 OPERATION MENU

The **GX6500E/GX6000E** provides advanced features below, via the “MENU” screen displayed by pressing the **MENU** key on the front panel.



Rotate the **DIAL/ENT** knob to select the desired function, then press the **[SELECT]** soft key.

DSC CALL

The following seven types of DSC (Digital Selective Calling) are available: Individual, Group, All Ships, Position Request, Position Report, Polling, and Auto Position Polling.

This menu also provides convenient functions for DSC.

For details, refer to section “**10 DIGITAL SELECTIVE CALLING (DSC)**”.

GM

The GM (Group Monitor) feature performs group polling and position display of the group members at the same time.

For details, refer to section “**12 GM OPERATION**”.

AIS

The ships with the AIS (Automatic Identification System) function can be displayed using a radar chart.

For details, refer to section “**13 AUTOMATIC IDENTIFICATION SYSTEM (AIS)**”.

GPS

Your current location, course, and speed can be displayed in a numerical or compass style. You can also check the position and signal strength of captured GPS satellites.

For details, refer to section “**9 GPS OPERATION**”.

NAVI

You can start navigation to a memorized or temporarily input waypoint.

For details, refer to section “**11 NAVIGATION**”.

PA/FOG

By connecting the optional HAIL/PA speaker to the transceiver, you can output sound such as microphone speech and foghorn sound through the HAIL/PA speaker.

For details, refer to section “**8.12 PA/FOG OPERATION**”.

IC

By connecting two optional **RAM4** Remote Station Microphones to the transceiver, the intercom function will become available, enabling you to talk with your fellow passengers using the connected **RAM4** Remote Station Microphones and the supplied microphone.

For details, refer to section “**8.13 INTERCOM OPERATION**”.

MMSI/POS INFO

Input your MMSI (Maritime Mobile Service Identity) before you use DSC.

For details, refer to section “**6.7.2 Maritime Mobile Service Identity (MMSI)**”.

SETUP

This menu allows certain aspects of your transceiver’s configuration to be customized for your personal operating conditions.

For details, refer to section “**15 CONFIGURATION SETUP**”.




8 GPS OPERATION

The **GX6500E/GX6000E** has the **SCU-31** external GPS antenna (option) to receive and display the position information. Your position information as well as received positions can be memorized and utilized later for navigation.

8.1 DISPLAYING POSITION INFORMATION



8.1.1 GPS Information Numerical Display

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “GPS”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS INFO”.
4. Press the **[ENTER]** soft key to display the numerical display.
5. Press the **CLEAR** key to return to radio operation.

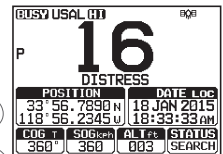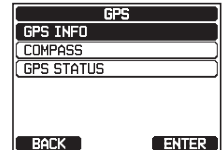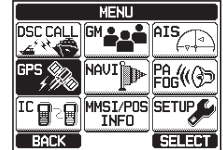



8.1.2 GPS Information Compass Display

1. Press the **MENU** key to display “MENU”.
 2. Rotate the **DIAL/ENT** knob to select “GPS”, then press the **[SELECT]** soft key.
 3. Rotate the **DIAL/ENT** knob to select “COMPASS”.
 4. Press the **[ENTER]** soft key to display the compass display.
 5. Press the **CLEAR** key to return to radio operation.
- Note:** Depending on the assignment of the soft keys you may switch the screen immediately from the basic display to the compass display by pressing the **[COMP]** soft key.

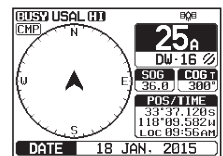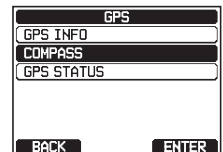

8.2 CHECKING GPS STATUS

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “GPS”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS STATUS”.
4. Press the **[ENTER]** soft key to display the GPS status currently being received.
5. Press the **CLEAR** key to return to radio operation.

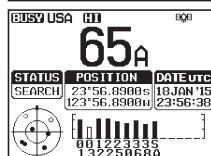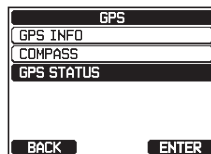


SVMB

8.3 GPS LOGGER OPERATION


The **GX6500E/GX6000E*** includes a logger for position information that allows you to record your location at regular intervals. (* The **GX6000** requires optional **SCU-31** GPS Receiver.)

1. Press the **[LOGGER]** soft key to turn the function on or off.

The recording starts and the display returns to the previous screen with the “” icon on the top of the display.

- You may change the log interval time of recording via the **SETUP** menu.

Note: To utilize the records, connect the **GX6500E/GX6000E** to a PC and download the log data from the radio by using the PC Programming Software. Refer to section “**20 CONNECTING A USB DATA TERMINAL TO THE PC**”.

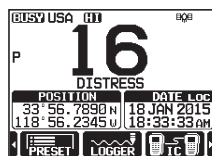

Logger operation alert:

- When the memory for log data becomes full, three beeps will sound and a warning message will be displayed. Afterwards the logger does not operate until the log data in the memory are erased.
- When the logger cannot record for some reason, three beeps will sound and a warning message will be displayed. Afterwards the logger does not operate anymore.
- An error message will be displayed when the radio cannot erase the log data in the memory during the operation following the alert of memory full (see above) or in the **SETUP** menu (Refer to section “**18.10.6 Log Erase**”).

9 DIGITAL SELECTIVE CALLING (DSC)


9.1 GENERAL

WARNING

This **GX6500E/GX6000E** is designed to generate a digital maritime distress and safety call to facilitate search and rescue. To be effective as a safety device, this equipment must be used only within communication range of a shore-based VHF marine channel 70 distress and safety watch system. The range of signal may vary but under normal conditions should be approximately 20 nautical miles.

NOTE

A DSC Warning sticker is included with the **GX6500E/GX6000E**. To comply with FCC regulations this sticker must be mounted in a location that can be easily viewed from the location of the **GX6500E/GX6000E**.

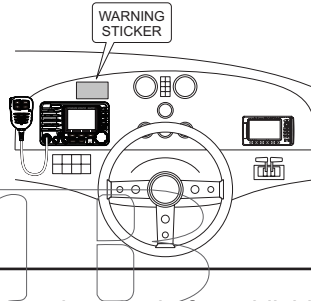

Digital Selective Calling (DSC) is a semi-automated method of establishing a radio call, it has been designated by the International Maritime Organization (IMO) as an international standard for establishing VHF, MF and HF radio calls. It has also been designated as part of the Global Maritime Distress and Safety System (GMDSS). It is planned that DSC will eventually replace aural watches on distress frequencies and will be used to announce routine and urgent maritime safety information broadcasts.

This system allows mariners to instantly send a distress call with GPS position (when connected to the transceiver) to the Coast Guard and other vessels within range of the transmission. DSC will also allow mariners to initiate or receive Distress, Urgency, Safety, Routine, Position Request, and Position Report, Automatic Position Polling, and Group calls to or from another vessel equipped with a DSC transceiver.

9.2 DSC DISTRESS ALERT

The **GX6500E/GX6000E** is capable of transmitting and receiving DSC distress messages to all DSC radios. Distress calls from the **GX6500E/GX6000E** include the latitude and longitude of the vessel when the external GPS unit is activated.

9.2.1 Transmitting a DSC Distress Alert

NOTE


To be able to transmit a DSC distress call an MMSI number must be programmed, refer to section “**6.7.2 Maritime Mobile Service Identity (MMSI)**”.

In order for your ships location to be transmitted, the external GPS must be able to receive a fix or a optional GPS antenna or chart plotter must be connected. Refer to section “**6.6.3 Accessory Cables and NMEA 0183 Cables**”


Basic Operation

1. Lift the red spring loaded DISTRESS cover, and press then press and hold the **DISTRESS** key for 3 seconds.


The radio display will count down (3-2-1) and then transmit the distress call. The backlight of the display and keypad flashes while the radios display is counting down.

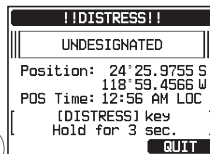


2. When the distress signal is sent, the transceiver watches for a transmission on CH70 until an acknowledgment signal is received.

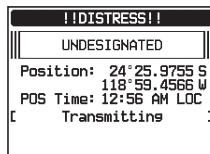

3. If no acknowledgment is received, the distress call is repeated in 4 minute intervals until a DSC acknowledgment is received.

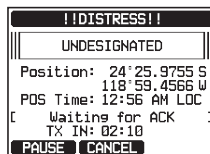

4. When a DSC distress acknowledgment is received, a distress alarm sounds and Channel 16 is automatically selected. The display shows the MMSI of the ship responding to your distress.

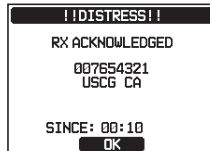

5. Press the microphone's PTT switch and state your name, vessel name, number of persons on board and the distress situation, then say “over” and wait for a reply from the acknowledging ship.


- To turn off the distress alarm before the radio retransmits the distress alert, press the **16/S** key or the **[QUIT]** soft key.

Transmitting a DSC Distress Alert with Nature of Distress



The **GX6500E/GX6000E** is capable of transmitting a DSC distress alert with the following “Nature of Distress” categories:

Undesignated, Fire/Explosion, Flooding, Collision, Grounding, Capsizing, Sinking, Adrift, Abandoning, Piracy, MOB.

- Press the **MENU** key to display “MENU”.
- Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “DIST ALERT MSG”, then press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)

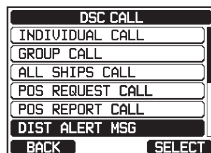

- Press the **[NATURE]** soft key. The “NATURE OF” menu will appear on the display.

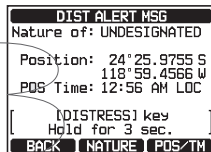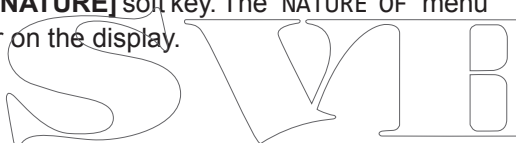


- Rotate the **DIAL/ENT** knob to select the desired nature of distress category, then press the **[SELECT]** soft key.
- Press and hold the **DISTRESS** key until a distress alert is transmitted.


Transmitting a DSC Distress Alert by Manually Inputting Location and Time

In case the **GX6500E/GX6000E** fails to get a GPS position fix, you may input your latitude and longitude, and time to transmit the distress alert.

- Press the **MENU** key to display “MENU”.
- Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “DIST ALERT MSG”, then press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)

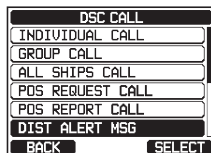


4. Press the **[POS/TM]** soft key.

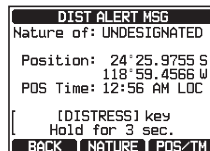

5. Rotate the **DIAL/ENT** knob to select the first number of latitude, then press the **[SELECT]** soft key to step to the next number.

6. Repeat step 5 to set the position and time.

If a mistake was made, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.

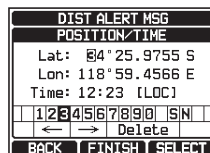

7. When finished programming the position and time, press the **[FINISH]** soft key. The display will return to the previous screen.


8. Press and hold the **DISTRESS** key until a distress alert is transmitted.

Pausing a DSC Distress Alert

After a DSC distress call is transmitted, the DSC distress call is repeated every 4 minutes until the call is canceled by the user or until the radio is turned off and on again. The **GX6500E/GX6000E** has the capability to suspend (pause) the retransmitting of the distress call by the procedure below.


1. After the distress call is transmitted, the radio will show the display as on the right.

Looking at this display you will notice “TX IN: 02:10”, this is the time when the radio will re-transmit the DSC distress call.

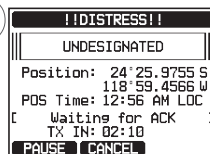

2. To suspend re-transmitting the DSC call, press the **[PAUSE]** soft key.





3. To resume counting down to transmit the DSC Distress call, press the **[RESUME]** soft key.

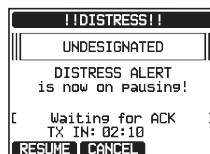

Canceling a DSC Distress Alert

If a DSC distress alert was sent by error the **GX6500E/GX6000E** allows you to send a message to other vessels to cancel the distress call that was made.



1. Press the **[CANCEL]** soft key, then press the **[YES]** soft key.
2. After the message for cancelling has been transmitted, press the **[OK]** soft key.
3. Press the **[FINISH]** soft key.
4. Press the **[QUIT]** soft key to return to radio operation.

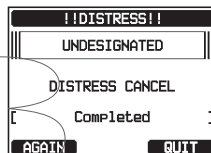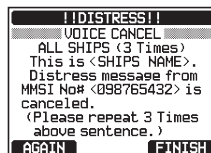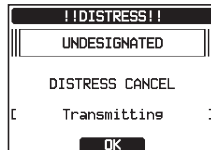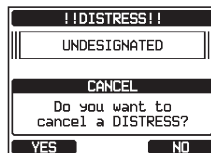

SVMB

9.2.2 Receiving a DSC Distress Alert

1. When a DSC distress call is received, an emergency alarm sounds.
2. Press any key to stop the alarm.

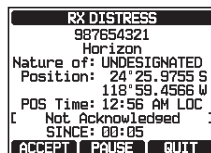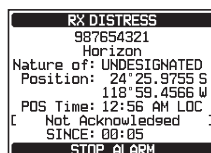

3. Rotate the **DIAL/ENT** knob several times to show information on the vessel in distress. On the display you will notice 3 soft key selections. These selections are described below:

[ACCEPT]: Press this key to accept the DSC distress call and to switch to Channel 16.

Note: If a key is not pressed for 30 seconds or longer the radio will automatically select Channel 16. (Timer setting time is set in “AUTO CHANNEL CHANGE” from “DSC SETUP”. The default setting is 30 sec.)




[PAUSE]: Press this key to temporarily disable automatic switching to Channel 16.

[QUIT]: Press this key to quit the automatic Channel 16 switching and revert to the last selected working channel.

- After accepting the call, press the **[TO WPT]** soft key to set the vessel in distress as a destination for navigation.

Note: You may change the waypoint name.

- Rotate the **DIAL/ENT** knob key to select “SAVE & GOTO”, then press the **[SELECT]** soft key to replace the display to the waypoint screen. The display indicates the distance and direction of the distressed vessel, and also the compass indicates the distressed vessel by dot (●).
- To stop navigating to a waypoint, press one of the soft keys, then press the **[STOP]** soft key. The radio is switched to the normal mode.

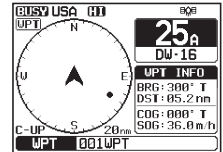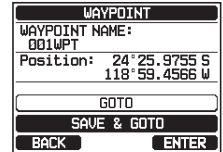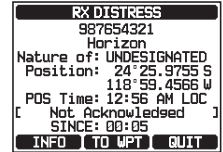

NOTE

- You must continue monitoring Channel 16 as a coast station may require assistance in the rescue attempt.
- When there is an unread distress alert, “✉” icon will appear on the display. You may review the unread distress alert from the DSC log, refer to the section “**10.11.2 Reviewing a Logged DSC RX Distress Call**”.
- Not all DSC radios can receive a DSC distress relay call.

9.3 ALL SHIPS CALL





The all ships call function allows contact to be established with DSC equipped vessels without having their MMSI in the individual calling directory. Also, priority for the call can be designated as “Safety” or “Urgency”.

SAFETY Call: This type of call is used to transmit boating safety information to other vessels. This message usually contains information about an overdue boat, debris in the water, loss of a navigation aid or an important meteorological message. This call is the same as saying “Securite, Securite, Securite”.

URGENCY Call: This type of call is used when a vessel may not truly be in distress, but have a potential problem that may lead to a distress situation. This call is the same as saying “PAN PAN, PAN PAN, PAN PAN” on Channel 16.

9.3.1 Transmitting an All Ships Call

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “All SHIPS CALL”, then press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)
4. Rotate the **DIAL/ENT** knob to select the nature of call (“SAFETY” or “URGENCY”), then press the **[SELECT]** soft key.
5. In the INTERSHIP CH list, rotate the **DIAL/ENT** knob to select the operating channel on which you want to communicate, then press the **[SELECT]** soft key. To select operating channels from all voice channels, press the **[MANUAL]** soft key.
6. Press the **[YES]** soft key to transmit the selected type of all ships call.

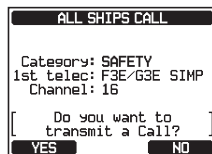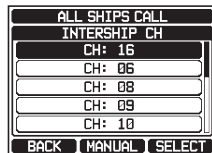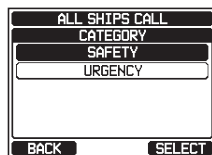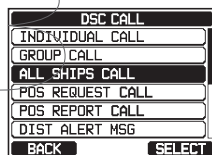


7. After the all ships call is transmitted, the transceiver will switch to the selected channel.
8. Listen to the channel to make sure it is not busy, then key the microphone and say “PAN PAN, PAN PAN, PAN PAN” or “Securite, Securite, Securite” depending on the priority of the call.
9. Press the **[QUIT]** soft key to exit the all ships call menu.



9.3.2 Receiving an All Ships Call

1. When an all ships call is received, an emergency alarm will sound.

The display shows the MMSI of the vessel transmitting the all ships call and the radio will change to the requested channel after 30 seconds (the default setting of “AUTO CHANNEL CHANGE”).

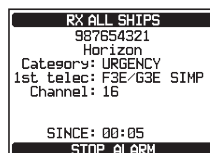

2. Press any key to stop the alarm.
3. Monitor the requested channel until the all ships voice communication is completed.

On the display you will notice 3 soft key selections. These selections are described below:



[ACCEPT]: Press this key to accept the DSC all ships call and to switch to requested channel.

Note: If a key is not pressed for 30 seconds or longer the radio will automatically change to the requested channel (the default setting of “AUTO CHANNEL CHANGE”).

[PAUSE]: Press this key to temporarily disable automatic switching to the requested channel.

Note: In some cases automatically switching to a requested channel might disrupt important ongoing communications. This feature allows commercial users to suspend channel switching and stay on the working channel selected before the all ships call was received.

[QUIT]: Press this key to quit the automatic channel switching and revert to the last selected working channel.

- Press the **[QUIT]** key to return to the channel display.



NOTE

When there is an unread all ships call, “✉” icon will appear on the display. You may review the unread all ships call from the DSC log, refer to the section “**10.11.2 Reviewing a Logged DSC RX Distress Call**”.

9.4 INDIVIDUAL CALL



This feature allows the **GX6500E/GX6000E** to contact another vessel with a DSC VHF radio and automatically switch the receiving radio to a desired communications channel. This feature is similar to calling a vessel on CH16 and requesting to go to another channel (switching to the channel is private between the two vessels). Up to 100 individual contacts may be programmed.

9.4.1 Setting up the Individual / Position Call Directory

The **GX6500E/GX6000E** has a DSC directory that allows you to store a vessel or person's name and the associated MMSI number you wish to contact via individual calls, auto polling, position request, position report, and polling transmissions.

To transmit an individual call you must program this directory with information of the persons you wish to call, similar to a cellular phones telephone directory.

- Press the **MENU** key to display “MENU”.
- Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “INDIVIDUAL DIRECTORY”, then press the **[SELECT]** soft key.

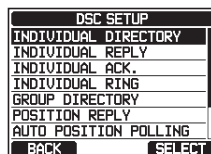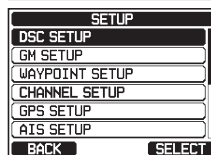

5. Rotate the **DIAL/ENT** knob to select “ADD”, then press the **[SELECT]** soft key.

DSC SETUP	
INDIVIDUAL DIRECTORY	
ADD	
EDIT	
DELETE	
BACK	SELECT

6. Rotate the **DIAL/ENT** knob to select “NAME:”, then press the **[SELECT]** soft key.

INDIVIDUAL DIRECTORY	
NAME:	
MMSI:	

BACK	SELECT

7. Rotate the **DIAL/ENT** knob to scroll through the first letter of the name of the vessel or person you want to reference in the directory.

INDIVIDUAL DIRECTORY														
NAME														
S														

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
P	Q	R	S	T	U	V	W	X	Y	Z	*	/	*	*
1	2	3	4	5	6	7	8	9	0	:	&	.	.	.
[]	a	←		→		Delete								
BACK	FINISH	SELECT												

8. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.

9. Repeat steps 7 and 8 until the name is complete. The name can consist of up to fifteen characters, and if you do not use all fifteen characters, select “→” to move to the next space. This method can also be used to enter a blank space in the name.

If a mistake was made entering in the name, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform steps 7 and 8.

10. When finished entering the name (using fifteen characters or less), press the **[FINISH]** soft key to advance to the MMSI number entry.

11. Rotate the **DIAL/ENT** knob to select “MMSI:”, then press the **[SELECT]** soft key.

12. Rotate the **DIAL/ENT** knob to scroll through numbers, 0-9. To enter the desired number and move one space to the right by pressing the **[SELECT]** soft key. Repeat this procedure until all nine space of the MMSI number are entered.

If a mistake was made entering in the MMSI number, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 12.

13. When finished entering the MMSI number, press the **[FINISH]** soft key.

14. To store the entered data, rotate the **DIAL/ENT** knob to select “SAVE”, then press the **[SELECT]** soft key.

INDIVIDUAL DIRECTORY	
NAME:	
STANDARD	
MMSI:	
987654321	
SAVE	
BACK	SELECT




15. To enter another individual address, repeat steps 5 through 14.

16. Press the **CLEAR** key to return to radio operation.

9.4.2 Setting up the Individual Call Reply

This menu item sets up the radio to automatically (default setting) or manually respond to a DSC individual call requesting you to switch to a working channel for voice communications. When “Manual” is selected the MMSI of the calling vessel is shown allowing you to see who is calling. This function is similar to caller id on a cellular phone.


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “INDIVIDUAL REPLY”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “AUTO” or “MANUAL”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

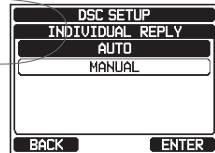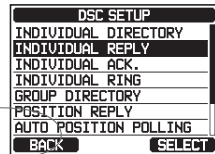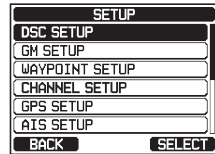



9.4.3 Enabling the Individual Call Acknowledgment

The radio can select either reply message “Able” (default) or “Unable” when the individual reply setting (described in the previous section) is set to “AUTOMATIC”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.

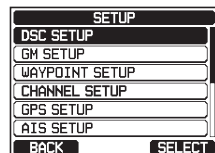

4. Rotate the **DIAL/ENT** knob to select “INDIVIDUAL ACK.”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “ABLE” or “UNABLE”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

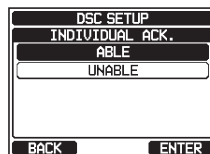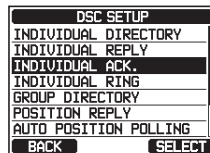

9.4.4 Transmitting an Individual Call

This feature allows the user to contact another vessel with a DSC radio. This feature is similar to calling a vessel on CH16 and requesting to go to another channel.

Individual Call using the Individual/Position Directory


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.




3. Rotate the **DIAL/ENT** knob to select “INDIVIDUAL CALL”, then press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)




4. Rotate the **DIAL/ENT** knob to select “HISTORY” or “MEMORY”, then press the **[SELECT]** soft key.

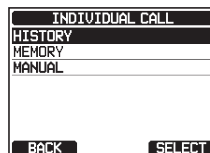


5. Rotate the **DIAL/ENT** knob to select an individual you want to contact, press the **[SELECT]** soft key.

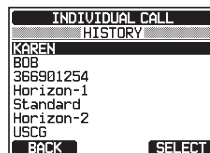


6. In the INTERSHIP CH list, rotate the **DIAL/ENT** knob to select the operating channel on which you want to communicate, then press the **[SELECT]** soft key. To select operating channels from all voice channels, press the **[MANUAL]** soft key.

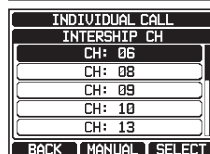


7. Press the **[YES]** soft key to transmit the individual DSC signal.

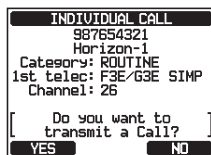

8. When an individual call acknowledgment is received, the established channel is automatically changed to the channel which is selected on step 6 above and a ringing tone sounds.

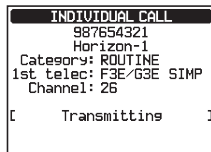

9. Press the **[QUIT]** soft key to listen to the channel to make sure it is not busy, then press the microphone's **PTT** switch and talk into the microphone to the other vessel.

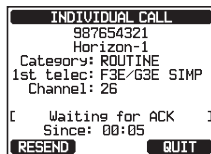

Individual Call by Manually Entering a MMSI


You may enter an MMSI number manually to contact without storing it in the individual directory.

1. Press the **MENU** key to display "MENU".


2. Rotate the **DIAL/ENT** knob to select "DSC CALL", then press the **[SELECT]** soft key.



3. Rotate the **DIAL/ENT** knob to select "INDIVIDUAL CALL", then press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)

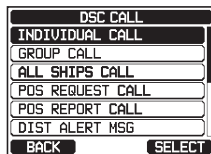


4. Rotate the **DIAL/ENT** knob to select "MANUAL", then press the **[SELECT]** soft key.



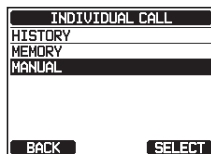


5. Rotate the **DIAL/ENT** knob to select the first number of the MMSI which you want to contact, then press the **[SELECT]** soft key to step to the next number.

6. Repeat step 5 to set the MMSI number (nine digits). If a mistake was made entering in the MMSI number, rotate the **DIAL/ENT** knob to select "←" or "→", press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.

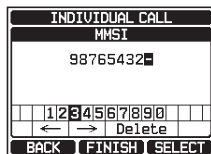

7. When finished entering the MMSI number, press the **[FINISH]** soft key.
8. In the INTERSHIP CH list, rotate the **DIAL/ENT** knob to select the operating channel on which you want to communicate, then press the **[SELECT]** soft key. To select operating channels from all voice channels, press the **[MANUAL]** soft key.
9. Press the **[YES]** soft key to transmit the individual DSC signal.
10. When an individual call acknowledgment is received, the established channel is automatically changed to the channel which is selected on step 8 above and a ringing tone sounds.
11. Press the **[QUIT]** soft key to listen to the channel to make sure it is not busy, then press the microphone's **PTT** switch and talk into the microphone to the other vessel.

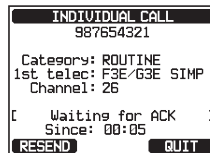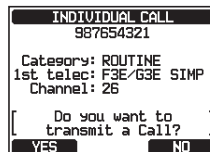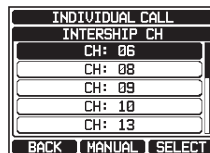


9.4.5 Receiving an Individual Call


When an individual DSC call is received, the radio will automatically respond (default setting) to the calling ship, and switch to the requested channel for voice communications. Refer to section “**10.4.2 Setting up the Individual Call Reply**” to change the reply to manual if you want to see who is calling before replying to the call.

Automatic reply:

1. When an individual call is received, an individual call ringing alarm sounds.
The radio automatically switches to the requested channel. The display shows the MMSI of the vessel calling.
2. Press any key to stop the alarm.
3. Monitor the requested channel until the message is completed.
Press the microphone's **PTT** switch and talk into the microphone to the called vessel.

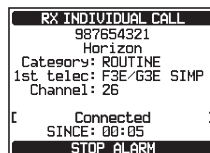

- Press the **[QUIT]** soft key to return to radio operation.

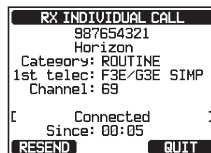

Manual reply:

- When an individual call is received, an individual call ringing alarm sounds. The display shows the MMSI of the vessel transmitting the individual call.
- Press any key to stop the alarm.
- On the display you will notice 3 soft key selections. These selections are described below:

[ACCEPT]: Press this key to accept the DSC individual call and to switch to requested channel.



[PAUSE]: Press this key to temporarily disable automatic switching to the requested channel.

Note: In some cases automatically switching to a requested channel might disrupt important ongoing communications. This feature allows commercial users to suspend channel switching and stay on the working channel selected before the individual call was received.

[QUIT]: Press this key to quit the automatic channel switching and revert to the last selected working channel.

Note: If a key is not pressed for 30 seconds or longer the radio will automatically change to radio operation.

- After accepting the call, press the **[ABLE]** soft key to switch to the requested channel. (To inform that you cannot respond, press the **[UNABLE]** soft key.)

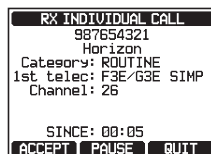
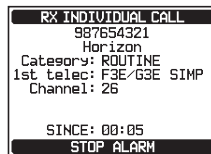


- Press the **[YES]** soft key to send an acknowledgement.


Press the **[CHG CH]** soft key to change the channel for communication from the requested one.

- Monitor the requested or specified channel until the message is completed.

Press the microphone's **PTT** switch and talk into the microphone to the called vessel.

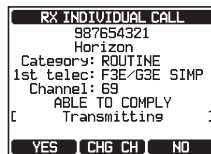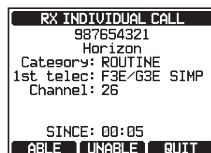

- Press the **[QUIT]** soft key to return to the channel display.

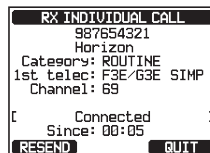




NOTE

When there is an unread individual call, “✉” icon will appear on the display. You may review the unread individual call from the DSC log, refer to the section “**10.11.2 Reviewing a Logged DSC RX Distress Call**”.

9.4.6 Setting up the Individual Call Ringer





When an individual call is received the radio’s default setting will produce a ringing sound for 2 minutes. This selection allows the individual call ringer time to be changed.

- Press the **MENU** key to display “MENU”.
- Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “INDIVIDUAL RING”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select ringing time of individual calls.
- Press the **[ENTER]** soft key to store the selected setting.
- Press the **CLEAR** key to return to radio operation.

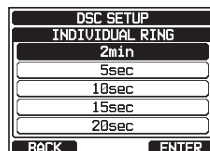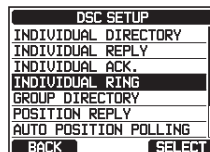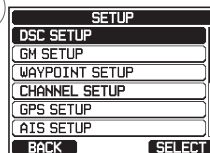

The **GX6500E/GX6000E** has the capability to turn off the individual call ringer.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “DSC BEEP”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “INDIVIDUAL CALL”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select “OFF”.
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLEAR** key to return to radio operation.

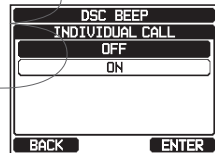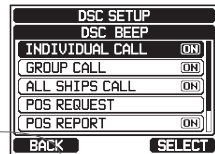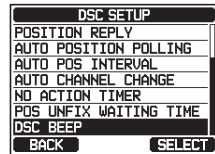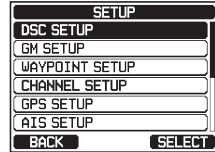

To re-enable the ringer tone, repeat the above procedure, rotating the **DIAL/ENT** knob to select “ON” in step 6 above.

9.5 GROUP CALL

This feature allows the user to contact a group of specific vessels (e.g. members of a yacht club) using DSC radios with the group call function to automatically switch to a desired channel for voice communications. This function is very useful for yacht clubs and vessels traveling together that want to collectively make announcements on a predetermined channel. Up to 32 group MMSIs may be programmed.

9.5.1 Setting up a Group Call

For this function to operate, the same group MMSI (Maritime Mobile Service Identity Number) must be programmed into all the DSC VHF radios within the group of vessels that will be using this feature. To understand Group MMSI programming, first a ship MMSI has to be understood.

Ship MMSI: The first three digits called MID (Mobile Identity Group) of a ship MMSI denote the country where the ship's MMSI is registered. The last 6 digits are specific to the ships ID.


Ship MMSI Example: If your MMSI is "366123456", "366" is MID which denote the country and "123456" is your ships MMSI.

Group MMSI:


- Group MMSI numbers are not assigned by the FCC or other organizations licensed to assign ship MMSI numbers.
 - The first digit of a group MMSI is always set to "0" by International rules. All Standard Horizon radios are preset so when programming a group MMSI the first digit is set to "0".
 - The USCG recommends programming the MID of a ship MMSI into the Second, Third and Fourth digits of the group MMSI as it denotes the area the ship is located in.
 - The last 5 digits are decided upon by persons in the group. This is an important step as all radios in the group must contain the same group MMSI so they can be contacted by each other. There is a chance that another group of vessels may program in the same group MMSI. If this happens, simply change one or more of the last 5 digits of the group MMSI.
1. Press the **MENU** key to display "MENU".
 2. Rotate the **DIAL/ENT** knob to select "SETUP", then press the **[SELECT]** soft key.




3. Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.

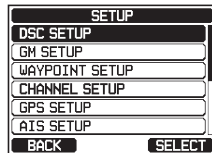


4. Rotate the **DIAL/ENT** knob to select “GROUP DIRECTORY”, then press the **[SELECT]** soft key.

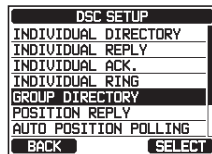

5. Rotate the **DIAL/ENT** knob to select “ADD”, then press the **[SELECT]** soft key.

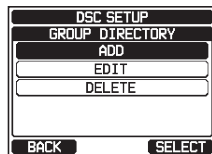

6. Rotate the **DIAL/ENT** knob to select “GROUP NAME:”, then press the **[SELECT]** soft key.

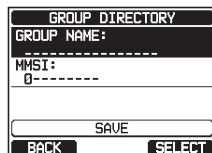

7. Rotate the **DIAL/ENT** knob to scroll through the first letter of the name of the group you want to reference in the directory.




8. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.

9. Repeat steps 7 and 8 until the name is complete. The name can consist of up to fifteen characters, if you do not use all eleven characters, select “→” to move to the next space. This method can also be used to enter a blank space in the name.

If a mistake was made entering in the name, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform steps 7 and 8.

10. When finished entering the group name (using fifteen characters or less), press the **[FINISH]** soft key to advance to the group MMSI number entry.

11. Rotate the **DIAL/ENT** knob to select “MMSI:”, then press the **[SELECT]** soft key.
12. Rotate the **DIAL/ENT** knob to select the second number of the MMSI (nine digits: first digit permanently set to “0”) which you want to contact, then press the **[SELECT]** soft key to step to the next number. Repeat this procedure until all eight spaces of the MMSI number are entered.

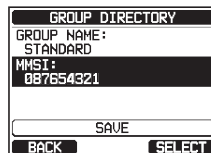



If a mistake was made entering in the MMSI number, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 12.

13. When finished entering the MMSI number, press the **[FINISH]** soft key to confirm.
14. To store the data, select “SAVE”, then press the **[SELECT]** soft key.
15. To enter another group address, repeat steps 5 through 14.
16. Press the **CLEAR** key to return to radio operation.


9.5.2 Transmitting a Group Call

Group Call using the Group Directory

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GROUP CALL”, then press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)
4. Rotate the **DIAL/ENT** knob to select “HISTORY” or “MEMORY”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select a group you want to contact, then press the **[SELECT]** soft key

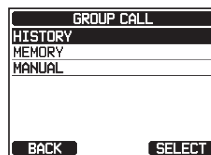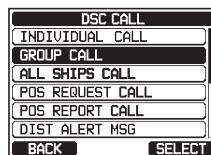



- In the INTERSHIP CH list, rotate the **DIAL/ENT** knob to select the operating channel on which you want to communicate, then press the **[SELECT]** soft key. To select operating channels from all voice channels, press the **[MANUAL]** soft key.
- Press the **[YES]** soft key to transmit the group call signal.
- When the group call signal is sent, the display will be as shown in the illustration at the right.
- After the group call is transmitted, all the radios in the group will switch to the designated channel.
- Listen to the channel to make sure it is not busy, then press the microphone's **PTT** switch and call the other vessel you desire to communicate with.

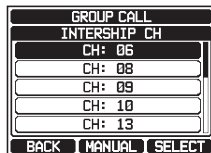

Group Call by Manually Entering an MMSI

This feature allows you to contact a group of vessels by entering in their group MMSI manually.

- Press the **MENU** key to display "MENU".
- Rotate the **DIAL/ENT** knob to select "DSC CALL", then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select "GROUP CALL", then press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)
- Rotate the **DIAL/ENT** knob to select "MANUAL", then press the **[SELECT]** soft key.

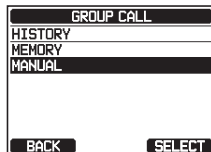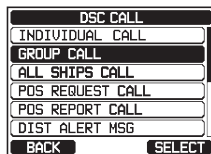

- Rotate the **DIAL/ENT** knob to select the first number of the MMSI (nine digits: first digit permanently set to “0”) which you want to contact, then press the **[SELECT]** soft key to step to the next number.




- Repeat step 5 to set the MMSI number.

If a mistake was made entering in the MMSI number, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.

- When finished entering the MMSI number, press the **[FINISH]** soft key.


- In the INTERSHIP CH list, rotate the **DIAL/ENT** knob to select the operating channel on which you want to communicate, then press the **[SELECT]** soft key. To select operating channels from all voice channels, press the **[MANUAL]** soft key.

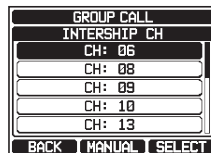

- Press the **[YES]** soft key to transmit the group call signal.



- After the group call is transmitted, all the radios in the group will switch to the designated channel.

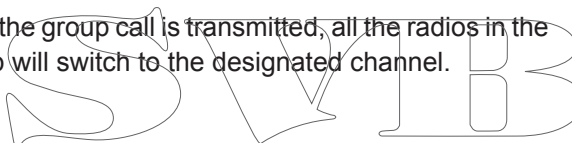

- Listen to the channel to make sure it is not busy, then press the microphone’s **PTT** switch and talk into the microphone to the group of vessels.



9.5.3 Receiving a Group Call

1. When a group call is received, the **GX6500E/ GX6000E** will produce a ringing alarm sound.
2. The display shows the group MMSI number.
3. Press any key to stop the alarm.
4. Monitor the channel for the person calling the group for a message.

On the display you will notice 3 soft key selections. These selections are described below:

[ACCEPT]: Press this key to accept the group call and to switch to requested channel.

[PAUSE]: Press this key to temporarily disable automatic switching to the requested channel.

[QUIT]: Press this key to quit the automatic channel switching and revert to the last selected working channel.

5. If you want to respond, monitor the channel to make sure it is clear, then press the microphone's **PTT** switch and talk into the microphone to the group of vessels.
6. Press the **[QUIT]** soft key to return to radio operation.

Note: If a key is not pressed for 30 seconds or longer the radio will automatically change to radio operation.

```
RX GROUP CALL
098765432
Horizon-GP
Category: ROUTINE
1st telec: F3E/G3E SIMP
Channel: 26
Caller: 987654321
Horizon
SINCE: 00:05
STOP ALARM
```

```
RX GROUP CALL
098765432
Horizon-GP
Category: ROUTINE
1st telec: F3E/G3E SIMP
Channel: 26
Caller: 987654321
Horizon
SINCE: 00:05
ACCEPT PAUSE QUIT
```

```
RX GROUP CALL
098765432
Horizon-GP
Category: ROUTINE
1st telec: F3E/G3E SIMP
Channel: 26
Caller: 987654321
Horizon
SINCE: 00:05
QUIT
```





NOTE

When there is an unread group call, "✉" icon will appear on the display. You may review the unread group call from the DSC log, refer to the section "**10.11.3 Reviewing Other Logged Calls**".

9.5.4 Setting up the Group Call Ringer

The **GX6500E/GX6000E** has the capability to turn off the group call ringer.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “DSC BEEP”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “GROUP CALL”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select “OFF”.
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLEAR** key to return to radio operation.

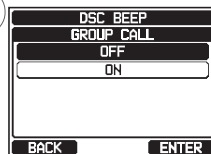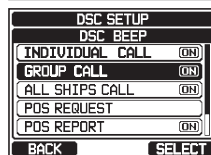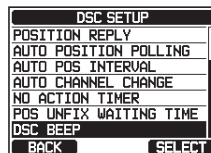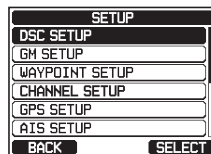

To re-enable the ringer tone, repeat the above procedure, rotating the **DIAL/ENT** knob to select “ON” in step 6 above.

9.6 POSITION REQUEST

Advancements in DSC have made it possible to poll the location of another vessel and show the position of that vessel on the display of the **GX6500E/GX6000E**. Standard Horizon has taken this feature one step further, if any compatible GPS chart plotter is connected to the **GX6500E/GX6000E**, the polled position of the vessel is shown on the display of the GPS chart plotter making it easy to navigate to the location of the polled vessel. This is a great feature for anyone wanting to know the position of another vessel. For example your buddy that is catching fish, or finding the location of a person you are cruising with.



NOTE

The other vessel must have an operating GPS receiver connected to its DSC radio and must not have its radio set not to deny position requests. (Refer the section “**10.4 INDIVIDUAL CALL**” to enter information into the individual directory).


9.6.1 Setting up a Position Request Reply

The **GX6500E/GX6000E** can be set up to automatically (default setting) or manually send your position when requested by another vessel. This selection is important if you are concerned about someone polling the position of your vessel that you may not want to. In the manual mode you will see the MMSI (Maritime Mobile Service Identity Number) or persons name shown on the display allowing you to choose to send your position to the requesting vessel.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “POSITION REPLY”, then press the **[SELECT]** soft key.

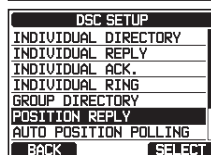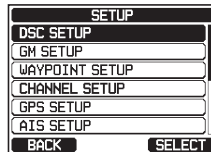

5. Rotate the **DIAL/ENT** knob to select “AUTO” or “MANUAL”. In “AUTO” mode, after a DSC POS request is received, the radio will automatically transmit your vessel’s position. In “MANUAL” mode, the display of the **GX6500E/GX6000E** will show who is requesting the position and the **[YES]** soft key on radio has to be pressed to send your position to the requesting vessel.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

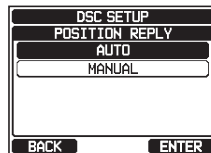

9.6.2 Transmitting a Position Request to Another Vessel


Position Request using the Individual/Position Directory

Refer to section “10.4 INDIVIDUAL CALL” to enter information into the individual directory.


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.




3. Rotate the **DIAL/ENT** knob to select “POS REQUEST CALL”, then press the **[SELECT]** soft key.

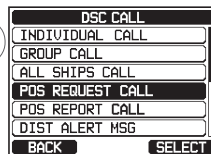

4. Rotate the **DIAL/ENT** knob to select “HISTORY” or “MEMORY”, then press the **[SELECT]** soft key.

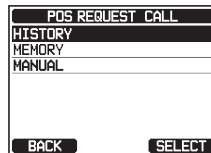

5. Rotate the **DIAL/ENT** knob to select a name that was stored in the individual/position directory.

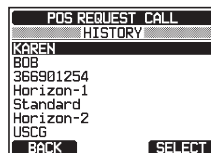

6. Press the **[SELECT]** soft key, then press the **[YES]** soft key to transmit the position request DSC call.
7. When the **GX6500E/GX6000E** receives the position from the polled vessel it is shown on the radio display.



- Press the **[QUIT]** soft key to return to radio operation.



NOTE

If the **GX6500E/GX6000E** does not receive position data from the polled vessel, the display will show "NO POSITION DATA".


Position Request by Manually Entering an MMSI

This feature allows you to request the position of a vessel by manually entering the MMSI.


- Press the **MENU** key to display "MENU".
- Rotate the **DIAL/ENT** knob to select "DSC CALL", then press the **[SELECT]** soft key



- Rotate the **DIAL/ENT** knob to select "POS REQUEST CALL", then press the **[SELECT]** soft key.

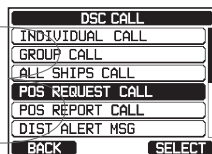

- Rotate the **DIAL/ENT** knob to select "MANUAL", then press the **[SELECT]** soft key.

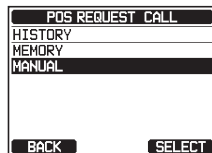

- Rotate the **DIAL/ENT** knob to select the first number of the MMSI (nine digits) which you want to contact, then press the **[SELECT]** soft key to step to the next number.



- Repeat step 5 to set the MMSI number.
If a mistake was made entering in the MMSI number, rotate the **DIAL/ENT** knob to select "←" or "→", press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.
- When finished entering the MMSI number, press the **[FINISH]** soft key.

8. Press the **[YES]** soft key to transmit the position request DSC call.
9. When the **GX6500E/GX6000E** receives the position from the polled vessel it is shown on the radio display.
10. Press the **[QUIT]** soft key to return to radio operation.



NOTE

The received position from the polled vessel can be transferred to a GPS chart plotter via NMEA DSC and DSE sentences.

9.6.3 Receiving a Position Request

1. When a position request call is received from another vessel, a ringing sound will be produced, and the display will be as shown in the illustration at the right.
2. Press any key to stop the alarm.
3. To send your vessel's position to the requesting vessel, press the **[REPLY]** soft key. Or to exit from position request display, press the **[QUIT]** soft key.
4. Press the **[QUIT]** soft key to return to the channel display.



NOTE

When there is an unread position request call, "✉" icon will appear on the display. You may review the unread individual call from the DSC log, refer to the section "10.11.3 Reviewing Other Logged Calls".


9.6.4 Manual Input of Position Information

If the **GX6500E/GX6000E** is located in an area where GPS reception is limited when you are going to reply to the received position request, you may manually input your location (latitude and longitude) and time to be sent.


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “MMSI/POS INFO”, then press the **[SELECT]** soft key.




3. Press the **[POS/TM]** soft key.

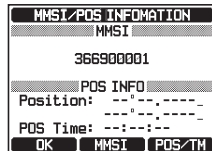

4. Rotate the **DIAL/ENT** knob to select the first number of latitude, then press the **[SELECT]** soft key to step to the next number.
5. Repeat step 4 to set the position and time.

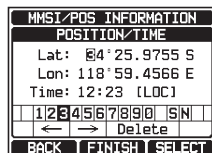





- If a mistake was made, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 4.
6. When finished programming the position and time, press the **[FINISH]** soft key. The display will return to the previous screen.
 7. Press the **[OK]** soft key.
 8. Press the **CLEAR** key to return to radio operation.

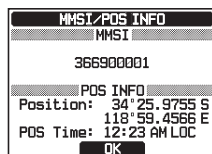

9.6.5 Setting up a Position Request Ringer

The **GX6500E/GX6000E** has the capability to turn off the position request ringer.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob “DSC BEEP”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “POS REQUEST”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select “OFF”.
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLEAR** key to return to radio operation.

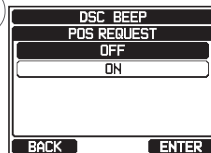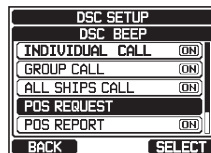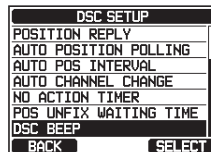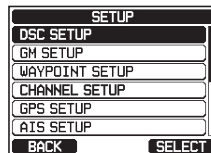

To re-enable the ringer tone, repeat the above procedure, rotating the **DIAL/ENT** knob to select “ON” in step 6 above.

9.7 POSITION REPORT

The feature is similar to position request, however instead of requesting a position of another vessel this function allows you to send your position to another vessel.

9.7.1 Transmitting a DSC Position Report Call


DSC Position Report Call using the Individual/Position Directory

Refer to section “10.4 INDIVIDUAL CALL” to enter information into the individual directory.



1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.




3. Rotate the **DIAL/ENT** knob to select “POS REPORT CALL”, then press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)

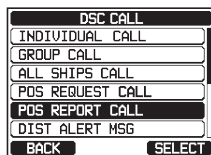


4. Rotate the **DIAL/ENT** knob to select “HISTORY” or “MEMORY”, then press the **[SELECT]** soft key.

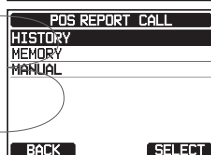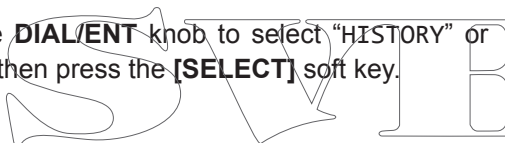


5. Rotate the **DIAL/ENT** knob to select the name in the directory, then press the **[SELECT]** soft key.

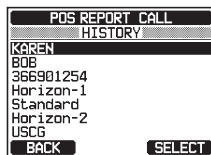

6. If you want to change the position displayed, press the **[POS/TM]** soft key to go to the position information input screen. After inputting new position information, press the **[FINISH]** soft key to confirm.

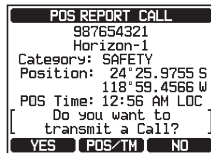






7. Press the **[YES]** soft key to send your position to the selected vessel.
8. Press the **[QUIT]** soft key to return to radio operation.

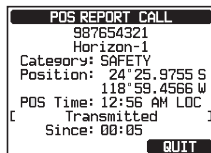

DSC Position Report Call by Manually Entering an MMSI

This feature allows you to send your position to another vessel by manually entering the MMSI of the ship you want to send your position to.

1. Press the **MENU** key to display "MENU".
2. Rotate the **DIAL/ENT** knob to select "DSC CALL", then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select "POS REPORT CALL", then press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)
4. Rotate the **DIAL/ENT** knob to select "MANUAL", then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the first number of the MMSI which you want to contact, then press the **[SELECT]** soft key to step to the next number.
6. Repeat step 5 to set the MMSI number.
If a mistake was made entering in the MMSI number, rotate the **DIAL/ENT** knob to select "←" or "→", press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.
7. When finished entering the MMSI number, press the **[FINISH]** soft key.
8. If you want to change the position displayed, press the **[POS/TM]** soft key to go to the position information input screen. After inputting new position information, press the **[FINISH]** soft key to confirm.
9. Press the **[YES]** soft key to send your position to the selected vessel.
10. Press the **[QUIT]** soft key to return to radio operation.

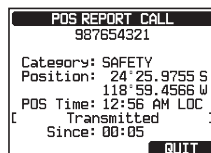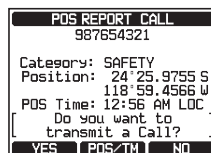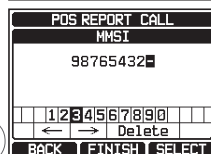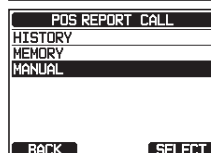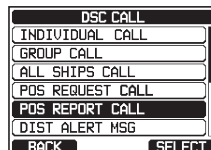

9.7.2 Receiving a DSC Position Report Call

When another vessel transmits their vessels location to the **GX6500E/GX6000E** the following will happen:

1. When a position report call is received from another vessel, a ringing sound will be produced.
2. Press any key to stop ringing.
3. Press the **[INFO]** soft key to see more detailed position information of the station.
4. To exit to radio mode, press the **[QUIT]** soft key.

```
RX POS REPORT
987654321
Horizon
Category: SAFETY
1st telec: SHIP POSITION
Position: 24°25.9755 S
118°59.4566 W
POS Time: 12:56 AM LOC
SINCE: 00:05
STOP ALARM
```

```
RX POS REPORT
987654321
Horizon
Category: SAFETY
1st telec: SHIP POSITION
Position: 24°25.9755 S
118°59.4566 W
POS Time: 12:56 AM LOC
SINCE: 00:05
SAVE INFO QUIT
```

```
RX POS REPORT
POS INFO
987654321
Horizon
Position: 24°25.9755 S
118°59.4566 W
POS Time: 12:56 AM LOC
DST: 10.2 nm
BRG: 006° T
BACK WPT QUIT
```

9.7.3 Navigating to the Reported Position

The **GX6500E/GX6000E** has a feature that allows you to navigate to a received position report call by using the compass display. Navigating to the position of a position report call may be enabled by the procedure below.

1. After the position report call has been received, press the **[INFO]** soft key.
2. Press the **[WPT]** soft key.
3. The display indicates the distance and direction of the received vessel, and also the compass indicates the received vessel with a dot (●).


```
RX POS REPORT
987654321
Horizon
Category: SAFETY
1st telec: SHIP POSITION
Position: 24°25.9755 S
118°59.4566 W
POS Time: 12:56 AM LOC
SINCE: 00:05
SAVE INFO QUIT
```

```
RX POS REPORT
POS INFO
987654321
Horizon
Position: 24°25.9755 S
118°59.4566 W
POS Time: 12:56 AM LOC
DST: 10.2 nm
BRG: 006° T
BACK WPT QUIT
```

```
USA (H) 090
WPT 25.0
DU-16
WPT INFO
BRG: 006° T
DST: 10.2 nm
COG: 000° T
SOG: 36.0 (m/h)
WPT Horizon
```

Stopping Navigation to the Reported Position





1. Press one of the soft keys to show the key selections.
2. Press the **[STOP]** soft key. The radio will stop navigating to the waypoint and the normal VHF display will be shown.

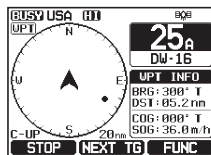

9.7.4 Saving the Reported Position as a Waypoint

The **GX6500E/GX6000E** can save a position report call in the radio's memory as a waypoint.

1. After the position report call has been received, press the **[SAVE]** soft key.
2. If you want to change the name of the waypoint, rotate the **DIAL/ENT** knob to select "NAME", then press the **[SELECT]** soft key.
3. Enter the name of the waypoint you want to reference in the directory. For details, refer to **"10.4.1 Setting up the Individual / Position Call Directory"**.
4. Rotate the **DIAL/ENT** knob to select "SAVE", then press the **[SELECT]** soft key to save the waypoint into memory.
5. Press the **[OK]** soft key to return to the position report display.

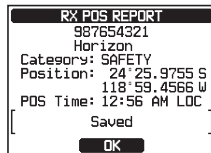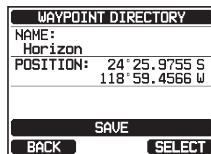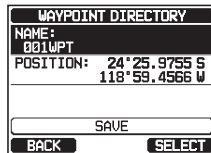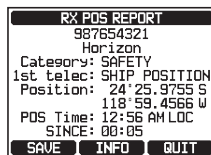





Navigating to a Saved Waypoint

Refer to section **"11.1.1 Starting and Stopping Navigation"** for details.

9.7.5 Setting up a Position Report Ringer

The **GX6500E/GX6000E** has the capability to turn off the position report ringer.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “DSC BEEP”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “POS REPORT”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select “OFF”.
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLEAR** key to return to radio operation.

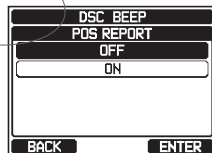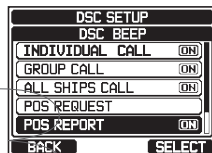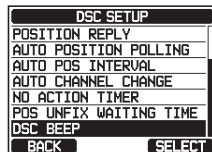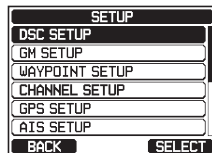

To re-enable the ringer tone, repeat the above procedure, rotating the **DIAL/ENT** knob to select “ON” in the step 6 above.







9.8 POLLING CALL

The **GX6500E/GX6000E** has the capability to track another vessel.

9.8.1 Transmitting a Polling Call to a Vessel

Polling Call using the Individual/Position Call Directory







1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “POLLING CALL”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “HISTORY” or “MEMORY”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select a name that was stored in the individual/position call directory, then press the **[SELECT]** soft key.
6. Press the **[YES]** soft key to transmit the polling call.
7. After a polling call is transmitted, if the reply signal is not received, “waiting for ACK” is shown on the display which means the **GX6500E/GX6000E** is waiting for the vessel you called to send an acknowledgement.
8. To transmit the call again, press the **[RESEND]** soft key.
9. Press the **[QUIT]** soft key to return to radio operation.

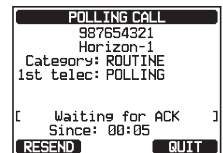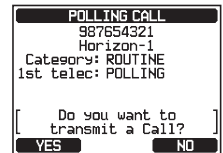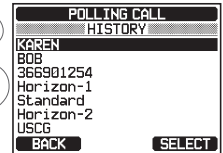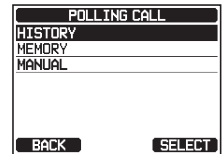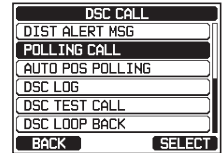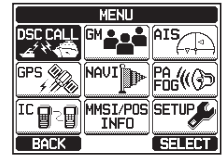

Polling Call by Manually Entering an MMSI

This feature allows you to contact a vessel by manually entering the MMSI of the ship you want to track.


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “POLLING CALL”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “MANUAL”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the first number in the MMSI and press the **[SELECT]** soft key.
6. Repeat step 5 until all the digits of the MMSI are shown on the display.
7. If a mistake was made entering in the MMSI number, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.
8. When finished entering the MMSI number, press the **[FINISH]** soft key.
9. Press the **[YES]** soft key to transmit the polling call.
10. Press the **[QUIT]** soft key to return to radio operation.

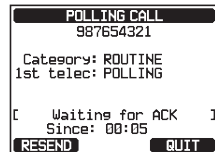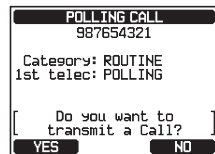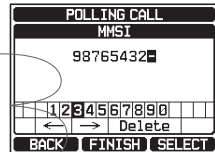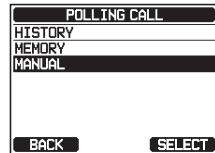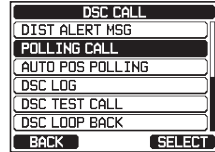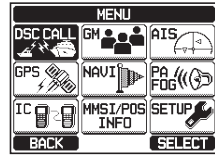

9.8.2 Receiving a Polling Call

When another vessel transmits a polling call to the **GX6500E/GX6000E** the following will happen:

1. When a polling call is received, the radio will automatically respond to the calling vessel.
2. To exit from the polling call display, press the **[QUIT]** soft key.

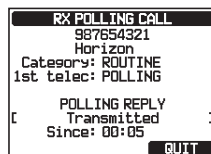

9.9 AUTO POSITION POLLING



The **GX6500E/GX6000E** has the capability to automatically track seven vessels programmed into the individual directory, or to automatically send your position information to the programmed stations.

9.9.1 Setting up the Polling Operation


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.




3. Rotate the **DIAL/ENT** knob to select “DSC SETUP” then press the **[SELECT]** soft key.

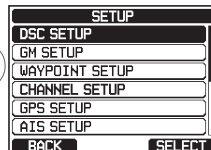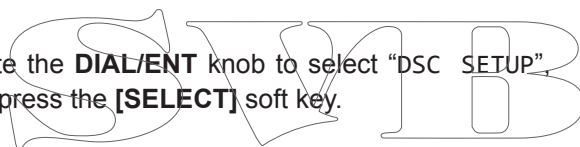

4. Rotate the **DIAL/ENT** knob to select “AUTO POSITION POLLING”, then press the **[SELECT]** soft key.



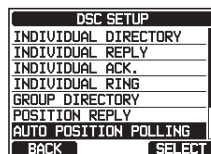


5. Rotate the **DIAL/ENT** knob to select the desired operation (AUTO POS REQUEST and AUTO POS REPORT), and press the **[ENTER]** soft key.
6. Press the **CLEAR** key to return to radio operation.

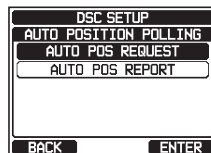

9.9.2 Setting up the Polling Time Interval

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “AUTO POS INTERVAL”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the desired interval time (30 second, 1, 2, 3, and 5 minutes) and press the **[ENTER]** soft key.
6. Press the **CLEAR** key to return to radio operation.

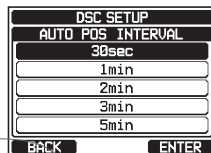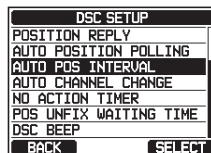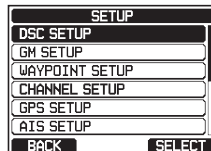


9.9.3 Selecting Vessels to be Automatically Polled





NOTE

The radio uses the individual directory to select vessels to be automatically polled. Refer to section “10.4.1 Setting up the Individual / Position Call Directory” and to enter MMSI of vessels you want to poll before proceeding.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “AUTO POS POLLING”, then press the **[SELECT]** soft key.



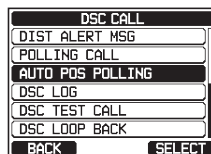


4. Rotate the **DIAL/ENT** knob to select “SELECTED ID”, then press the **[SELECT]** soft key.
5. The radio will show a blank row highlighted when you select the vessel for the first time. Press the **[SELECT]** soft key.
6. The radio will show the vessels programmed in the individual directory. Rotate the **DIAL/ENT** knob to select the desired vessel, then press the **[ENTER]** soft key.
7. For more entries, rotate the **DIAL/ENT** knob to select a blank row, press the **[SELECT]** soft key, then perform step 6.
8. When finished, press the **CLEAR** key to exit to the radio mode.

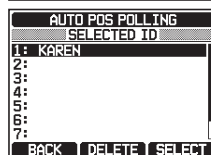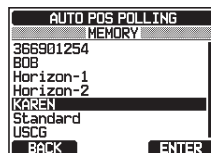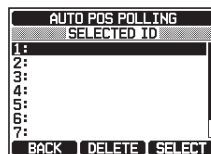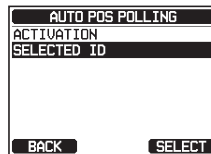

9.9.4 Enabling/Disabling Auto POS Polling

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “AUTO POS POLLING”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select the “ACTIVATION”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “START” to enable transmissions or “STOP” to disable, then press the **[ENTER]** soft key.
6. Press the **CLEAR** key to return to radio operation.

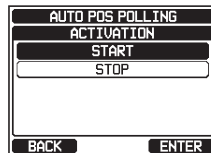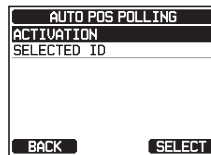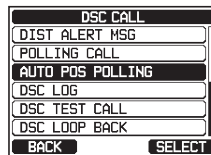

- Auto POS Polling starts and “[A]” icon will light up on the screen.



9.10 DSC TEST

This function is used to contact another DSC equipped vessel to ensure the DSC functions of the radio are operating.

NOTE

To use this feature, the radio that will receive the test call also needs to have the DSC Test feature.

To perform the DSC test you will need to enter a MMSI of another vessel into the individual directory or manually enter in the MMSI using the procedure below.




9.10.1 Programming MMSI into Individual Directory

Refer to section “10.4.1 Setting up the Individual / Position Call Directory”.

9.10.2 Transmitting a DSC Test to Another Vessel

DSC Test call by using Individual/Position Directory


- Press the **MENU** key to display “MENU”.
- Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “DSC TEST CALL”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “HISTORY” or “MEMORY”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select the ship name, then press the **[SELECT]** soft key.

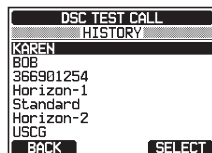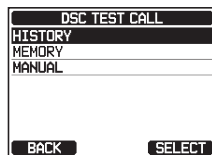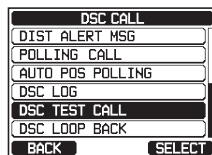

- Press the **[YES]** soft key to transmit the DSC test call to the other vessel.



- Press the **[QUIT]** soft key to return to radio operation.

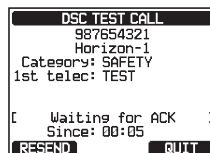


DSC Test Call by Manually Entering an MMSI



- Press the **MENU** key to display "MENU".
- Rotate the **DIAL/ENT** knob to select "DSC CALL", then press the **[SELECT]** soft key.




- Rotate the **DIAL/ENT** knob to select "DSC TEST CALL", then press the **[SELECT]** soft key.

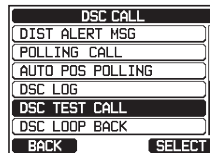

- Rotate the **DIAL/ENT** knob to select "MANUAL", then press the **[SELECT]** soft key.

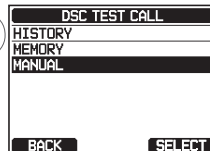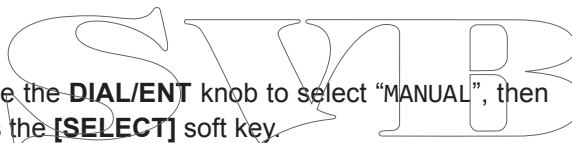

- Rotate the **DIAL/ENT** knob to select the first digit in the MMSI, then press the **[SELECT]** soft key.

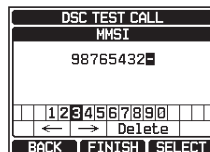

- Repeat step 5 until all the numbers of the MMSI are shown on the display.

- Press the **[FINISH]** soft key to show the test call page.



- Press the **[YES]** soft key to transmit the DSC test call to the other vessel.

- Press the **[QUIT]** soft key to return to DSC radio operation.



NOTE

After the radio receives a test call reply from the vessel that was called, the radio will ring and show “RX TEST CALL” display, which confirms the radio you called has received the test call.


9.10.3 Receiving a DSC Test Call

When another vessel transmits a DSC Test call to the **GX6500E/GX6000E** the following will happen:

1. When a DSC Test call is received, the radio will automatically respond to the calling vessel.
2. To exit from the DSC Test call display, press the **[QUIT]** soft key.



9.11 DSC LOG OPERATION

The **GX6500E/GX6000E** logs transmitted calls, received DSC distress calls, and other calls (individual, group, all ships, etc.). The DSC log feature is similar to an answer machine where calls are recorded for review and a “” icon will appear on the radios display. The **GX6500E/GX6000E** can store up to 100 transmitted calls, up to the latest 50 distress calls, and up to the latest 100 other calls (individual, group, all ships, position report, position request ack, test call ack, and polling calls).

NOTE

When the “DSC LOG” menu is selected, the **GX6500E/GX6000E** may display high-priority logged call automatically.





9.11.1 Reviewing and Resending a Transmitted Logged Call

The **GX6500E/GX6000E** allows transmitted logged calls to be reviewed and to resend the call.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.





3. Rotate the **DIAL/ENT** knob to select “DSC LOG”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “TRANSMITTED”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the station (name or MMSI number) you want to review and/or resend the call.
6. Press the **[SELECT]** soft key to review details for the selected station.
7. Depending on the type of the DSC LOG selected in step 5, you can check the information of the LOG by pressing the **[INFO]** soft key and can reply by pressing the **[CALL]** soft key.

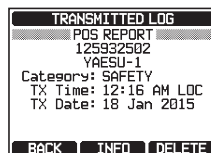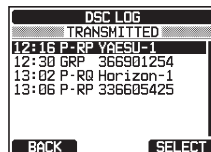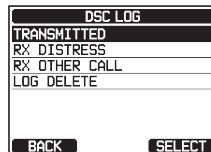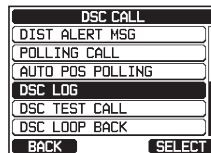

9.11.2 Reviewing a Logged DSC RX Distress Call


The **GX6500E/GX6000E** allows logged DSC RX distress call to be reviewed.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC LOG”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “RX DISTRESS”, then press the **[SELECT]** soft key.

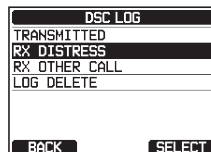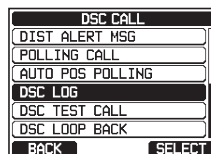


- Rotate the **DIAL/ENT** knob to select the station (name or MMSI number) you want to review and/or relay the distress call to other vessels.

Note: When there is an unread received call, “✉” icon will appear at the head of the call’s row.

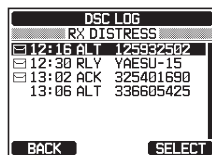

- Press the **[SELECT]** soft key to review details for the selected station.
- Press the **[INFO]** soft key to display more information or press the **[BACK]** soft key to go back to the received DSC distress call list.

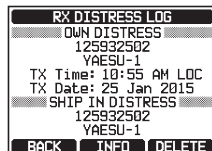


9.11.3 Reviewing Other Logged Calls


- Press the **MENU** key to display “MENU”.
- Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.



- Rotate the **DIAL/ENT** knob to select “DSC LOG”, then press the **[SELECT]** soft key.

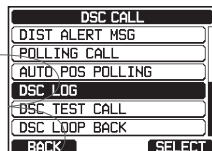


- Rotate the **DIAL/ENT** knob to select “RX OTHER CALL”, then press the **[SELECT]** soft key.

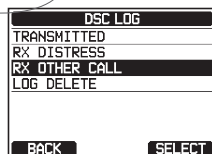


- Rotate the **DIAL/ENT** knob to select the station (name or MMSI number) you want to review and/or call back.

Note: When there is an unread received call, “✉” icon will appear at the head of the call’s row.

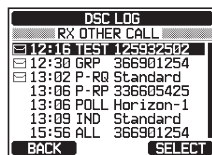




- Press the **[SELECT]** soft key to review details for the selected station.

- Press the **[REPLY]** soft key to reply to the call or press the **[BACK]** soft key to go back to the received call list.

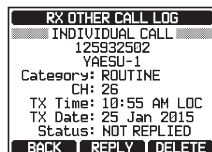

9.11.4 Deleting Logged Calls from the DSC Log Directory

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC LOG”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “LOG DELETE”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the category (“TRANSMITTED”, “RX DISTRESS”, “RX OTHER CALL” or “ALL LOG”) to be deleted.
6. Press the **[SELECT]** soft key.
The display will show “Do you want to delete the LOG?”.
7. Press the **[YES]** soft key. (To cancel, press the **[NO]** soft key.)
8. Press the **CLEAR** key to return to radio operation.

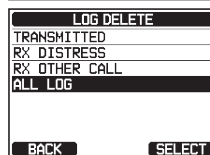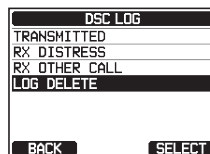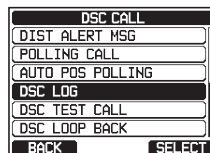

NOTE




The procedure above will delete all logged calls of the selected category at one time.

To delete logged calls one by one, review the details of the call you want to delete, then press the **[DELETE]** soft key.

9.12 DSC LOOP BACK OPERATION

The **GX6500E/GX6000E** has a self-test feature for DSC call.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “DSC CALL”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC LOOP BACK”, then press the **[SELECT]** soft key.
4. Press the **[YES]** soft key to start a test. (To cancel, press the **[NO]** soft key.)

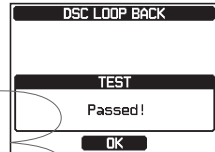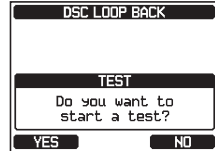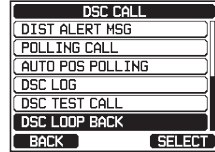

The display will show “Passed!” if the DSC feature properly operates, then press the **[OK]** soft key to the “DSC CALL” menu.

5. Press the **CLEAR** key to return to radio operation.

SVMB

10 NAVIGATION

The **GX6500E/GX6000E** is capable of storing up to 250 waypoints for navigation using the compass page.

You can also navigation to DSC distress calls with position or a position received from another DSC radio using DSC polling.

10.1 WAYPOINT OPERATION

10.1.1 Starting and Stopping Navigation

Navigation by Using the Waypoint Directory






1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “NAVI”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “WAYPOINT”, then press the **[SELECT]** soft key.

4. Rotate the **DIAL/ENT** knob to select the desired category (“HISTORY” or “MEMORY”), then press the **[SELECT]** soft key.

5. Rotate the **DIAL/ENT** knob to select a waypoint, then press the **[SELECT]** soft key. The navigation screen will appear.

The screen includes the distance and direction to the destination, and the waypoint is indicated by a dot (●) inside the compass.

6. Press one of the soft keys to show the key selections. Press the **[STOP]** soft key to stop the navigation.

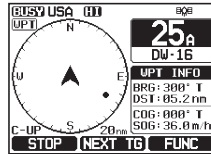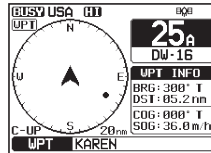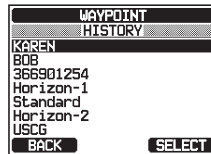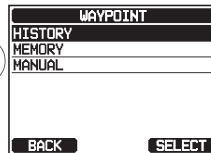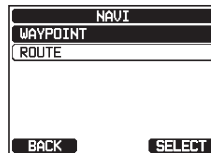


Navigation by Manually Entering a Waypoint


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “NAVI”, then press the **[SELECT]** soft key.




3. Rotate the **DIAL/ENT** knob to select “WAYPOINT”, then press the **[SELECT]** soft key.

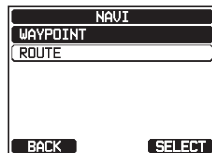


4. Rotate the **DIAL/ENT** knob to select “MANUAL”, then press the **[SELECT]** soft key.
5. If you want to give the waypoint an easy-to-find name, rotate the **DIAL/ENT** knob to select “NAME:”, press the **[SELECT]** soft key, then enter the name. For details, refer to “10.4.1 Setting up the Individual / Position Call Directory”.

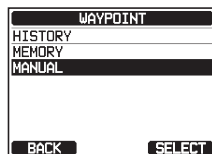

6. Rotate the **DIAL/ENT** knob to select “POSITION:”, then press the **[SELECT]** soft key.

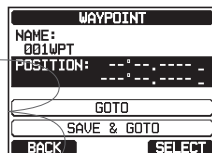


7. Rotate the **DIAL/ENT** knob to select the first number of latitude, then press the **[SELECT]** soft key to step to the next number.
8. Repeat step 7 to set the position.

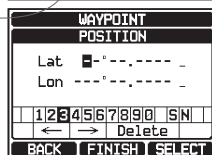

- If a mistake was made, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 7.

9. When finished programming the position, press the **[FINISH]** soft key. The display will return to the previous screen.


10. Rotate the **DIAL/ENT** knob to select “SAVE & GOTO”, then press the **[SELECT]** soft key. To set the Waypoint as a temporary destination without saving and start the navigation, select “GOTO” and press the **[SELECT]** soft key.

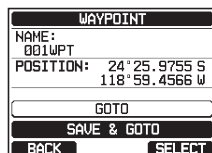

The navigation screen will appear.

The screen includes the distance and direction to the destination, and the waypoint is indicated by a dot (●) inside the compass.

- Press one of the soft keys to show the key selections. Press the **[STOP]** soft key to stop the navigation.

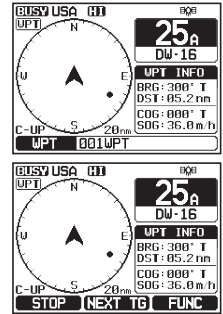


10.1.2 Setting Up Waypoint Directory



Marking a Position

This feature allows the radio to mark the current position of the vessel.


- Press the **MENU** key to display “MENU”.
- Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.

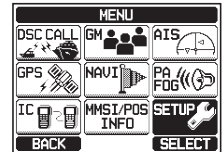


- Rotate the **DIAL/ENT** knob to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.

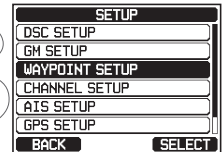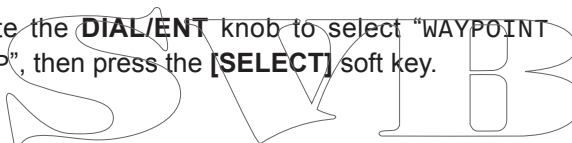

- Rotate the **DIAL/ENT** knob to select “MARK POSITION”, then press the **[SELECT]** soft key.

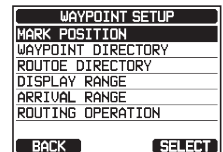


- Rotate the **DIAL/ENT** knob to select “NAME:”, then press the **[SELECT]** soft key.
- Enter the waypoint name by rotating the **DIAL/ENT** knob and the **[SELECT]** soft key.

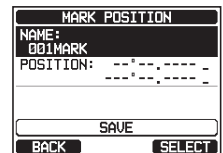

When finished entering the name (using fifteen characters or less), press the **[FINISH]** soft key.

- If you want to modify the position, rotate the **DIAL/ENT** knob to select “POSITION:”, press the **[SELECT]** soft key, then enter the new coordinates. When finished modifying the position, press the **[FINISH]** soft key.

- Rotate the **DIAL/ENT** knob to select “SAVE”, then press the **[SELECT]** soft key to save the mark position into memory.
- Press the **CLEAR** key to return to radio operation.

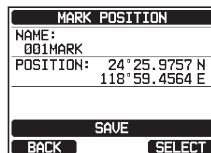


Adding a Waypoint


- Press the **MENU** key to display “MENU”.
- Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.




- Rotate the **DIAL/ENT** knob to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.

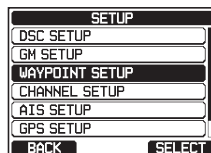


- Rotate the **DIAL/ENT** knob to select “WAYPOINT DIRECTORY”, then press the **[SELECT]** soft key.

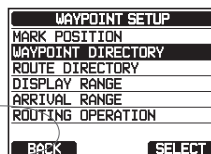

- Rotate the **DIAL/ENT** knob to select “ADD”, then press the **[SELECT]** soft key.

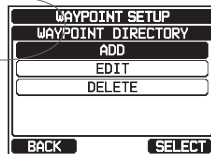

- Rotate the **DIAL/ENT** knob to select “NAME:”, then press the **[SELECT]** soft key.

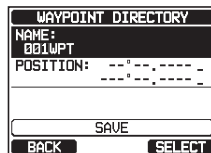


- Enter the waypoint name by rotating the **DIAL/ENT** knob and the **[SELECT]** soft key.

When finished entering the name (using fifteen characters or less), press the **[FINISH]** soft key.

- Rotate the **DIAL/ENT** knob to select “POSITION:”, press the **[SELECT]** soft key, then enter the coordinates.

When finished entering the position, press the **[FINISH]** soft key.

- Rotate the **DIAL/ENT** knob to select “SAVE”, then press the **[SELECT]** soft key to save the waypoint into memory.

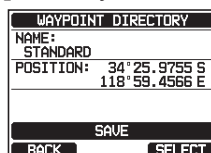

- Press the **CLEAR** key to return to radio operation.


Editing a Waypoint

This function allows a previously entered waypoint to be edited.


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.




3. Rotate the **DIAL/ENT** knob to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.

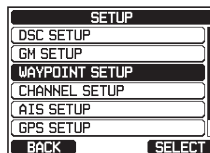


4. Rotate the **DIAL/ENT** knob to select “WAYPOINT DIRECTORY”, then press the **[SELECT]** soft key.

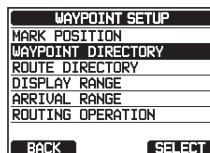

5. Rotate the **DIAL/ENT** knob to select “EDIT”, then press the **[SELECT]** soft key.

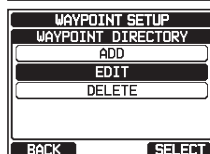


6. Rotate the **DIAL/ENT** knob to select the waypoint to be edited, then press the **[SELECT]** soft key to show the waypoint input display.

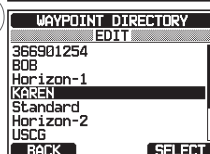

7. Rotate the **DIAL/ENT** knob to select “NAME:” or “POSITION:”, then press the **[SELECT]** soft key.
8. Rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the character to be changed is selected, then enter a new character.
9. Repeat step 8 until the waypoint is updated.

When finished editing, press the **[FINISH]** soft key.






10. Rotate the **DIAL/ENT** knob to select “SAVE”, then press the **[SELECT]** soft key to store the edited waypoint into memory.

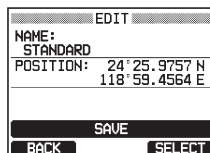

11. Press the **CLEAR** key to return to radio operation.

Deleting a Waypoint

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “WAYPOINT DIRECTORY”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “DELETE”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select the waypoint to be deleted, then press the **[SELECT]** soft key.
7. Confirm the waypoint to be deleted, rotate the **DIAL/ENT** knob to select “OK”, then press the **[SELECT]** soft key.
8. Press the **CLEAR** key to return to radio operation.

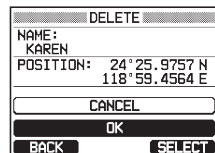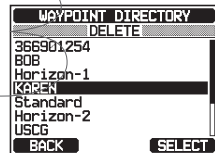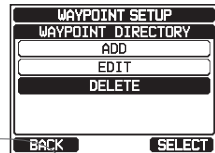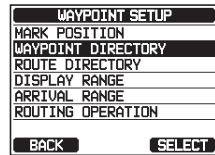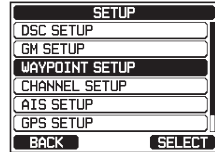

Saving a DSC Position Call as a Waypoint





When a position is received from another DSC radio the **GX6500E/GX6000E** allows the position to be saved as a waypoint.

Refer to section “**10.7.4 Saving the Reported Position as a Waypoint**” for details.

10.1.3 Selecting the Display Range

This menu item allows setting of the range on the compass display.




1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “DISPLAY RANGE”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select desired range. (Unit of measure depends on the settings in the GPS SETUP menu. Refer to section “18.7 UNITS OF MEASURE”.)
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

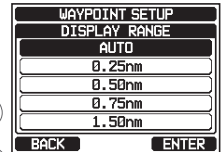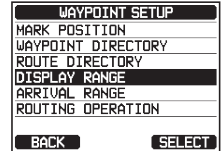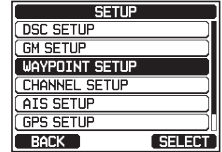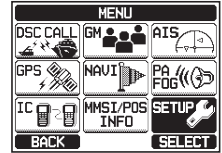

10.1.4 Selecting the Arrival Range


This menu item allows setting of the range within which the **GX6500E/GX6000E** determines to be around the destination.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “ARRIVAL RANGE”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select desired range. (Unit of measure depends on the settings in the GPS SETUP menu. Refer to section “18.7 UNITS OF MEASURE”)
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

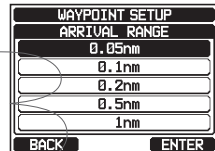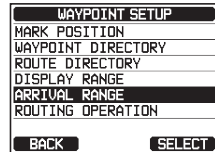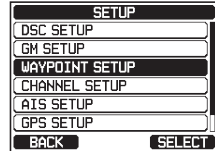

10.2 ROUTING OPERATION

The **GX6500E/GX6000E** allows you to set 1 to 15 waypoints along the route.

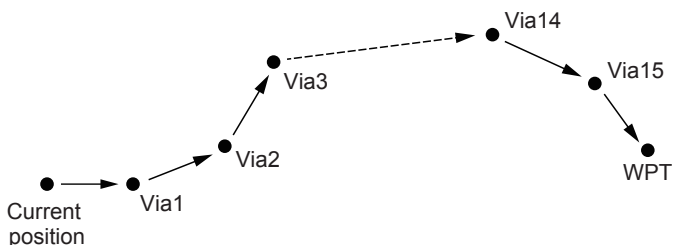

ROUTING TO A WAYPOINT




10.2.1 Setting Up Routing Directory

NOTE




All the destinations and via-points must be programmed as waypoints in the **GX6500E/GX6000E** memory. Refer to section “11.1.2 Setting Up Waypoint Directory”.

Adding a Route

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “ROUTE DIRECTORY”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “ADD”, then press the **[SELECT]** soft key.

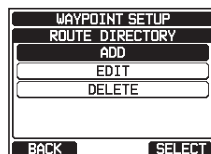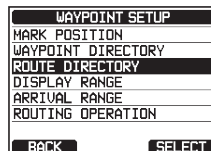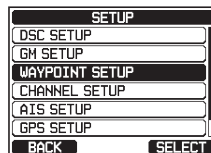


6. Rotate the **DIAL/ENT** knob to select “NAME:”, then press the **[SELECT]** soft key.
7. Enter the route name by rotating the **DIAL/ENT** knob and the **[SELECT]** soft key.
When finished entering the name (using fifteen characters or less), press the **[FINISH]** soft key.
8. Rotate the **DIAL/ENT** knob to select “ROUTE POINTS”, press the **[SELECT]** soft key.
9. Rotate the **DIAL/ENT** knob to select “WPT:”, then press the **[SELECT]** soft key.
10. Rotate the **DIAL/ENT** knob to select a waypoint, then press the **[SELECT]** soft key.
11. Rotate the **DIAL/ENT** knob to select “Via1”, then press the **[SELECT]** soft key.
12. Rotate the **DIAL/ENT** knob to select a waypoint, then press the **[SELECT]** soft key.
13. Repeat steps 11 and 12 to add more via-points.
14. Press the **[BACK]** soft key.
15. Rotate the **DIAL/ENT** knob to select “SAVE”, then press the **[SELECT]** soft key to store the route into memory.
16. Press the **CLEAR** key to return to radio operation.

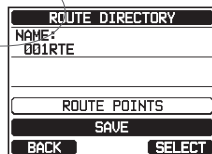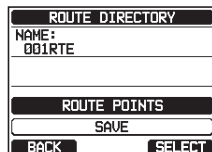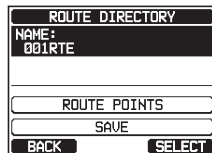





Editing a Route

This function allows a previously entered route to be edited.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.



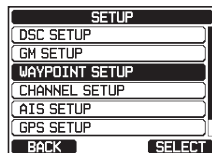


4. Rotate the **DIAL/ENT** knob to select “ROUTE DIRECTORY”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “EDIT”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select the route to be edited, then press the **[SELECT]** soft key to show the route input display.
7. Perform steps 6 to 14 of the previous page until the route is updated.
8. Rotate the **DIAL/ENT** knob to select “SAVE”, then press the **[SELECT]** soft key to store the edited route into memory.
9. Press the **CLEAR** key to return to radio operation.

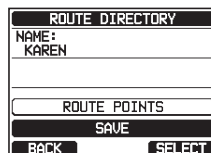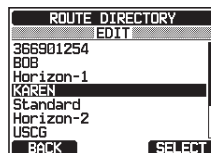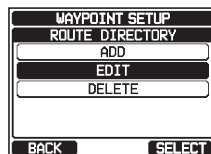
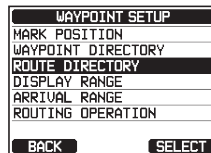


Deleting a Route

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “ROUTE DIRECTORY”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “DELETE”, then press the **[SELECT]** soft key.



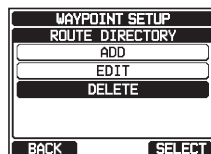
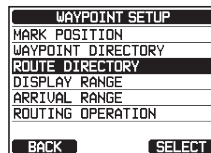
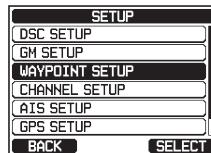


6. Rotate the **DIAL/ENT** knob to select the route to be deleted, then press the **[SELECT]** soft key.
7. Confirm the route to be deleted, rotate the **DIAL/ENT** knob to select “OK”, then press the **[SELECT]** soft key.
8. Press the **CLEAR** key to return to radio operation.

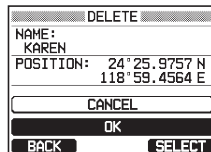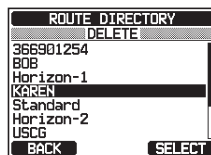




10.2.2 Starting and Stopping Route Navigation

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “NAVI”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “ROUTE”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select the desired category (“HISTORY” or “MEMORY”), then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select a route, then press the **[SELECT]** soft key. The navigation screen with “RUT” indicator appears.
6. A message “ARRIVED” will appear when you have reached to the first target point. To start navigation to the next target, press the **[YES]** soft key.
7. Press one of the soft keys to show the key selections. Press the **[STOP]** soft key to stop the navigation.

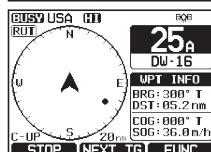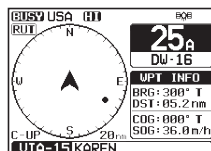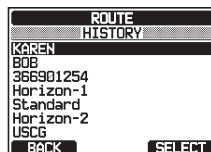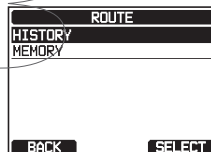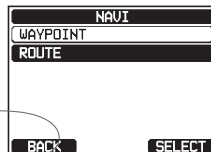

10.2.3 Changing the Destination




1. On the navigation screen, press one of the soft keys to show the key selections.
2. Press the **[NEXT TG]** soft key.
3. Rotate the **DIAL/ENT** knob to select desired destination, then press the **[SELECT]** soft key.
4. The navigation screen with a new destination appears.

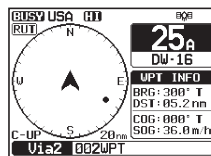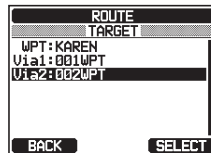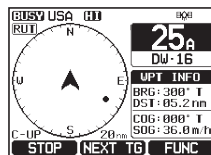

10.2.4 Selecting Automatic or Manual Routing

This selection allows you to start navigation to the next target automatically or manually when your vessel has arrived at a target point.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “ROUTING OPERATION”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “AUTO” or “MANUAL”, then press the **[ENTER]** soft key.
6. Press the **CLEAR** key to return to radio operation.

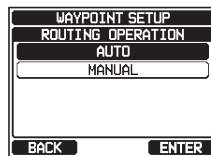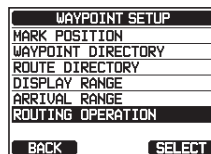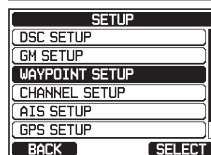

11 GM OPERATION

The GM (Group Monitor) feature of the **GX6500E/GX6000E** utilizes the same system as the DSC Group call and Auto Position Polling, to display the group members' locations.

11.1 SETTING UP GM OPERATION




The **GX6500E/GX6000E** is capable of storing up to 10 groups with 1 to 9 members each.

11.1.1 Setting Up GM Group Directory

NOTE

- For this function to operate, the same group MMSI must be programmed into each transceiver of group members to be monitored. Refer to section “10.5.1 Setting up a Group Call” for details.
- Group members for GM operation can only be selected from the Individual/Position Call directory, there for all members that you want to monitor have to be stored in the directory. Refer to section “10.4.1 Setting up the Individual / Position Call Directory” for details.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GM SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “GM GROUP DIRECTORY”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “ADD”, then press the **[SELECT]** soft key.

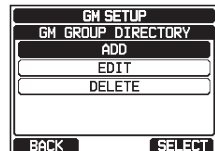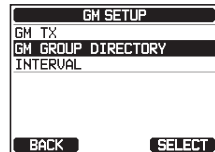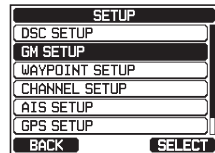

- Rotate the **DIAL/ENT** knob to select “NAME:”, then press the **[SELECT]** soft key.
- Enter the route name by rotating the **DIAL/ENT** knob and the **[SELECT]** soft key.

When finished entering the name (using ten characters or less), press the **[FINISH]** soft key.

- Rotate the **DIAL/ENT** knob to select “GM ID:”, press the **[SELECT]** soft key, then enter the group MMSI number.

When finished entering the MMSI, press the **[FINISH]** soft key.

- Rotate the **DIAL/ENT** knob to select “MEMBER”, then press the **[SELECT]** soft key.

- Rotate the **DIAL/ENT** knob to select a list number, then press the **[SELECT]** soft key.

- Rotate the **DIAL/ENT** knob to select a member from the Individual directory, then press the **[SELECT]** soft key.

- Repeat steps 11 to add members to the group, then press the **[BACK]** soft key.

- Press the **[BACK]** soft key to return to the “NAME:” and “GM ID:” screen.

- Rotate the **DIAL/ENT** knob to select “SAVE” to store the data, then press the **[ENTER]** soft key.

- To enter another group directories, repeat steps 5 through 14.

- Press the **CLEAR** key to return to radio operation.

GM GROUP DIRECTORY	
NAME:	-----
GM ID:	0-----
MEMBERS	
SAVE	
BACK	SELECT

GM GROUP DIRECTORY	
NAME:	Standard-Group
GM ID:	0-----
MEMBERS	
SAVE	
BACK	SELECT

GM GROUP DIRECTORY	
NAME:	Standard-Group
GM ID:	087654323
MEMBERS	
SAVE	
BACK	SELECT

GM GROUP DIRECTORY		
Standard-Group		
1:		
2:		
3:		
4:		
5:		
6:		
7:		
BACK	DELETE	SELECT





GM GROUP DIRECTORY	
INDIVIDUAL DIRECTORY	
366901254	
BOB	
Horizon-1	
KAREN	
Standard	
Horizon-2	
USCG	
BACK	SELECT

GM GROUP DIRECTORY		
Standard-Group		
1:	KAREN	
2:		
3:		
4:		
5:		
6:		
7:		
BACK	DELETE	SELECT

GM SETUP	
NAME:	Standard-Group
GM ID:	087654323
MEMBERS	
SAVE	
BACK	SELECT



11.1.2 Setting Up the Polling Time Interval

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GM SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “INTERVAL”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the desired interval time, then press the **[ENTER]** soft key.
6. Press the **CLEAR** key to return to radio operation.

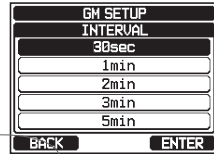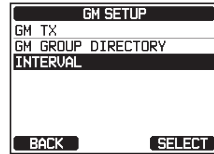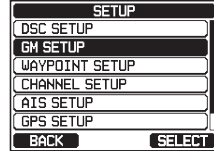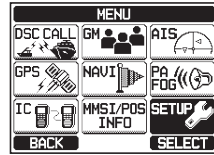

11.1.3 Enabling/Disabling Transmission during GM Operation

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GM SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “GM TX”, then press the **[SELECT]** soft key.

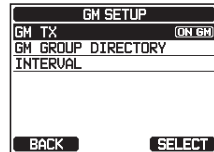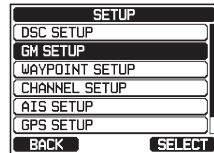


- Rotate the **DIAL/ENT** knob to select the desired transmission type, then press the **[ENTER]** soft key.

OFF: Disables the transmission during GM operation.

ON GM: Enables the transmission during the GM target display.

ON ALL: Enables the transmission during the GM operation.

- Press the **CLEAR** key to return to radio operation.

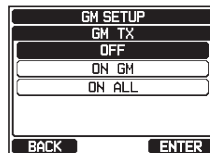

11.2 STARTING GM OPERATION


NOTE

To start GM operation, configure the GM Group Directory setting in advance. Otherwise, you cannot start the GM operation. Refer to section “12.1.1 Setting Up GM Group Directory” for details.

- Press the **MENU** key to display “MENU”.
- Rotate the **DIAL/ENT** knob to select “GM”, then press the **[SELECT]** soft key.



- Rotate the **DIAL/ENT** knob to select the desired category (“HISTORY” or “MEMORY”), then press the **[SELECT]** soft key.

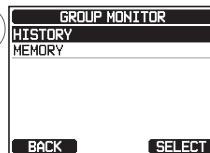


- Rotate the **DIAL/ENT** knob to select a group you want to monitor, then press the **[SELECT]** soft key.




The GM operation starts and the GM target display appears.

- Press the **CLEAR** key to return to radio operation.

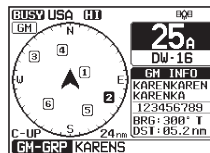


11.2.1 Changing the GM Group Being Monitored

1. On the GM target display, press one of the soft keys to show the key selections.
2. Press the **[TG LIST]** soft key.
3. Press the **[CHG GP]** soft key.
4. Rotate the **DIAL/ENT** knob to select the name of the group you want to start monitoring, then press the **[ENTER]** soft key.

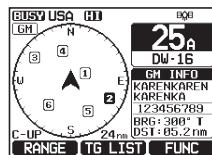


GM-GRP KARENS		
NAME	DST NM	
1: BOB	23.5	
2: KAREN	85.2	
3: Horizon-1	12.8	
4: Standard-2	34.9	
5: USCG	30.0	
6: W ID	46.7	
7: Horizon-2	38.4	

BACK CHG GP SELECT

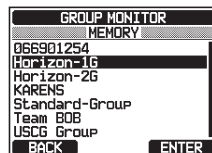


The GM group being monitored changes. The GM target display appears.

5. Press the **CLEAR** key to return to radio operation.

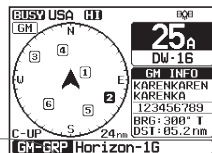


11.2.2 Transmitting a DSC Call to a Group Member

1. On the GM target display, press one of the soft keys to show the key selections.
2. Press the **[TG LIST]** soft key.
3. Rotate the **DIAL/ENT** knob to select a member you want to call.
4. Press the **[SELECT]** soft key to display the location, distance, and bearing of the selected member.
5. Press the **[CALL]** soft key to transmit a DSC Individual call to the selected member.

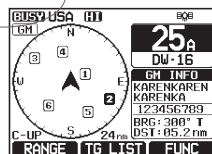




GM-GRP KARENS		
NAME	DST NM	
1: BOB	23.5	
2: KAREN	85.2	
3: Horizon-1	12.8	
4: Standard-2	34.9	
5: USCG	30.0	
6: W ID	46.7	
7: Horizon-2	38.4	

BACK CHG GP SELECT

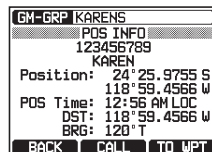

11.2.3 Starting Navigation to a Group Member

1. On the GM target display, press one of the soft keys to show the key selections.
2. Press the **[TG LIST]** soft key.
3. Rotate the **DIAL/ENT** knob to select a member you want to approach.
4. Press the **[SELECT]** soft key to display the location, distance, and bearing of the selected member.
5. Press the **[TO WPT]** soft key to start navigation to the selected member. (Press the **[BACK]** soft key twice to cancel and return to the GM target display.)

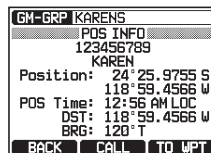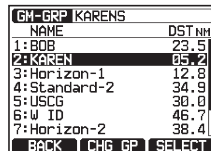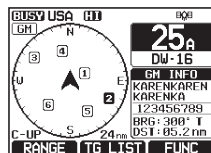

SVIB

12 AUTOMATIC IDENTIFICATION SYSTEM (AIS)

12.1 GENERAL

NOTE

- The **GX6500E/GX6000E** is equipped with an antenna jack designated for AIS. By connecting a marine antenna to this jack, the transceiver can receive AIS signals while receiving a voice channel signals.
- Install the antenna for voice channels and the antenna for AIS as far away from each other as possible. Having a large vertical distance is especially effective for improving high frequency isolation. To make even longer-range communication possible, it is recommended to install the antenna for voice channel at a height higher than the antenna for AIS.
- The **GX6500** supports AIS signal transmission as a standard feature. The **GX6000** does not transmit AIS signals.

The Automatic Identification System (AIS) is a short range coastal tracking system. AIS is intended to assist in collision avoidance by seeing positions and courses of AIS equipped vessels around your vessel.

AIS is mandatory on passenger ships, irrespective of size, all ships 300 gross tonnage and larger engaged on international voyages, cargo ships of 500 gross tonnage and larger not engaged on international voyages.

AIS uses two marine VHF channels. Each ship equipped with an AIS transponder transmits a packet every few seconds with information about the ship and its voyage. Radio frequencies: AIS1 = 161.975 MHz, or channel 87B and AIS2 162.025 MHz, or channel 88B. A stand-alone AIS receiver or the AIS receiver built in to a Class A or Class B transponder can pick up these radio signals and translate them into a NMEA data sentence that can be understood by a computer with the proper software or by an AIS-enabled chart plotter.

Classes of AIS:

Class A - 12.5W power output - mandated for use on SOLAS Chapter V vessels (and others in some countries).

Class B CS - 2W output - lower cost derivative for leisure and non-SOLAS markets.

The **GX6500E/GX6000E** is capable of receiving Class A and B transmission with the internal Dual Channel AIS receiver.


12.2 AIS OPERATION

The **GX6500E/GX6000E** is equipped with an AIS receiver and can display AIS targets around your vessel on the radios display. Therefore, you can identify and avoid other large vessels nearby your vessel.

NOTE


To show AIS targets on the radio's display, the **SCU-31** or external GPS needs to be fixed own location so the radio knows its position relative to the AIS targets.

1. Press the **MENU** key to display "MENU".

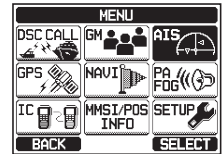


2. Rotate the **DIAL/ENT** knob to select "AIS", then press the **[SELECT]** soft key.

The AIS display shows your vessel as a "▲" icon in the center of the display. AIS targets are shown as triangles. The line projected from the circle is the AIS vessels course over ground (COG).

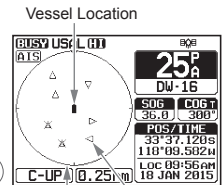

3. Press the **▶/◀** key to change the AIS target. Pressing the **◀** key sequentially displays AIS vessels in order closest to your ship. Pressing the **▶** key sequentially displays AIS vessels in order furthest from your ship. The selected AIS target is displayed with "▲" icon, while other stations are displayed with "△" icon.

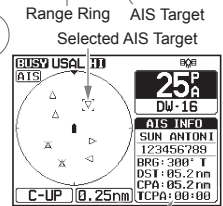

Note: Up to 15 AIS targets can be shown on the display.


4. Press the **CLEAR** key to return to radio operation.

12.2.1 Displaying the AIS Target Information Screen

1. On the AIS screen, press one of the soft keys to show the key selections. These selections are described below:

[RANGE]: Press this key to change the display range of the screen.

[TG LIST]: Press this key to show a list of the MMSI numbers or the vessel names being received.

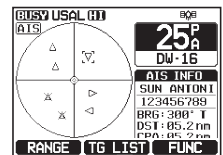

[FUNC]: Press this key to show the function menu.

2. Press the **[TG LIST]** soft key to show a list of AIS target being received.
3. Rotate the **DIAL/ENT** knob to select the MMSI number (or vessel name). then press the **[SELECT]** soft key. Pressing the **[DANGER]** soft key changes the order to the TCPA time order.
4. The AIS target information screen appears. To see more information of the AIS target, press the **[NEXT]** soft key.
5. Press the **CLEAR** key to return to radio operation.



ALL TARGET LIST			
NAME/MMSI	BRG	T	DST/NM
BOB	118.5°	23.5	
KAREN	338.0°	05.2	
Horizon-1	---	-°	12.8
Standard-2	---	-°	34.9
USCG	---	-°	30.0
W ID	---	-°	46.7
Horizon-2	---	-°	38.4

TARGET INFO 1/5	
Class:	CLASS A
MMSI:	366901254
Name:	BOB
Origin:	
Call Sign:	
IMO No:	

SVMB

12.2.2 Changing the AIS Range

1. On the AIS screen, press one of the soft keys to show the key selections.
2. Press the **[RANGE]** soft key. Press the soft keys at the center and right side to select the radius range to display on the AIS screen.
3. Press the **[BACK]** soft key to return to AIS screen.

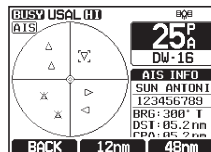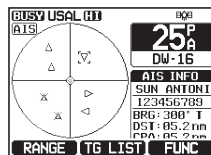



NOTE

You may change the display range unit of the AIS screen, refer to section "18.7 UNITS OF MEASURE".


12.2.3 Transmitting an Individual Call to an AIS Ship

It is possible for the **GX6500E/GX6000E** to transmit a DSC individual call to a received AIS target by the procedure below:


1. On the AIS screen, press one of the soft keys to show the key selections.
2. Press the **[TG LIST]** soft key to show a list of AIS target being received.
3. Rotate the **DIAL/ENT** knob to select the MMSI number (or vessel name), then press the **[SELECT]** soft key.

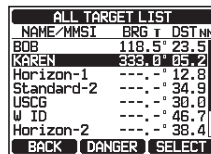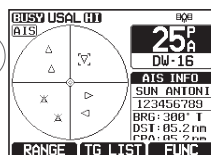

4. Press the **[CALL]** soft key

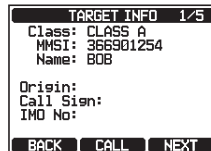

5. In the INTERSHIP CH list, rotate the **DIAL/ENT** knob to select the operating channel on which you want to communicate, then press the **[SELECT]** soft key. To select operating channels from all voice channels, press the **[MANUAL]** soft key.

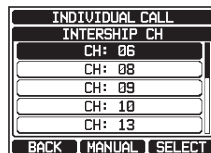


- To transmit an individual DSC call to the select AIS ship, press the **[YES]** soft key.

After the **GX6500E/GX6000E** transmits, the radio waits for the DSC radio on the AIS ship to transmit a reply, at which time the radio will ring like a telephone. Pick up the mic, press the **PTT** switch and hail the AIS vessel.



- Press the **[QUIT]** soft key to return to AIS screen.
- Press the **CLEAR** key to return to radio operation.

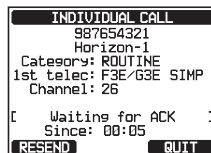

12.2.4 CPA/TCPA Alarm Functions

The CPA alarm sounds when other AIS vessels enter within the range set as the CPA Limit. For details, refer to section “**13.3.3 CPA**”.


The TCPA alarm sounds according to the time set as the TCPA Limit which is the time taken until other AIS vessels enter within the range set as the CPA Limit. For details, refer to section “**13.3.4 TCPA**”.

- If other AIS vessels approach your ship, the alarm sounds according to the CPA Limit and TCPA Limit that you set in advance.
- Press any key to stop the alarm.

The targets for the CPA/TCPA alarm will appear with “**[X]**” and flash.

Up to 15 targets for the CPA/TCPA alarm can be shown on the screen.

Note: If the display is in a mode other than AIS, the radio automatically switches to the AIS mode.

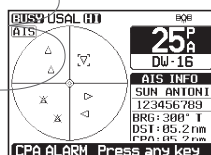


- On the display you will notice 3 soft key selections. These selections are described below:

[INFO]: Pressing this key shows the information screen of the CPA/TCPA alarm targets.

[CALL]: Pressing this key switches the screen to the setting screen for transmitting individual DSC calls.

[EXIT]: Press this key to return to AIS screen.

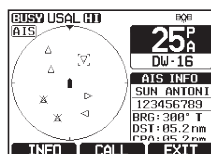

- To transmit individual calls to the CPA/TCPA alarm targets, follow steps 4 through 8 in “**13.2.3 Transmitting an Individual Call to an AIS Ship**”

12.2.5 Changing the Compass Display

The compass display can be switched between “COURSE-UP” and “NORTH-UP”. The default setting is “COURSE-UP”.





Refer to section “18.2 DISPLAY DIRECTION” for details.

12.3 AIS SETUP

12.3.1 Transponder (Only for GX6500)

Enable/disable the AIS transponder. The default setting is “OFF”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “AIS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “TRANSPONDER”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “OFF” or “ON”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

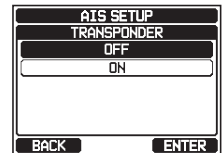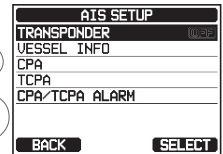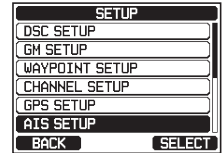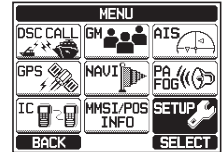


12.3.2 Vessel Information (Only for GX6500)

Set your ship information. “VESSEL NAME”, “CALL SIGN”, “GPS ANT POS”, and “TYPE OF VESSEL” can be set.


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.




3. Rotate the **DIAL/ENT** knob to select “AIS SETUP”.

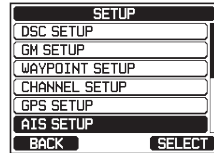

4. Rotate the **DIAL/ENT** knob to select “VESSEL INFO”, then press the **[SELECT]** soft key.

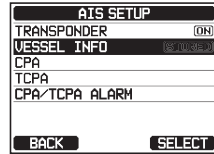


5. Rotate the **DIAL/ENT** knob to select “VESSEL NAME:”, then press the **[SELECT]** soft key.

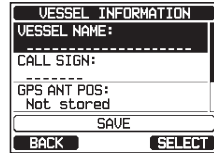

6. Rotate the **DIAL/ENT** knob to scroll through the first letter of the name of the vessel you want to reference in the directory.

7. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.

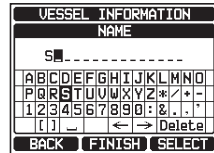


8. Repeat steps 6 and 7 until the name is complete. The name can consist of up to fifteen characters, and if you do not use all fifteen characters, select “→” to move to the next space. This method can also be used to enter a blank space in the name.

If a mistake was made entering in the name, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform steps 6 and 7.


9. When finished entering the name (using fifteen characters or less), press the **[FINISH]** soft key to advance to the CALL SIGN entry.

10. Rotate the **DIAL/ENT** knob to select “CALL SIGN:”, then press the **[SELECT]** soft key.

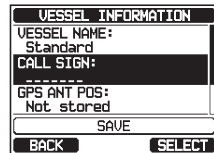

11. Rotate the **DIAL/ENT** knob to scroll through the first letter of the call sign of the vessel you want to reference in the directory.


12. Press the **[SELECT]** soft key to store the first letter in the call sign and step to the next letter to the right.

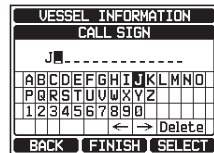


13. Rotate the **DIAL/ENT** knob to select the second letter of the call sign which you want to contact, then press the **[SELECT]** soft key to step to the next letter. Repeat this procedure until all seven spaces of the call sign are entered.

14. When finished entering the call sign, press the **[FINISH]** soft key to advance to the GPS ANT POS entry.


15. Rotate the **DIAL/ENT** knob to select “GPS ANT POS :”, then press the **[SELECT]** soft key.

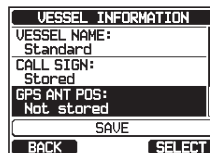


16. Refer to steps 6 through 8, input the installation location of the GPS antenna on your ship. After entering all information, press the **[FINISH]** soft key. Next, select the type of your ship.

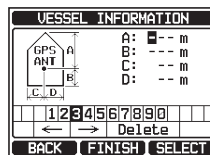

17. Rotate the **DIAL/ENT** knob to select “TYPE OF VESSEL :”, then press the **[SELECT]** soft key.

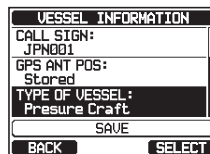


18. Rotate the **DIAL/ENT** knob to select the desired setting, then press the **[ENTER]** soft key.

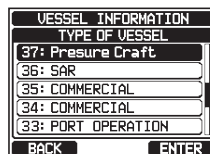

19. To store the data, select “SAVE”, then press the **[SELECT]** soft key.

20. Press the **CLEAR** key to return to radio operation.

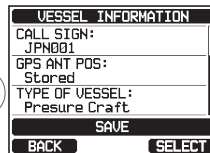

12.3.3 CPA


This function allows you to set the CPA (Closest Point of Approach)* alarm distance.

※: CPA means the positions at which two moving vessels reach their closest possible distance.



1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.



3. Rotate the **DIAL/ENT** knob to select “AIS SETUP”, then press the **[SELECT]** soft key.

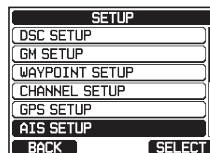

4. Rotate the **DIAL/ENT** knob to select “CPA”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the distance you want the radio to alert you of an approaching AIS fitted vessel. You can select one from “0.5nm”, “1nm”, “2nm”, “5nm”, or “10nm” (“0.5nm” is default).
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

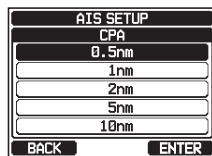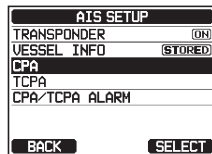


12.3.4 TCPA


This function allows you to set the TCPA (Time to Closest Point of Approach)* alarm.

*: Setting up a TCPA alarm sets a time point where the radio will alarm when an AIS equipped vessel approaching within the time selected.


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.

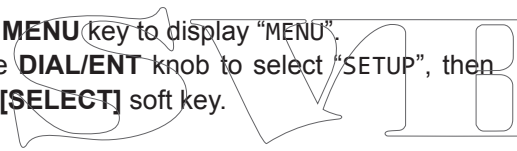


3. Rotate the **DIAL/ENT** knob to select “AIS SETUP”, then press the **[SELECT]** soft key.

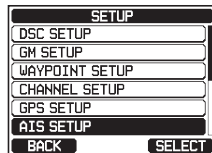

4. Rotate the **DIAL/ENT** knob to select “TCPA”, then press the **[SELECT]** soft key.

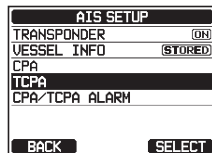






5. Rotate the **DIAL/ENT** knob to select the time that the TCPA alarm will sound. The time can be set from “1min” to “30min” (“10min” is default).
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

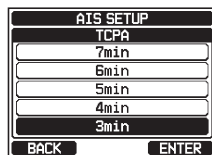

12.3.5 CPA/TCPA Alarm

Enable/disable the CPA/TCPA alarm functions. The default setting is “OFF”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “AIS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “CPA/TCPA ALARM”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “CPA” or “TCPA”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select “OFF” or “ON”.
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLEAR** key to return to radio operation.

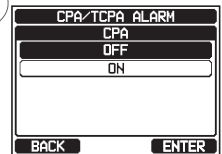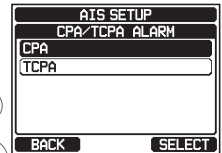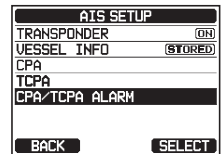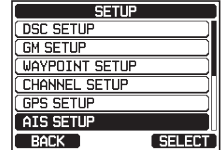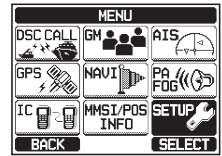

NOTE

The alarm will sound until it is disabled (1) by pressing any key, (2) following the steps above and selecting “OFF” in step 6, or (3) when the ship is out of the selected CPA/TCPA alarm distance. The alarm is produced from the front panel speaker, the speaker in the mic, the optional external speaker and optional **RAM4** mic when connected.




13 NMEA 2000 SETUP

Set the device numbers and system numbers of devices connected to the NMEA 2000 network.

13.1 SELECT DEVICE

Select the device for which you want to set the device number and system number.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “NMEA 2000 SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “SELECT DEVICE”, then press the **[SELECT]** soft key.
5. In the SELECT DEVICE list, rotate the **DIAL/ENT** knob to select the external device for which you want to set the device number or the system number.
6. Press the **[SELECT]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

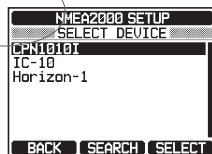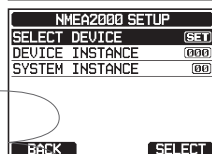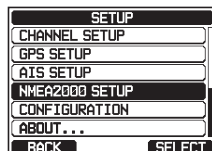


NOTE

If any devices connected to the network are not displayed on the list, press the **[SEARCH]** soft key to update the list.




13.2 DEVICE INSTANCE

Set the device number of the device selected in “14.1 SELECT DEVICE”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “NMEA 2000 SETUP”, then press the **[SELECT]** soft key.

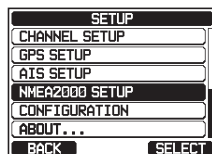

4. Rotate the **DIAL/ENT** knob to select “DEVICE INSTANCE”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the first digit of the device number, then press the **[SELECT]** soft key to step to the next number.
6. Repeat step 5 to set the device number within the range of 000 to 251. (“000” is default).
7. If a mistake was made entering in the device number, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.
8. When finished programming the device number, press the **[FINISH]** soft key.

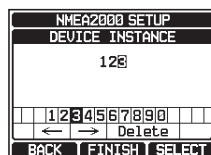
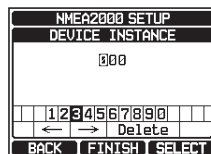
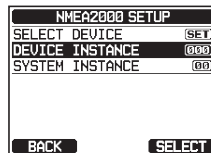


9. Press the **CLEAR** key to return to radio operation.

13.3 SYSTEM INSTANCE


Set the system number of the device selected in “14.1 SELECT DEVICE”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “NMEA 2000 SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “SYSTEM INSTANCE”, then press the **[SELECT]** soft key.

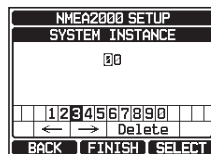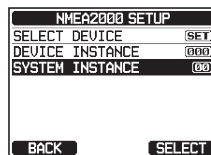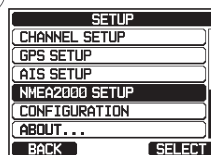

5. Rotate the **DIAL/ENT** knob to select the first digit of the system number, then press the **[SELECT]** soft key to step to the next number.
6. Repeat step 5 to set the system number within the range of 00 to 15. (“00” is default).
7. If a mistake was made entering in the system number, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.

8. When finished programming the system number, press the **[FINISH]** soft key.

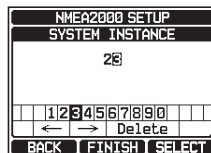

9. Press the **CLEAR** key to return to radio operation.

13.4 SUMMARY OF THE NMEA 2000 SETUP

Item	Description	Default Value
SELECT DEVICE	Select the device for which you want to set the device number or the system number	-
DEVICE INSTANCE	Set the device number	000
SYSTEM INSTANCE	Set the system number	00

13.5 COMPATIBLE NMEA-2000 PGN LIST

Receive		Transmit	
059392	ISO Acknowledgement	059392	ISO Acknowledgement
059904	ISO Request	-	-
060160	ISO Transport Protocol, Data Transfer	-	-
060416	ISO Transport Protocol, Connection Management - RTS group	060416	ISO Transport Protocol, Connection Management - RTS group
060928	ISO Address Claim	060928	ISO Address Claim
065240	ISO Commanded Address	065240	ISO Commanded Address
126208	NMEA - Request group function	126208	NMEA - Request group function
126464	Receive/Transmit PGN's group function	126464	Receive/Transmit PGN's group function
126993	Heartbeat	126993	Heartbeat
126996	Product Information	126996	Product Information
126998	Configuration Information	126998	Configuration Information
127237	Heading/Track Control	-	-
127250	Vessel Heading	-	-
127258	Magnetic Variation	-	-
128259	Speed	-	-
129025	Position, Rapid Update	-	-
129026	COG and SOG, Rapid Update	-	-
129029	GNSS Position Data	129029	GNSS Position Data
-	-	129038	AIS Class A Position Report
-	-	129039	AIS Class B Position Report
-	-	129040	AIS Class B Extended Position Report
-	-	129041	AIS Aids to Navigation (AtoN) Report
-	-	129793	AIS UTC and Date Report (Base Station)
-	-	129794	AIS Class A Static and Voyage Related Data

-	-	129796	AIS Acknowledge
-	-	129797	AIS Binary Broadcast Message
-	-	129798	AIS SAR Aircraft Position Report
-	-	129799	Radio Frequency/Mode/Power
-	-	129801	AIS Addressed Safety Related Message
-	-	129802	AIS Safety Related Broadcast Message
-	-	129808	DSC Call Information
-	-	129809	AIS Class B "CS" Static Data Report, Part A
-	-	129810	AIS Class B "CS" Static Data Report, Part B
129540	GNSS Sats in View	129540	GNSS Sats in View




SVMB

14 CONFIGURATION SETUP

14.1 DISPLAY MODE

The display mode can be selected according to the time of day you operate the radio.




1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CONFIGURATION”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “DISPLAY MODE”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the desired setting. You can select one from “DAY MODE” or “NIGHT MODE”.
DAY MODE: Normal display mode.
NIGHT MODE: Low brightness display mode for night use.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

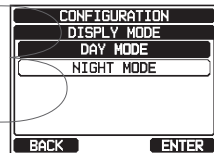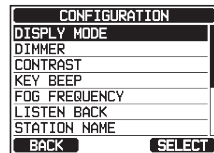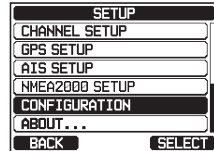

14.2 DIMMER ADJUSTMENT

This menu selection adjusts the backlight intensity.




1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CONFIGURATION”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “DIMMER”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the desired level (“7” is default). When “OFF” is selected, the lamp is turned off.
6. Press the **[ENTER]** soft key to store the selected level.
7. Press the **CLEAR** key to return to radio operation.

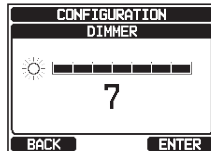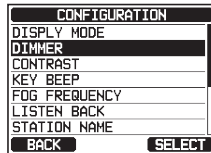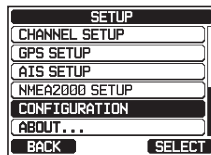

14.3 DISPLAY CONTRAST

The display contrast can be adjusted to suit your operation environment.




1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CONFIGURATION”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “CONTRAST”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the desired level. The contrast level can be set from “1” to “30”, or “OFF” (“15” is default).
6. Press the **[ENTER]** soft key to store the selected level.
7. Press the **CLEAR** key to return to radio operation.

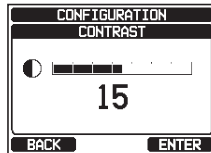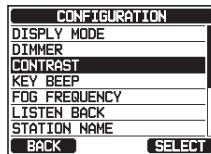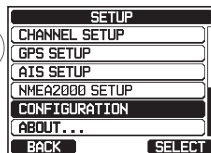

14.4 KEY BEEP

This selection is used to select the beep tone volume level when a key is pressed.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CONFIGURATION”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “KEY BEEP”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the desired level. The beep level can be set from “1” to “7”, or “OFF” (“4” is default).
6. Press the **[ENTER]** soft key to store the selected level.
7. Press the **CLEAR** key to return to radio operation.

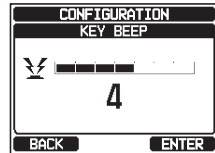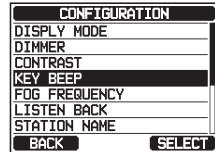
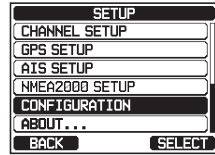


14.5 FOG ALERT TONE FREQUENCY


The function allows the radio to be setup to send the proper fog frequency which is dependant on vessel size, shown below:

- 70 - 200Hz: Vessel that are 660 feet (200 meters) or more in length
- 130 - 350Hz: Vessel that are 247.5 feet (75 meters) or more but less than 660 feet (200 meters) in length
- 250 - 525Hz: Vessel that are 66 feet (20 meters) or more but less than 247.5 feet (75 meters) in length
- 250 - 525Hz: Vessel that are 39.6 feet (12 meters) or more but less than 66 feet (20 meters) in length

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CONFIGURATION”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “FOG FREQUENCY”, then press the **[SELECT]** soft key.

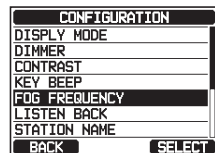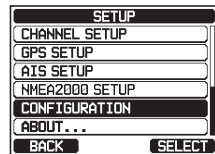

- Rotate the **DIAL/ENT** knob to select the desired level. The frequency level can be set from “200Hz” to “850Hz” (“400Hz” is default).
- Press the **[ENTER]** soft key to store the selected setting.
- Press the **CLEAR** key to return to radio operation.

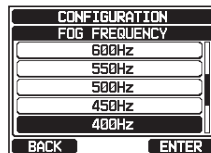



NOTE

By default the radio Fog frequency is set to 400 Hz. In most cases this frequency should not be changed unless the vessel is very large.


14.6 LISTEN BACK

While in PA, FOG HORN, or HORN mode, toggle the listen back function between ON and OFF.

- Press the **MENU** key to display “MENU”.
- Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “CONFIGURATION”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “LISTEN BACK”, then press the **[SELECT]** soft key.

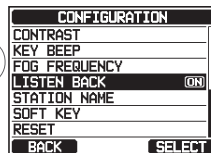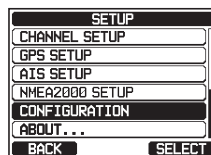

- Rotate the **DIAL/ENT** knob to select “OFF” or “ON” (“ON” is default).
- Press the **[ENTER]** soft key to store the selected setting.
- Press the **CLEAR** key to return to radio operation.

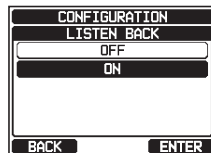


14.7 STATION NAME


This function allows you to change the name of the radio or second station microphone.

Example: “Radio - Cabin”, “RAM1 - Flybridge”


- Press the **MENU** key to display “MENU”.
- Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
- Rotate the **DIAL/ENT** knob to select “CONFIGURATION”, then press the **[SELECT]** soft key.

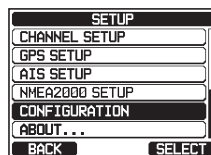

4. Rotate the **DIAL/ENT** knob to select “STATION NAME”, then press the **[SELECT]** soft key.

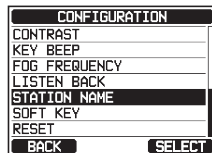

5. With the second station microphone connected, rotate the **DIAL/ENT** knob to select the unit to be named, then press the **[SELECT]** soft key.

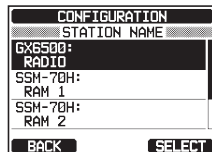

6. Rotate the **DIAL/ENT** knob to select to scroll through the first letter of the new station name.

7. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.




8. Repeat steps 6 and 7 until the name is complete. The name can consist of up to ten characters, and if you do not use all ten characters, select “→” to move to the next space. This method can also be used to enter a blank space in the name.

If a mistake was made entering in the station name, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform steps 6 and 7.

9. When finished entering the station name (using ten characters or less), press the **[FINISH]** soft key to advance to the second station name entry.

10. Rotate the **DIAL/ENT** knob to select “SSM-70H”, then press the **[SELECT]** soft key.

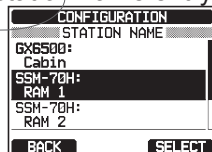

11. Rotate the **DIAL/ENT** knob to select to scroll through the first letter of the new station name.

12. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.



13. Repeat steps 11 and 12 until the name is complete. The name can consist of up to ten characters, and if you do not use all ten characters, select “→” to move to the next space. This method can also be used to enter a blank space in the name.

If a mistake was made entering in the station name, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform steps 11 and 12.

14. When finished entering the station name (using ten characters or less), press the **[FINISH]** soft key.



15. Press the **CLEAR** key to return to radio operation.

14.8 SOFT KEYS


From this menu, you can assign desired functions to each soft key from numbers 01 to 12. You can also set how long the soft key icon will be displayed after the corresponding soft key is pressed.

14.8.1 Key Assignment



1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CONFIGURATION”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “SOFT KEY”, then press the **[SELECT]** soft key.

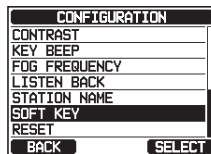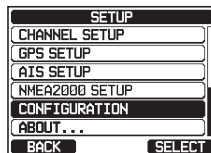


5. Rotate the **DIAL/ENT** knob to select “KEY ASSIGNMENT”, then press the **[SELECT]** soft key.

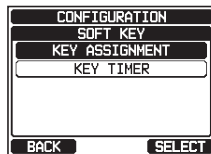


6. Rotate the **DIAL/ENT** knob to select the key number to be programmed, and press the **[SELECT]** soft key.

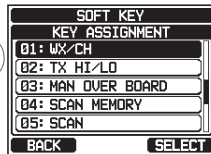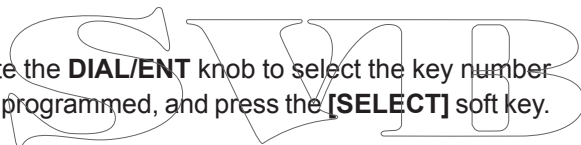

7. Rotate the **DIAL/ENT** knob to select a new function to be assigned, and press the **[ENTER]** soft key. Available functions are listed below. By selecting “NONE” the soft key assignment is removed.
8. Repeat steps 6 and 7 to program other soft keys. Up to 24 functions can be assigned.

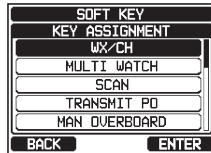

Up to 12 functions can be assigned to the soft keys. Pressing the **▶/◀** key each time shows three different soft keys.

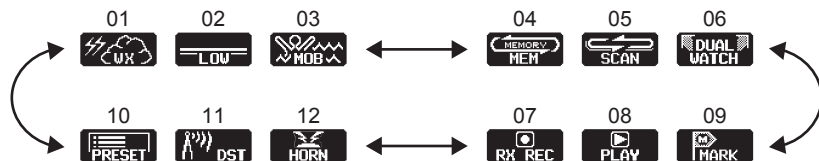




(The illustration above is the default setting.)

9. Press the **CLEAR** key to return to radio operation.


DISPLAY	FUNCTION	SOFT KEY NUMBERS ASSIGNED AS DEFAULT (See the previous page.)
NONE	-	-
TX HI/LO	Selects transmit power.	02
WX/CH	Switches channels between weather and marine.	01
SCAN	Turns on or off scanning function.	05
DUAL WATCH	Starts and stops dual watch scan.	06
MARK POSITION	Marks the current position for a "Waypoint".	09
SCAN MEMORY	Add or remove channels from memory channel scan.	04
PRESET	Programs or deletes the preset memory channel.	10
MAN OVER BOARD	Marks the position where a person falls overboard.	03
NOISE CANCEL	Enables the noise canceling settings display.	
CH NAME	Edit channel names.	
STROBE	Turns on or off the strobe light LED.	
SCRAMBLER	Configures the secret communication settings.	
COMPASS	Enables the "Compass" display.	
WAYPOINT	Enables the "Waypoint" or "Route" navigation display.	
PA/FOG HORN	Select PA, FOG HORN, or HORN mode.	
INTERCOM	Activates intercom between radio and RAM4 mic (optional RAM4 required).	
GPS LOGGER	Starts and stops logging position data.	
AIS DISPLAY	Shows the "AIS" display.	
FOG HORN	Activates the Fog Horn function.	12
PUBLIC ADDRESS	Activates the PA function.	
RX RECORD	Records received voices.	07
RX SENSE	Toggles between LOCAL and DISTANCE.	11
IC SELECT	Select the device you want to communicate with using the intercom.	
PLAY	Plays recorded voices.	08

14.8.2 Key Timer

1. Press the **MENU** key to display "MENU".
2. Rotate the **DIAL/ENT** knob to select "SETUP", then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select "CONFIGURATION", then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select "SOFT KEY", then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select "KEY TIMER", then press the **[SELECT]** soft key.

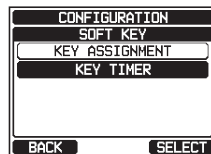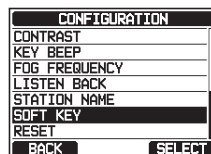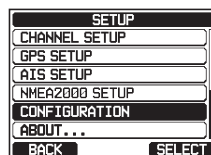






6. Rotate the **DIAL/ENT** knob to select the desired time.
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLEAR** key to return to radio operation.

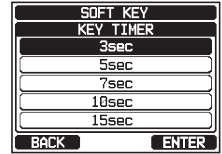

14.9 RESET


You may initialize the memories and settings of the setup categories independently or return the transceiver to the original factory setting.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CONFIGURATION”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “RESET”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the desired category. You can select one from “DSC/GM SETUP”, “WAYPOINT SETUP”, “CHANNEL SETUP”, “GPS SETUP”, “AIS SETUP”, “CONFIGURATION”, or “FACTORY” (all settings except the MMSI will be initialized).
6. Press the **[SELECT]** soft key.
7. Press the **[YES]** soft key. (To cancel, press the **[NO]** soft key.)
8. Press the **[OK]** soft key.
9. Press the **CLEAR** key to return to radio operation.

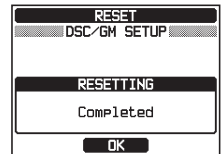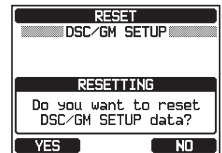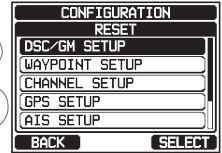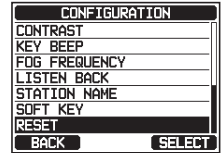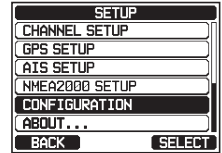

14.10 SUMMARY OF THE CONFIGURATION SETUP

Item	Description	Default Value
DISPLAY MODE	Toggles LCD display mode between daytime and nighttime mode	DAY MODE
DIMMER	Adjusts the backlight level of the LCD and keypad	7
CONTRAST	Adjusts the contrast of the LCD	15
KEY BEEP	Adjusts the volume of beep tone when a key is pressed	4
FOG FREQUENCY	Sets the tone frequency when transmitting FOG	400Hz
LISTEN BACK	Sets the operation of the EMERGENCY LED	ON
STATION NAME	Sets the names of the radio and external devices	GX6500: RADIO SSM-70H: RAM 1 SSM-70H: RAM 2
SOFT KEY KEY TIMER	Sets the assignment and display time of the soft keys	10 sec
RESET	Initializes the memories and settings	-

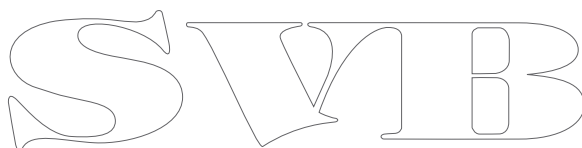A large, stylized outline logo consisting of the letters 'S', 'V', 'M', and 'B' in a decorative, serif font. The letters are interconnected and have a classic, elegant appearance.

15 CHANNEL FUNCTION SETUP

15.1 CHANNEL GROUP




This menu item allows you to select a channel group from USA, Canada, and International.

Refer to section “8.6 USA, INTERNATIONAL, AND CANADA MODE” for details.

15.2 WEATHER ALERT

Enables/disables the NOAA Weather Alert function. The default setting is “OFF”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “WEATHER ALERT”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “ON” or “OFF”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLEAR** key to return to radio operation.

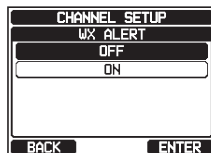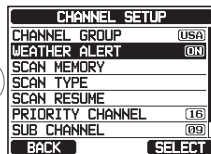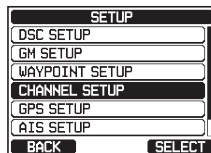

15.3 SCAN MEMORY

To be able to scan channels the radio must be programmed. This section allows channels to be stored in scan memory.

Refer to section “8.9.2 Programming Scan Memory” for details.

15.4 SCAN TYPE




This selection is used to select the scan mode between “MEMORY” and “PRIORITY”. The default setting is “PRIORITY”.

Refer to section “8.9.1 Selecting the Scan Type” for details.

15.5 SCAN RESUME

This selection is used to select the time the **GX6500E/GX6000E** waits after a transmission ends before the radio starts to scan channels again. The default setting is 2 seconds.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “SCAN RESUME”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the desired resume time, default is 2 seconds. The resume time can be set to “1sec” through “5sec”.
6. Press the **[ENTER]** soft key to store the new setting.
7. Press the **CLEAR** key to return to radio operation.

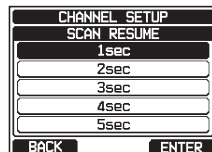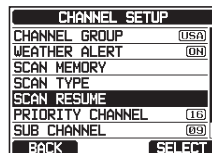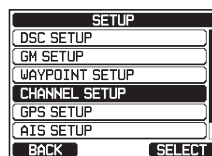

15.6 MULTI WATCH



This selection is used to select the watch type between “DUAL” and “TRIPLE”. The default setting is “DUAL”.

Refer to section “**8.8 MULTI WATCH (TO PRIORITY CHANNEL)**” for details.


15.7 PRIORITY CHANNEL

This procedure allows the radio to use a different priority channel used when priority scanning. By default the radio priority channel is set to Channel 16.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “PRIORITY CHANNEL”, then press the **[SELECT]** soft key.

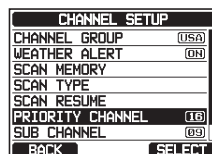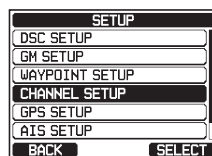



5. Rotate the **DIAL/ENT** knob to select the desired channel to be a priority.
6. Press the **[ENTER]** soft key to store the new setting.
7. Press the **CLEAR** key to return to radio operation.

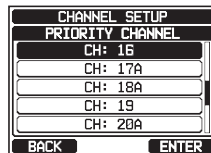


15.8 SUB CHANNEL

By default the sub channel is set to Channel 9. This procedure allows the radio to assign a different sub channel for instant access.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “SUB CHANNEL”, then press the **[SELECT]** soft key.

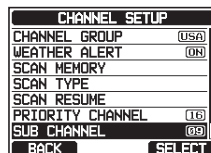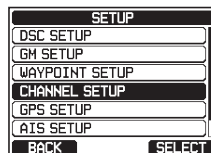

5. Rotate the **DIAL/ENT** knob to select the desired channel to be a sub channel.
6. Press the **[ENTER]** soft key to store the new setting.
7. Press the **CLEAR** key to return to radio operation.


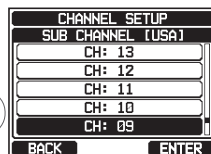


15.9 CHANNEL NAME


When the radio (“Normal”) mode is selected, the display will show a name under the channel number. This name describes the use of the channel. The radio has the capability to customize the name by the procedure below.

Example: CH69 PLEASURE to HOOKUP

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “CHANNEL NAME”, then press the **[SELECT]** soft key.

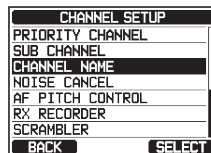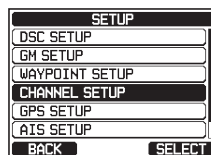

5. Rotate the **DIAL/ENT** knob to select the channel to be named, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to scroll through the first letter of the new channel name.

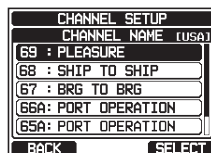


7. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.
8. Repeat step 6 and 7 until the name is complete. The name can consist of up to 16 characters, if you do not use all 16 characters, select “→” to move to the next space. This method can also be used to enter a blank space in the name.



If a mistake was made entering in the channel name, rotate the **DIAL/ENT** knob to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform steps 6 and 7.

9. When finished entering the channel name (using fifteen characters or less), press the **[FINISH]** soft key to save the name.
10. If you want to enter the name of another channel, repeat the steps 5 through 9.
11. Press the **CLEAR** key to return to radio operation.


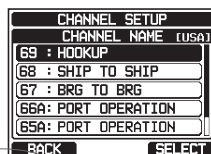


When “CHANNEL NAME” is assigned to the soft key, you can show the channel name input display directly by pressing the **[NAME]** soft key during radio operation.




15.10 NOISE CANCELLATION

Enables/disables the Noise-canceling function of the transmitter and receiver independently.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “NOISE CANCEL”, then press the **[SELECT]** soft key.

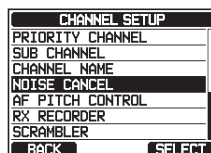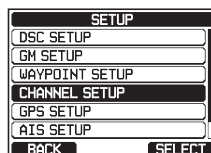




5. Rotate the **DIAL/ENT** knob to select “TX MODE”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select “ON” or “OFF”, then press the **[ENTER]** soft key.
7. Rotate the **DIAL/ENT** knob to select “RX MODE”, then press the **[SELECT]** soft key.
8. Rotate the **DIAL/ENT** knob to select the noise level from “LEVEL1” through “LEVEL4” or “OFF”, then press the **[ENTER]** soft key.
9. Press the **CLEAR** key to return to radio operation.

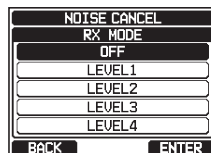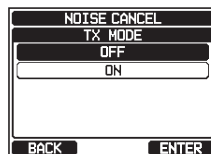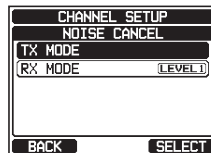

15.11 AUDIO FILTER OPERATION

This menu item allows you to select operation of the internal audio filter for your comfortable listening. The default setting is “NORMAL”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “AF PITCH CONTROL”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the desired filter operation.
6. Press the **[ENTER]** soft key to store the new setting.
7. Press the **CLEAR** key to return to radio operation.

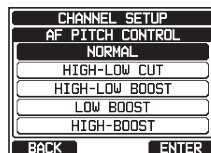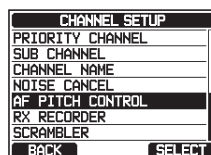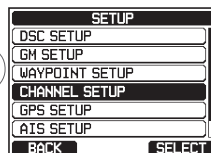





15.12 RX RECORDER

Configure settings of the function for recording received voices.

15.12.1 RX Recorder Function ON/OFF

Enable/disable the RX Recorder function. The default setting is “OFF”.



1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “RX RECORDER”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “ACTIVATION”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select “ON” or “OFF”, then press the **[ENTER]** soft key to store the new setting.
7. Press the **CLEAR** key to return to radio operation.

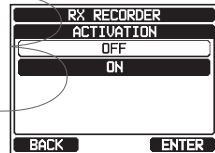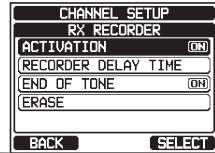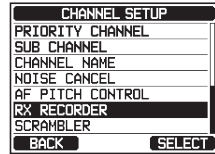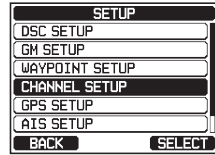



15.12.2 Setting for Recording Delay Time

Set the time interval until recording stops after the end of voice reception. The default setting is 3 seconds.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “RX RECORDER”, then press the **[SELECT]** soft key.

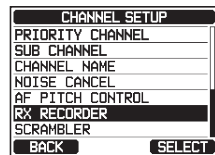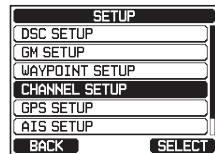



5. Rotate the **DIAL/ENT** knob to select “RECORDING DELAY TIME”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select the desired delay time. The delay time can be set to “1sec” through “5sec”.
7. Press the **[ENTER]** soft key to store the new setting.
8. Press the **CLEAR** key to return to radio operation.

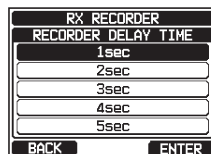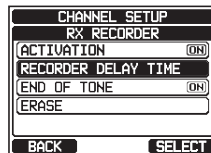



15.12.3 Setting for End of Tone

Enable/disable the tone function that indicates the end of recording when recording stops. The default setting is “ON”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “RX RECORDER”, then press the **[SELECT]** soft key.

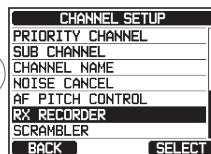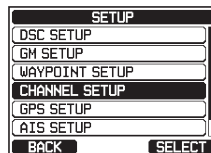






5. Rotate the **DIAL/ENT** knob to select “END OF TONE”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select “OFF” or “ON”, then press the **[ENTER]** soft key to store the new setting.
7. Press the **CLEAR** key to return to radio operation.

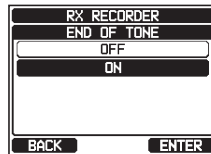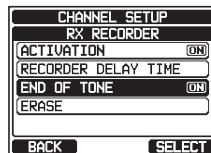

15.12.4 Data Erase

Delete recorded voice data.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “RX RECORDER”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “DATA ERASE”, then press the **[SELECT]** soft key.
6. Press the **[YES]** soft key. (To cancel, press the **[NO]** soft key.)
7. Press the **[OK]** soft key.
8. Press the **CLEAR** key to return to radio operation.

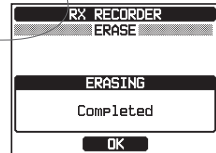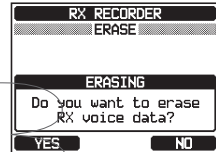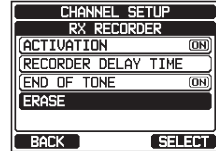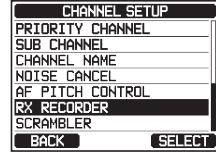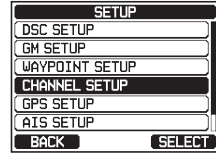



15.13 SCRAMBLER SETUP

Configure the voice scrambler setting. Two types of voice scrambler functions are available: the 4-code type (CVS2500A compatible) and the 32-code type (FVP-42 compatible for Furuno Electric FM-4721) (This function is not available for CH16 and CH70).


NOTE

Operates only when the optional scrambler function is enabled. This menu will not appear unless a scrambler function is enabled. For details, consult your dealer.


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CHANNEL SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “SCRAMBLER”, then press the **[SELECT]** soft key.

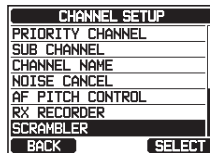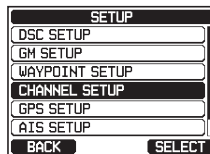


5. Rotate the **DIAL/ENT** knob to select “TYPE”, then press the **[SELECT]** soft key.

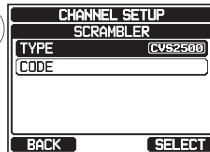


6. Rotate the **DIAL/ENT** knob to select “CVS2500” or “FVP-42”, then press the **[ENTER]** soft key.
Note: Changing this setting will delete all scrambler codes set for each channel.

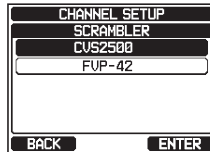


7. Rotate the **DIAL/ENT** knob to select “CODE”, then press the **[SELECT]** soft key.

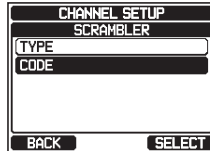

8. Rotate the **DIAL/ENT** knob to select the channel to be scrambled, then press the **[SELECT]** soft key.
Note: CH16 and CH70 cannot be used.

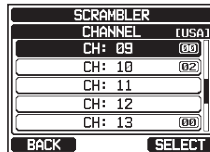

9. Rotate the **DIAL/ENT** knob to select the scrambler code. The scrambler code can be set from “00” to “03” or “OFF” (While **FVP-42** is selected in step 6, the scrambler code can be set from “00” to “32” or “OFF”). When “OFF” is selected the voice scrambler is disabled.

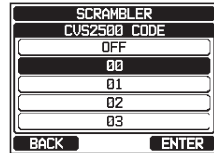

10. Press the **[ENTER]** soft key to store the selected code.
 11. Repeat steps 8 through 10 to set other channels.
 12. Press the **CLEAR** key to return to radio operation.

15.14 SUMMARY OF THE CANNEL FUNCTION SETUP

Item	Description	Default Value
CHANNEL GROUP	Selects the channel group	USA: USA
WEATHER ALERT	Turns on or off the Weather Alert function	OFF
SCAN MEMORY	Add or remove a channel to Scan Memory	-
SCAN TYPE	Select priority scan or memory scan	PRIORITY
SCAN RESUME	Sets the resume time of scanning	2sec
MULTI WATCH	Selects Dual Watch or Triple Watch	DUAL
PRIORITY CHANNEL	Selects a priority channel	CH16
SUB CHANNEL	Selects a Sub Channel	CH09
CHANNEL NAME	Edit the name of memory channels	-
NOISE CANCEL	Turns on or off of noise cancelling function (independently available for transmission and reception)	OFF
AF PITCH CONTROL	Selects the audio filter operation	NORMAL
RX RECORDER	Configures settings of the function for recording received voices	ACTIVATION: OFF RECORDING DELAY TIME: 3sec END OF TONE: ON DATA ERASE: -
SCRAMBLER	Configures the secret communication settings	TYPE: CVS2500 CORD: -

16 DSC SETUP

16.1 INDIVIDUAL DIRECTORY

The **GX6500E/GX6000E** has a DSC directory that allows you to store a vessel or person's name and the associated MMSI you wish to contact via individual calls, position requests and position report transmissions.

To transmit an individual call you must program this directory with information of the vessel you wish to contact, similar to a cellular phones telephone directory. Refer to section "**10.4.1 Setting up the Individual / Position Call Directory**" for details.

16.2 INDIVIDUAL REPLY

This menu item sets up the radio to automatically (default setting) or manually respond to a DSC Individual call requesting you to switch to a working channel for voice communications. When "MANUAL" is selected the MMSI of the calling vessel is shown allowing you to see who is calling. This function is similar to caller id on a cellular phone.

Refer to section "**10.4.2 Setting up the Individual Call Reply**" for details.

16.3 INDIVIDUAL ACKNOWLEDGMENT

The radio can be setup to transmit a reply automatically (default) or set so the radio will not reply to an individual call.

Refer to section "**10.4.3 Enabling the Individual Call Acknowledgment**" for details.

16.4 INDIVIDUAL RINGER

The radio can be setup to ring like a telephone to alert you the radio received a DSC individual call. The default setting is 2 minutes, however this can be changed to 5, 10 or 15 seconds with the procedure below.

Refer to section "**10.4.6 Setting up the Individual Call Ringer**" for details.

16.5 GROUP DIRECTORY

For this function to operate, the same group MMSI must be programmed into all the DSC VHF radios within the group of vessels that will be using this feature.

Refer to section "**10.5.1 Setting up a Group Call**" for details.

16.6 POSITION REPLY

The **GX6500E/GX6000E** can be set up to automatically (default setting) or manually send your position when requested by another vessel. This selection is important if you are concerned about someone polling the position of your vessel that you may not want to. In the manual mode you will see the MMSI (Maritime Mobile Service Identity Number) or persons name shown on the display allowing you to choose to send your position to the requesting vessel. Refer to section “**10.6.1 Setting up a Position Request Reply**” for details.

16.7 AUTO POSITION POLLING

The **GX6500E/GX6000E** has the capability to automatically track seven vessels programmed into the individual directory.

Refer to section “**10.9 AUTO POSITION POLLING**” for details.

16.8 AUTO POSITION INTERVAL

The **GX6500E/GX6000E** has the capability to automatically track seven vessels programmed into the individual directory.

Selecting the auto position polling time interval between position request transmissions to be setup.



Refer to section “**10.9.2 Setting up the Polling Time Interval**” for details.

16.9 AUTO CHANNEL CHANGE


When a DSC distress or an all ships (urgency or safety) call is received, the **GX6500E/GX6000E** will automatically switch to Channel 16.

This menu selection allows the automatic switch time to be changed. The default selection is 30 seconds.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “AUTO CHANNEL CHANGE”, then press the **[SELECT]** soft key.

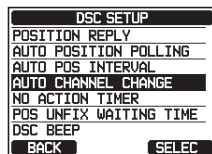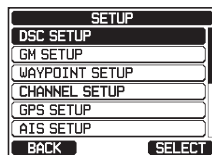

5. Rotate the **DIAL/ENT** knob to select the desired time, then press the **[ENTER]** soft key.
6. Press the **CLEAR** key to return to radio operation.

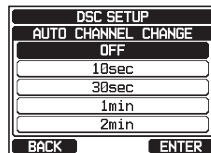

When the “OFF” is selected, “[C]” icon will light up on the screen.





16.10 NO ACTION TIMER


If no key is pressed during the “MENU” or “DSC CALL” screen, the **GX6500E/GX6000E** will automatically return to radio operation.

The default selection is 15 minutes.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “NO ACTION TIMER”, then press the **[SELECT]** soft key.

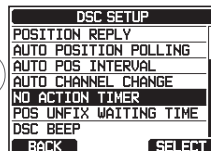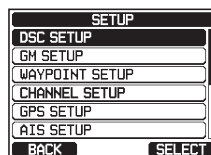

5. Rotate the **DIAL/ENT** knob to select the desired time, then press the **[ENTER]** soft key.
6. Press the **CLEAR** key to return to radio operation.



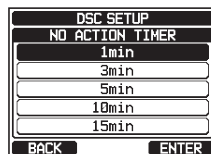


16.11 WAIT TIME FOR POSITION FIX

This menu allows you to select the maximum wait time till obtaining a position information when receiving a distress call, POS Report call, or acknowledgment to POS request call.

The default selection is 15 seconds.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “DSC SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “POS UNFIX WAITING TIME”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the desired time, then press the **[ENTER]** soft key.
6. Press the **CLEAR** key to return to radio operation.

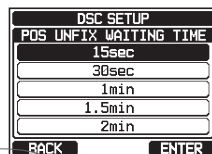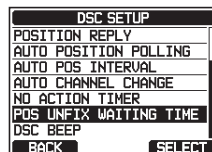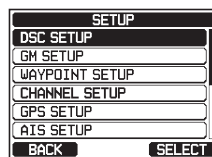

16.12 DSC BEEP

This feature allows the alarm beeps to be turned on or off when a DSC call is received. The DSC calls that can be customized are: individual, group, all ships, position request, position report, geographical, polling, and DSC test. Refer to section “**10.5.4 Setting up the Group Call Ringer**” for details.

16.13 SUMMARY OF THE DSC SETUP MENU

Item	Description	Default Value
INDIVIDUAL DIRECTORY	Enter or edit addresses used for individual call	-
INDIVIDUAL REPLY	Selects a reply to individual call	MANUAL
INDIVIDUAL ACK.	Selects the message to be sent automatically as an individual call acknowledgement	ABLE
INDIVIDUAL RING	Selects the ringing time when an individual call or a position request is received	2 min
GROUP DIRECTORY	Enter or edit addresses used for group call	-
POSITION REPLY	Selects reply mode when receiving a position call	AUTO
AUTO POSITION POLLING	Selects the AUTO POSITION POLLING operation type	AUTO POS REQUEST
AUTO POS INTERVAL	Selects the transmission interval of AUTO POSITION POLLING signal	30 sec
AUTO CHANNEL CHANGE	Selects the delay time to move to the requested channel automatically after receiving a distress call, All Ship call, or group call	30 sec
NO ACTION TIMER	Selects the delay time to return to radio operation automatically after no key press	15 min
POS UNFIX WAITING TIME	Sets the maximum wait time to obtain position information when receiving a distress call, POS Report call, or acknowledgement to POS request call	15 sec
DSC BEEP	Turns on or off the audible alarm when receiving a DSC call	INDIVIDUAL CALL: ON GROUP CALL: ON ALL SHIPS: ON POS REQUEST: OFF POS REPORT: ON GEOGRAPHICAL: ON POLLING CALL: OFF DSC TEST CALL: OFF








17 GPS SETUP

The “GPS Setup” mode allows the parameters for the **SCU-31** external GPS antenna (option) to be customized for your operating requirements.

17.1 ORDER OF PRIORITY

Specify the order of priority of the connection devices to be used when obtaining location information.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “ORDER OF PRIORITY”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “PRIMARY”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select “OPTION GPS”, “NMEA 2000”, or “NMEA 0183”, then press the **[ENTER]** soft key to save the new setting.
7. Rotate the **DIAL/ENT** knob to select “SECONDARY”, then press the **[SELECT]** soft key.
8. Rotate the **DIAL/ENT** knob to select one of the two devices that you did not select for “PRIMARY”, then press the **[ENTER]** soft key to save the setting.
9. Press the **CLEAR** key to return to radio operation.

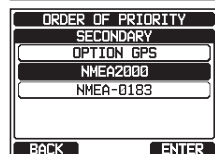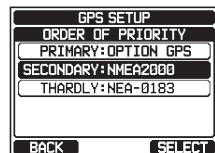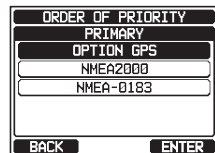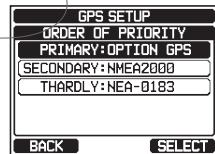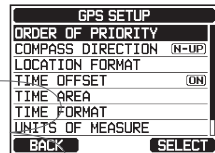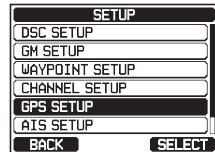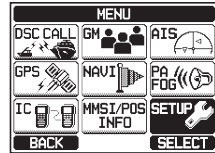




NOTE

After setting the “PRIMARY” and “SECONDARY” devices, the last device will be displayed as “THIRDLY”. “THIRDLY” is set automatically and you cannot specify the “THIRDLY” device.

17.2 DISPLAY DIRECTION

This menu item selects the compass direction to be shown on the **GX6500E/GX6000E** display. The default setting is “COURSE-UP”.



1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “COMPASS DIRECTION”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the desired direction from “COURSE-UP” and “NORTH-UP”.
6. Press the **[ENTER]** soft key to save the new setting.
7. Press the **CLEAR** key to return to radio operation.

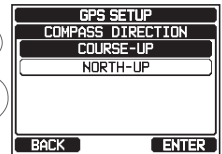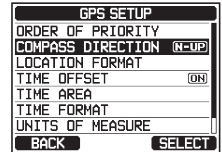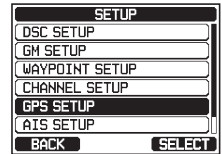


17.3 LOCATION FORMAT

This menu item selects the coordinate system to be shown on the **GX6500E/GX6000E** display. The default setting is “ddd°mm.mmmm”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “LOCATION FORMAT”, then press the **[SELECT]** soft key.

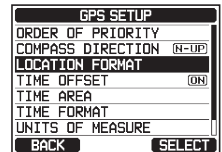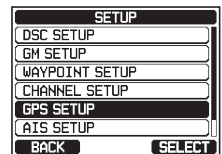

5. Rotate the **DIAL/ENT** knob to select the desired coordinate system. The location format can be selected from “ddd°mm.mmmm” and “ddd°mm’ss””.
6. Press the **[ENTER]** soft key to save the new setting.
7. Press the **CLEAR** key to return to radio operation.

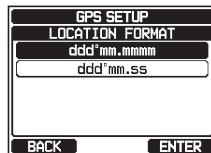

17.4 TIME OFFSET

Sets the local time offset between UTC (Universal Time Coordinated) and local time shown on the display. The offset is added or subtracted from the time received from the GPS.

Refer to section “6.9.1 Changing the Gps Time” for details.

17.5 TIME AREA

This menu selection allows the radio to show UTC time or local time with the offset.

Refer to section “6.9.2 Changing the Time Area” for details.

17.6 TIME FORMAT




This menu selection allows the radio to show time in 12-hour or 24-hour format.

Refer to section “6.9.3 Changing the Time Format” for details.


17.7 UNITS OF MEASURE

This section allows you to set the speed, distance and altitude units.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “UNIT OF MEASURE”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the item you want to set.
6. Press the **[SELECT]** soft key.

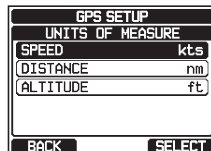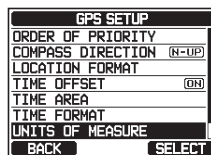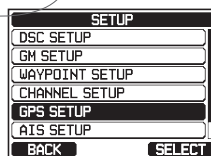

7. Rotate the **DIAL/ENT** knob to select the unit.
8. Press the **[ENTER]** soft key to store the new setting.
9. Press the **CLEAR** key to return to radio operation.

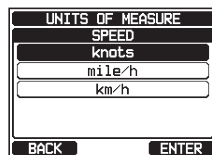

17.8 MAGNETIC VARIATION

This selection allows customizing the GPS COG (Course Over Ground) indication on the normal and compass pages and BRG on the waypoint and AIS pages. Refer to section “6.9.4 Changing Cog to True or Magnetic” for details.

NOTE

Setting to “ON” is effective only when the RMC sentences with magnetic data are input from external devices such as a GPS receiver.




17.9 NMEA 0183 IN/OUT

17.9.1 Data Speed


This menu is used to setup the NMEA 0183 baud rate of the GPS input (Blue and Green wires) and DSC output (Gray and Brown wires). The default setting is 4800 bps.

When 38400 bps is selected the AIS sentences (VDM) and DSC sentences (DSC & DSE) both are output on the Gray and Brown wires after a DSC distress, position request or AIS transmission is received.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “NMEA 0183 IN/OUT”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “DATA SPEED”, then press the **[SELECT]** soft key.

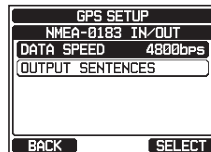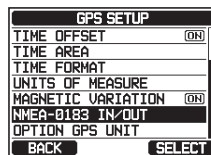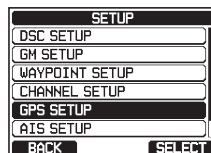

6. Rotate the **DIAL/ENT** knob to select the desired speed from “4800bps” and “38400bps”.
7. Press the **[ENTER]** soft key to save the new setting.
8. Press the **CLEAR** key to return to radio operation.

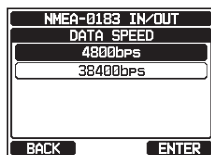


17.9.2 Output Sentences


This selection is used to setup the NMEA output sentences of the **GX6500E/GX6000E**.

By default, all the NMEA sentences are turned “OFF”.


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “NMEA 0183 IN/OUT”, then press the **[SELECT]** soft key.

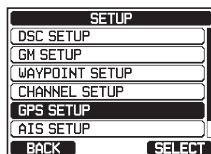



5. Rotate the **DIAL/ENT** knob to select “OUTPUT SENTENCES”, then press the **[SELECT]** soft key.

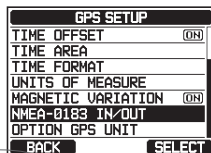

6. Rotate the **DIAL/ENT** knob to select the desired sentence type, then press the **[SELECT]** soft key.

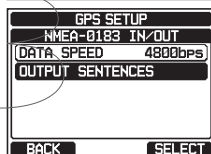

7. Rotate the **DIAL/ENT** knob to select “ON” or “OFF”.
8. Press the **[ENTER]** soft key to save the new setting.
9. Repeat steps 6 through 8 to set the other sentences.
10. Press the **CLEAR** key to return to radio operation.

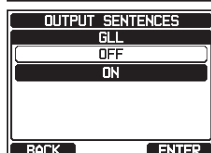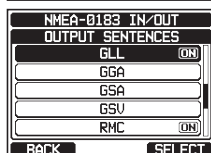

NOTE

- Data output will be performed based on the data acquisition order of priority configured from “ORDER OF PRIORITY”. Refer to section “**18.1 ORDER OF PRIORITY**” for details.
- While “UNIT POWER” of “OPTION GPS UNIT” is set to OFF, NMEA sentences will not be output. (OPTION GPS reception data will be output as is.)
- The output interval of each NMEA sentence depends on the output timing on the input device. However, sentences which include POS data will be output at intervals of two seconds or less.
- When all sentences are set to be output, depending on the baud rate, not all sentences can be output at intervals of one second or less. GSA and GSV sentences will be output at intervals of around five seconds.




17.10 OPTION GPS UNIT

Change the OPTION GPS UNIT setting.


17.10.1 Unit Power

When you use the optional Standard Horizon GPS Antenna (**SCU-31**), set this selection to “ON”. The default setting is “OFF”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “OPTION GPS UNIT”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “UNIT POWER”, then press the **[SELECT]** soft key.

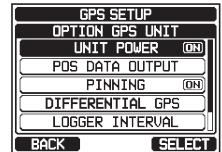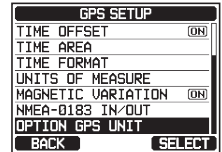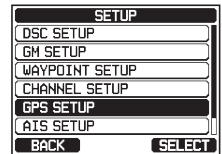


6. Rotate the **DIAL/ENT** knob to select “OFF” or “ON”.
7. Press the **[ENTER]** soft key to store the new setting.
8. Press the **CLEAR** key to return to radio operation.

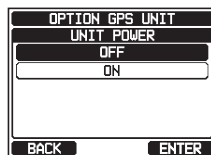


17.10.2 Position Data Output

Select the connection device to be used when outputting position data.


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “OPTION GPS UNIT”, then press the **[SELECT]** soft key.

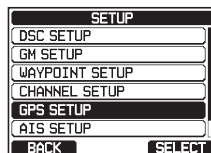



5. Rotate the **DIAL/ENT** knob to select “POS DATA OUTPUT”, then press the **[SELECT]** soft key.

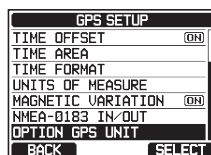

6. Rotate the **DIAL/ENT** knob to select “NMEA 2000” or “NMEA 0183”, then press the **[SELECT]** soft key.

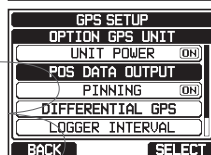


7. Rotate the **DIAL/ENT** knob to select “OFF” or “ON”.
8. Press the **[ENTER]** soft key to store the new setting.
9. Press the **CLEAR** key to return to radio operation.

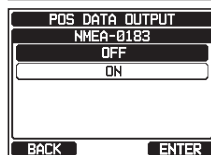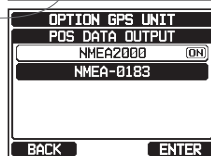


17.10.3 Pinning

This selection is used to enable or disable position updates when the vessel is not underway. The default setting is “ON”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “OPTION GPS UNIT”, then press the **[SELECT]** soft key.

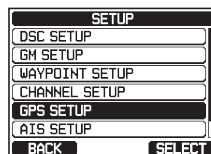


5. Rotate the **DIAL/ENT** knob to select “PINNING”, then press the **[SELECT]** soft key.

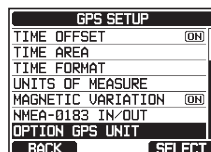


6. Rotate the **DIAL/ENT** knob to select “OFF” or “ON”.

ON: When pinning is turned on, the **GX6500E/GX6000E** will not update its position unless the vessel travels over 10Ft.

OFF: When the vessel is underway or stopped, the **GX6500E/GX6000E** continuously updates its position. This improves accuracy of the position fix.

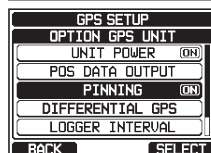


7. Press the **[ENTER]** soft key to save the new setting.
8. Press the **CLEAR** key to return to radio operation.

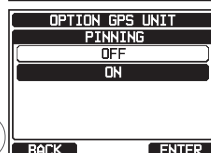




17.10.4 SBAS (Satellite Based Augmentation System)

This selection enables or disables SBAS such as WAAS, EGNOS and MSAS as some areas (Australia for example) can have problems with GPS reception with SBAS enabled. The default setting is “ON”.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.


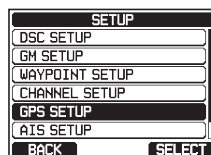


4. Rotate the **DIAL/ENT** knob to select “OPTION GPS UNIT”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “DIFFERENTIAL GPS”, then press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select “OFF” or “ON”.
7. Press the **[ENTER]** soft key to store the new setting.
8. Press the **CLEAR** key to return to radio operation.

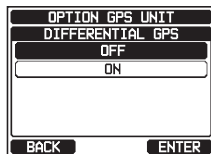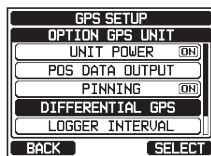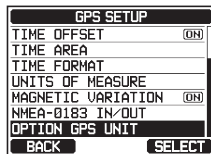


17.10.5 Logger Interval


1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “OPTION GPS UNIT”, then press the **[SELECT]** soft key.

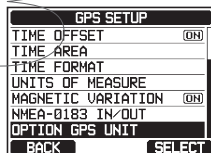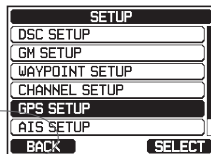

5. Rotate the **DIAL/ENT** knob to select “LOGGER INTERVAL”, then press the **[SELECT]** soft key.

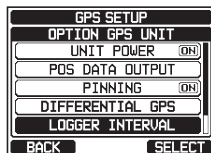

6. Rotate the **DIAL/ENT** knob to select the desired time and press the **[ENTER]** soft key.






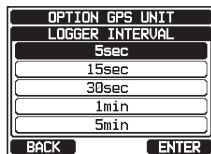


Note: Log time for each logger interval setting

- 15 sec: Aprox. 25 hours
 - 30 sec: Aprox. 50 hours
 - 1 min: Aprox. 100 hours
 - 2 min: Aprox. 200 hours
 - 5 min: Aprox. 500 hours
7. Press the **CLEAR** key to return to radio operation.

17.10.6 Log Erase

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “GPS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “OPTION GPS UNIT”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select “LOG ERASE”, then press the **[SELECT]** soft key.
6. Press the **[YES]** soft key. (To cancel, press the **[NO]** soft key.)
7. Press the **[OK]** soft key.
8. Press the **CLEAR** key to return to radio operation.

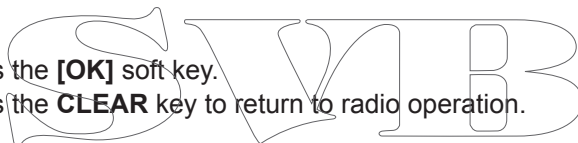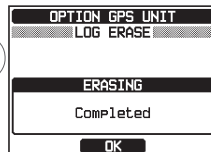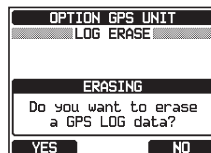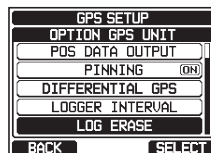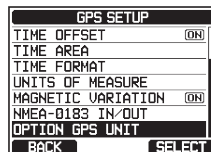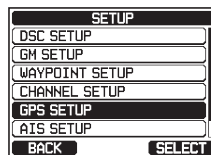


17.11 SUMMARY OF THE GPS SETUP

Item	Description	Default Value
ORDER OF PRIORITY	Sets the order of priority of the connection devices when obtaining position information	PRIMARY: OPTION GPS SECONDARY: NMEA 2000 THIRLDLY: NMEA 0183
COMPASS DIRECTION	Selects the compass direction to be displayed	COURSE-UP
LOCATION FORMAT	Selects the coordinate system to be displayed	ddd°mm.mmmm
TIME OFFSET	Sets the offset time from the UTC (available only when "LOCAL" is selected in the item "TIME AREA")	00:00
TIME AREA	Selects the time location to be displayed, from UTC or local	UTC
TIME FORMAT	Selects the time format to be displayed, 12-hour or 24-hour (fixed to "24H" when "UTC" is selected in the item "TIME AREA")	24hour
UNITS OF MEASURE	Selects the unit of measure when displaying speed, distance, and altitude	SPEED: kts (knots) DISTANCE: nm (nautical mile) ALTITUDE: ft (feet)
MAGNETIC VARIATION	Enables/disables the magnetic variation function	OFF
NMEA 0183 IN/OUT	Sets the NMEA 0183 data speed and enables/disables NMEA sentences	DATA SPEED: 4800bps OUTPUT SENTENCE: All OFF
OPTION GPS UNIT		
UNIT POWER	Enables/disables the OPTION GPS UNIT	OFF
POS DATA OUTPUT	Selects the connection device when outputting position data	NMEA 2000
PINNING	Turns on or off GPS position updates for vessel not underway	ON
DIFFERENTIAL GPS	Turns on or off of use of SBAS	ON
LOGGER INTERVAL	Selects the interval time of logging	2 min
LOG ERASE	Erases the log data	-

18 SSM-70H (RAM4) REMOTE MIC OPERATION

When a remote microphone is connected to the **GX6500E/GX6000E**, all VHF, DSC, setup menus, AIS, Navigation, GM (Group Monitor) functions and PA/ Fog modes can be remotely operated. The **SSM-70H**'s operation is same as **GX6500E/GX6000E** except the receiver audio volume setting and squelch level setting. The reason for the same operation is to make the operation of the radio and **SSM-70H** mic easy. For specific operation of the **SSM-70H** mic review sections in the radio manual. The **SSM-70H** is supplied with 23 feet (7 m) of routing cable and can be extended up to 70 feet (21 m) using three 23 feet (7 m) extension cables model **MEK-4**. The Intercom feature can be used between the **SSM-70H** and the **GX6500E/GX6000E**. In addition, speaker wires are supplied at the panel mount of the routing cable for external speakers to be connected in noisy environments.

18.1 REMOTE MIC CONTROLS

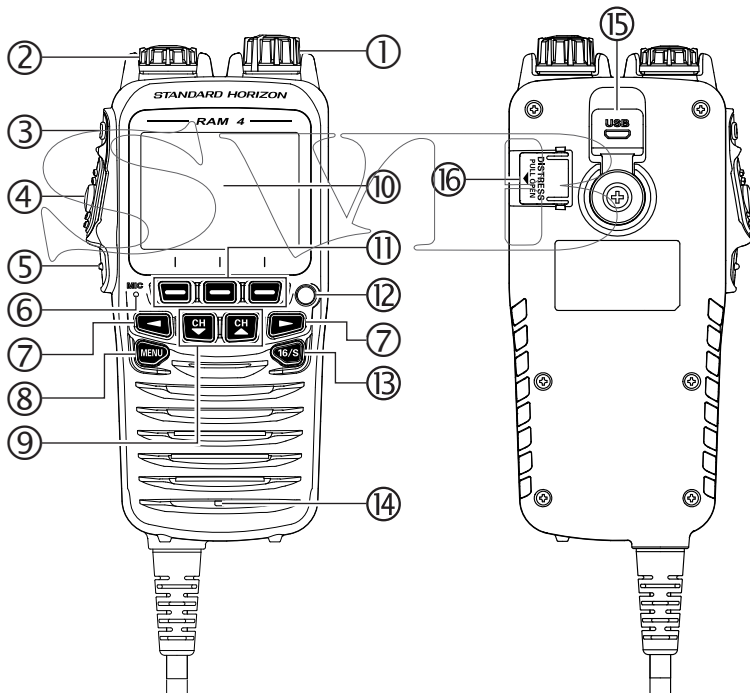

① Power/VOL knob

Press and hold this knob to turn the transceiver and the remote mic on or off.

Turns the adjusts the internal speaker volume.

② **DIAL/ENT** knob

While the normal screen is displayed, rotate the **DIAL/ENT** knob to select your desired channel. While the MENU screen is displayed, rotate the knob to select your desired menu item.

SECONDARY USE

Press this knob to enter a selection in the MENU.

③ **SQL** key (Squelch control)

Press this key to activate the squelch adjusting mode. Press the **CH▲** or **CH▼** key to adjust the squelch threshold level.

④ **PTT** (Push-To-Talk) switch

Push this switch to enable the transmitter.

⑤ **CLEAR/☐** key

Press this key to cancel a menu selection. Press and hold this key to activate the key lock function. Press and hold this key again to deactivate the key lock function.

⑥ Microphone

When spoken into transmits your voice with reduction of background noise, using Clear Voice Noise Reduction Technology.

Note: Position your mouth about 1/2" (1.5 cm) away from the microphone hole and speak in a normal voice.

⑦ **◀/▶** key

Press these keys to switch the function menu.

SECONDARY USE

While the MENU screen is displayed, press the key to slide the on-screen menu to the right/left side.

⑧ **MENU** key

Press this key to access the MENU.

⑨ **CH▼/CH▲** key


These keys are used to change the operating channel.

Press the key momentarily, the channel increases/decreases one step. Holding the key, the channel increases/decreases continuously.

SECONDARY USE

- While the MENU screen is displayed, press the key to slide the on-screen menu upward/downward.
- When in the PA or Fog mode, press the key to change the channel.

- ⑩ Display
222 by 162 pixels full dot matrix display.
- ⑪ Soft keys
These three programmable keys can be customized through the setup menu mode. When pressing one of these keys briefly, the key functions will appear at the bottom of the display. Refer to section “**19.2 RAM4 SOFT KEY ASSIGNMENT**” for details.
- ⑫ Strobe Light
When the [**STROBE**] soft key is pressed, the internationally-recognized Morse Code “S.O.S” message will light and flash repeatedly.
From MENU → SETUP → CONFIGURATION → STROBE LED, you can select one option from “CONTINUOUS”, “SOS”, “BLINK 1”, “BLINK 2” and “BLINK 3”.
- ⑬ **16/S** key
Pressing this key immediately recalls channel 16 from any channel location. Holding down this key recalls the SUB channel (The default setting is channel 9). Pressing this key again reverts to the previous selected working channel.
- ⑭ Speaker
The internal speaker is located here.
- ⑮ **DATA** jack
Use the micro USB type B jack for **SSM-70H (RAM4)** firmware update.
- ⑯ **DISTRESS** key
This key is used to send a DSC distress call. Refer to section “**10 DIGITAL SELECTIVE CALLING (DSC)**”.

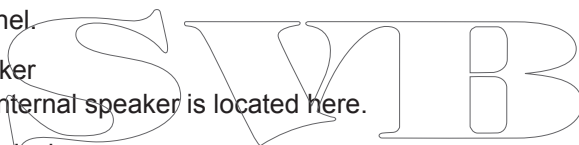

18.2 RAM4 SOFT KEY ASSIGNMENT

From this menu, you can assign desired functions to each **RAM4** soft key from numbers 01 to 12. You can also set how long the soft key icon will be displayed after the corresponding soft key is pressed. The keys maybe setup to control the following functions:

DISPLAY	FUNCTION	SOFT KEY NUMBERS ASSIGNED AS DEFAULT (See the next page.)
NONE	–	–
TX HI/LO	Selects transmit power.	02
WX/CH	Switches channels between weather and marine.	01
SCAN	Turns on or off scanning function.	05
DUAL WATCH	Starts and stops dual watch scan.	06
MARK POSITION	Marks the current position for a “Waypoint”.	09
SCAN MEMORY	Add or remove channels from memory channel scan.	04
PRESET	Programs or deletes the preset memory channel.	10
MAN OVER BOARD	Marks the position where a person falls overboard.	03
NOISE CANCEL	Enables the noise canceling settings display.	
CH NAME	Edit channel names.	
STROBE	Turns on or off the strobe light LED.	
SCRAMBLER	Configures the secret communication settings.	
COMPASS	Enables the “Compass” display.	
WAYPOINT	Enables the “Waypoint” or “Route” navigation display.	
PA/FOG HORN	Select PA, FOG HORN, or HORN mode.	
INTERCOM	Activates intercom between radio and RAM4 mic (optional RAM4 required).	
GPS LOGGER	Starts and stops logging position data.	
AIS DISPLAY	Shows the “AIS” display.	
FOG HORN	Activates the Fog Horn function.	12
PUBLIC ADDRESS	Activates the PA function.	
RX RECORD	Records received voices.	07
RX SENSE	Toggles between LOCAL and DISTANCE.	11
IC SELECT	Select the device you want to communicate with using the intercom.	
PLAY	Plays recorded voices.	08


NOTE

You can assign functions to soft keys on each of the transceiver and the optional **SSM-70H (RAM4)** remote mic.


18.2.1 Key Assignment

Configure all settings on the **SSM-70H (RAM4)** remote mic for which you want to assign functions to soft keys.



1. On the **RAM4** mic, press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “CONFIGURATION”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “SOFT KEY”, then press the **[SELECT]** soft key.

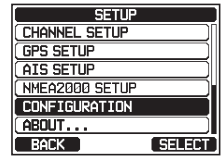


5. Rotate the **DIAL/ENT** knob to select “KEY ASSIGNMENT”, then press the **[SELECT]** soft key.

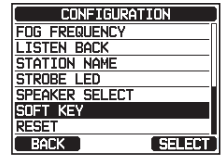


6. Rotate the **DIAL/ENT** knob to select the key number to be programmed, and press the **[SELECT]** soft key.

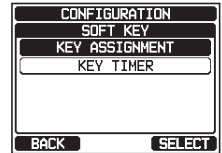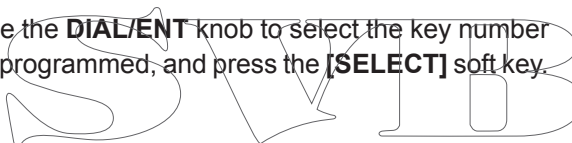

7. Rotate the **DIAL/ENT** knob to select a new function to be assigned, and press the **[ENTER]** soft key. Available functions are listed below. By selecting “NONE” the soft key assignment is removed.
8. Repeat steps 6 and 7 to program other soft keys. Up to 24 functions can be assigned.

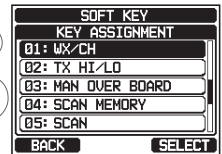


Up to 12 functions can be assigned to the soft keys. Pressing the **▶/◀** key each time shows three different soft keys.

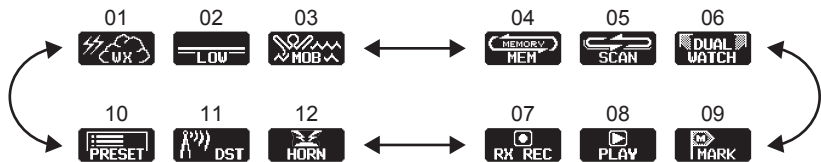

(The illustration above is the default setting.)

9. Press the **CLEAR/On** key to return to radio operation.

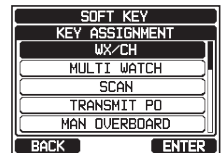

19 CONNECTING A USB DATA TERMINAL TO THE PC

The **GX6500E/GX6000E** outputs the following NMEA 0183 sentences 9600: GLL, GGA, GSA, GSV, RMC, DSC and DSE.


If you have further inquiries, please feel free to contact Product Support at:

Phone: (800) 767-2450

Email: marinetech@yaesu.com

You can also download the log data from the radio by using the PC Programming Software which may be downloaded from the Standard Horizon website. The PC Programming Software is compatible with Windows®.

To connect a PC, use the supplied USB cable through the **DATA** jack of the **GX6500E/GX6000E**.

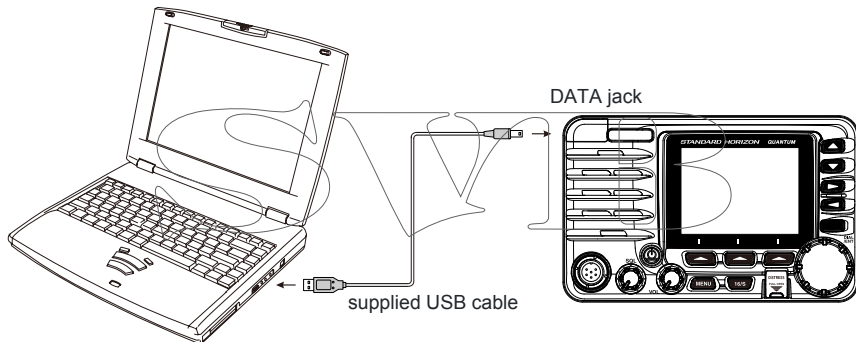

CAUTION

The **DATA** jack is NOT designed to be waterproof when the cover is opened. Connect the radio and PC in a dry location.

20 MAINTENANCE

The inherent quality of the solid-state components used in this transceiver will provide many years of continuous use. Taking the following precautions will prevent damage to the transceiver.

- Never key the microphone unless an antenna or suitable dummy load is connected to the transceiver.
- Ensure that the supply voltage to the transceiver does not exceed 16 VDC or fall below 11 VDC.
- Use only STANDARD HORIZON approved accessories and replacement parts.

In the unlikely event of serious problems, please contact your Dealer or our repair facility. Address and phone numbers for this facility, as well as warranty information, are contained in section “**23 WARRANTY**”.

20.1 REPLACEMENT PARTS

Occasionally an owner needs a replacement mounting bracket or knob. These can be ordered from our Parts Department by emailing yaesuparts@yaesu.com or calling:

Marine Division of YAESU U.S.A.

6125 Phyllis Drive, Cypress, California 90630

Telephone (714) 827-7600

Commonly requested parts, and their part numbers are listed below.

- **Power Cord:** T9027407
- **VOL and SQL Knob:** RA6057800
- **DIAL/ENT Knob:** RA6057700
- **Mounting Bracket:** RA6060600
- **Mounting Bracket Knob:** RA0978600
- **Microphone Hanger:** RA0458800
- **RAM4 Mic Routing Cable Assembly:** S8101512
- **USB Cable:** T9101648

20.2 FACTORY SERVICE

In the unlikely event that the radio fails to perform or needs servicing, please contact the following:

Standard Horizon

Attention Marine Repair Department

6125 Phyllis Drive, Cypress, California 90630, U.S.A.

Telephone (800) 366-4566

For repairs in Canada


Westcom Marine

488 East 62nd Avenue Vancouver BC V5X2G1

Telephone (604) 327-6280

An "RA" (Return Authorization) number is not necessary to send a product in for service. Include a brief note describing the problem along with your name, return address, phone number, and proof of purchase.

20.3 TROUBLESHOOTING CHART

SYMPTOM	PROBABLE CAUSE	REMEDY
Transceiver fails to power up.	No DC voltage to the transceiver, or blown fuse.	a. Check the 12VDC battery connections and the fuse. b. The  key needs to be pressed and held to turn the radio on.
Transceiver blows fuse when connected to power supply.	Reversed power wires.	Check the power cable for DC voltage, or replace the fuse (7A). Make sure the red wire is connected to the positive (+) battery post, and the black wire is connected to the negative (-) battery post. If the fuse still blows, contact your Dealer.
Popping or whining noise from the speaker while engine runs.	Engine noise.	Re-route the DC power cables away from the engine. Add noise suppressor on power cable. Change to resistive spark plug wires and/or add an alternator whine filter.
Sound is not emitted from the internal or external speaker.	Accessory cable.	Check the connections of the accessory cable. External speaker cable (WHITE/SHIELD) shorted together.
Sound is not emitted from the PA speaker.	Accessory cable.	Check the connections of the accessory cable. PA speaker cable (RED/SHIELD) shorted together.
Receiving station reports low transmit power, even with transceiver set to HI power.	Antenna.	Have the antenna checked or test the transceiver with another antenna. If the problem persists, contact your Dealer for servicing.
"HI BATTERY" or "LO BATTERY" message appears when the power is turned on.	The power supply voltage is too high or too low.	Confirm that the connected power supply voltage is between 11 volts and 16.5 volts DC.

Your position is not displayed.	SCU-31 cable.	Check the SCU-31 cable connection.
	Accessory cable.	Check the accessory cable connection. Some GPS use the battery ground for NMEA connection.
	Setting of the GPS chart plotter.	Check the output signal format of the GPS navigation receiver. This radio requires NMEA 0183 and NMEA 2000 format with GLL, RMB, or RMC sentence as an output signal. If the GPS has a baud rate setting make sure to select 4800 and parity to NONE.

SVMB

21 ATIS SETUP

The **GX6500E/GX6000E** supports the ATIS (Automatic Transmitter Identification System) used in Inland waterways in Europe. When enabled ATIS mode transmits a unique ATIS code each time the PTT switch is released at the end of a transmission.

Users should check with their local marine regulatory authority in their country for assistance in obtaining an ATIS code.

21.1 ATIS CODE PROGRAMMING

1. Press the **MENU** key to display "MENU".
2. Rotate the **DIAL/ENT** knob to select "SETUP", then press the **[SELECT]** soft key.
3. Rotate the DIAL/ENT knob to select "ATIS SETUP", then press the **[SELECT]** soft key.
4. Rotate the DIAL/ENT knob to select "ATIS CODE", then press the **[SELECT]** soft key.
5. Rotate the DIAL/ENT knob to select the first number of your ATIS, then press the **[SELECT]** soft key to step to the next number.
6. Repeat step 5 to set your ATIS (ten digits).
7. If a mistake was made entering in the ATIS, Rotate the DIAL/ENT knob to select "<->" or "->", press the **[SELECT]** soft key until the wrong number is selected, then perform step 5.
8. When finished programming the number, press the **[FINISH]** soft key. The Radio will ask you to input the ATIS number again. Perform steps 5 through 7 above.
9. After the second number has been input, press the **[FINISH]** soft key to store the ATIS number in memory.
10. Press the **[OK]** soft key to return to radio operation.

21.2 ATIS CH GROUP

The **GX6500E/GX6000E** has the capability to turn on and off the ATIS feature for each channel group.

1. Press the **MENU** key to display “MENU”.
2. Rotate the **DIAL/ENT** knob to select “SETUP”, then press the **[SELECT]** soft key.
3. Rotate the **DIAL/ENT** knob to select “ATIS SETUP”, then press the **[SELECT]** soft key.
4. Rotate the **DIAL/ENT** knob to select “ATIS GROUP”, then press the **[SELECT]** soft key.
5. Rotate the **DIAL/ENT** knob to select the channel group (International, Canadian, or USA) you wish to change the setting, and press the **[SELECT]** soft key.
6. Rotate the **DIAL/ENT** knob to select “ON” or “OFF”.
7. Press the **[ENTER]** soft key to save the new setting.
8. If you want to set the ATIS feature to another channel group, repeat step 5 through 7.
9. Press the **[BACK]** soft key to return to radio operation.

22 CHANNEL ASSIGNMENTS

CH	TX (MHz)	RX (MHz)	SIMPLEX/DUPLEX	LOW PWR	CHANNEL USE
01	156.050	160.650	DUPLEX	–	TELEPHONE
02	156.100	160.700	DUPLEX	–	TELEPHONE
03	156.150	160.750	DUPLEX	–	TELEPHONE
04	156.200	160.800	DUPLEX	–	INTL
05	156.250	160.850	DUPLEX	–	INTL
06	156.300	156.300	SIMPLEX	LOW*4	SAFETY
07	156.350	160.950	DUPLEX	–	INTL
08	156.400	156.400	SIMPLEX	LOW*4	COMMERCIAL
09	156.450	156.450	SIMPLEX	–	CALLING
10	156.500	156.500	SIMPLEX	LOW*4	COMMERCIAL
11	156.550	156.550	SIMPLEX	LOW*4	VTS
12	156.600	156.600	SIMPLEX	LOW*4	VTS
13	156.650	156.650	SIMPLEX	LOW*4	BRG/BRG
14	156.700	156.700	SIMPLEX	LOW*4	VTS
15	156.750	156.750	SIMPLEX	LOW	COMMERCIAL
16	156.800	156.800	SIMPLEX	–	DISTRESS
17	156.850	156.850	SIMPLEX	LOW	SAR
18	156.900	161.500	DUPLEX	–	INTL
19	156.950	161.550	DUPLEX	–	INTL
20	157.000	161.600	DUPLEX	–	PORT OPR
21	157.050	161.650	DUPLEX	–	INTL
22	157.100	161.700	DUPLEX	–	INTL
23	157.150	161.750	DUPLEX	–	INTL
24	157.200	161.800	DUPLEX	–	TELEPHONE
25	157.250	161.850	DUPLEX	–	TELEPHONE
26	157.300	161.900	DUPLEX	–	TELEPHONE
27	157.350	161.950	DUPLEX	–	TELEPHONE
28	157.400	162.000	DUPLEX	–	TELEPHONE
31*1	157.550	162.150	DUPLEX	LOW	NED JACHTHAV
37*2	157.850	157.850	SIMPLEX	LOW	YACHTING UK
60	156.025	160.625	DUPLEX	–	TELEPHONE
61	156.075	160.675	DUPLEX	–	INTL
62	156.125	160.725	DUPLEX	–	INTL
63	156.175	160.775	DUPLEX	–	INTL
64	156.225	160.825	DUPLEX	–	TELEPHONE
65	156.275	160.875	DUPLEX	–	INTL
66	156.325	160.925	DUPLEX	–	INTL
67	156.375	156.375	SIMPLEX	–	BRG/BRG
68	156.425	156.425	SIMPLEX	–	SHIP-SHIP
69	156.475	156.475	SIMPLEX	–	PLEASURE
70	–	156.525	SIMPLEX	–	DSC
71	156.575	156.575	SIMPLEX	LOW*4	PLEASURE
72	156.625	156.625	SIMPLEX	LOW*4	SHIP-SHIP
73	156.675	156.675	SIMPLEX	–	PORT OPR
74	156.725	156.725	SIMPLEX	LOW*4	PORT OPR
75	156.775	156.775	SIMPLEX	LOW	PORT OPR
76	156.825	156.825	SIMPLEX	LOW	PORT OPR
77	156.875	156.875	SIMPLEX	LOW*4	PORT OPR
78	156.925	161.525	DUPLEX	–	INTL
79	156.975	161.575	DUPLEX	–	INTL

CH	TX (MHz)	RX (MHz)	SIMPLEX/DUPLEX	LOW PWR	CHANNEL USE
80	157.025	161.625	DUPLEX	–	INTL
81	157.075	161.675	DUPLEX	–	INTL
82	157.125	161.725	DUPLEX	–	INTL
83	157.175	161.775	DUPLEX	–	INTL
84	157.225	161.825	DUPLEX	–	TELEPHONE
85	157.275	161.875	DUPLEX	–	TELEPHONE
86	157.325	161.925	DUPLEX	–	TELEPHONE
87	157.375	157.375	SIMPLEX	–	PORT OPR
88	157.425	157.425	SIMPLEX	–	PORT OPR
M* ³	157.850	157.850	SIMPLEX	–	–
M2* ³	161.425	161.425	SIMPLEX	–	–


NOTE Country Channel assignment are different depending on the region.

***1:** Channel 31 is assigned to only BELGIUM and NETHERLAND.

***2:** Channel 37 is assigned to only NETHERLAND.

***3:** Channel M and M2 are assigned to only UNITED KINGDOM.

***4:** LOW Power setting for BELGIUM and NETHERLAND.

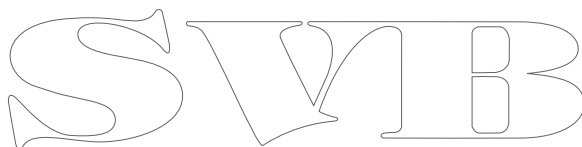

The image shows a large, stylized outline logo consisting of the letters 'S', 'V', 'M', and 'B' in a decorative, serif font. The letters are interconnected and have a classic, elegant appearance.

23 WARRANTY

PLEASE NOTE

To receive warranty service in Europe, for European Sourced products, the purchaser must return the Product, shipment and insurance prepaid to the purchasing dealer or authorized Service Centre in Europe. Contact details for warranty in Europe are available from the dealer in your country or from www.standardhorizon.co.uk where details of warranty terms and contact details for Europe can be obtained.

STANDARD HORIZON LIMITED WARRANTY

STANDARD HORIZON (the Marine Division of Yaesu Musen Co. Ltd) warrants, to the original purchaser only, each new Marine Product ("Product") manufactured and/or supplied by STANDARD HORIZON against defects in materials and workmanship under normal use and service for a period of 3 years from the date of purchase.

In the event of a defect, malfunction or failure of the Product during the warranty period, STANDARD HORIZON's liability for any breach of contract or any breach of express or implied warranties in connection with the sale of Products shall be limited solely to repair or replacement, at its option, of the Product or part(s) therein which, upon examination by STANDARD HORIZON, appear to be defective or not up to factory specifications. STANDARD HORIZON may, at its option, repair or replace parts or subassemblies with new or reconditioned parts and subassemblies.

STANDARD HORIZON will not warrant installation, maintenance or service of the Products. In all instances, STANDARD HORIZON's liability for damages shall not exceed the purchase price of the defective Product.

STANDARD HORIZON will pay all labor and replacement parts charges incurred in providing the warranty repair service except where purchaser abuse or other qualifying exceptions exist. The purchaser must pay any transportation expenses incurred in returning the Product to STANDARD HORIZON for service.

This limited warranty does not extend to any Product which has been subjected to misuse, neglect, accident, incorrect wiring by anyone other than STANDARD HORIZON, improper installation, or subjected to use in violation of instructions furnished by STANDARD HORIZON, nor does this warranty extend to Products on which the serial number has been removed, defaced, or changed. STANDARD HORIZON cannot be responsible in any way for ancillary equipment not furnished by STANDARD HORIZON which is attached to or used in connection

with Products, or for the operation of the Product with any ancillary equipment and all such equipment is expressly excluded from this warranty.

STANDARD HORIZON disclaims liability for range, coverage, or operation of the Product and ancillary equipment as a whole under this warranty.

STANDARD HORIZON reserves the right to make changes or improvements in Products, during subsequent production, without incurring the obligation to install such changes or improvements on previously manufactured Products. The implied warranties which the law imposes on the sale of this Product are expressly LIMITED, in duration, to the time period specified above. STANDARD HORIZON shall not be liable under any circumstances for consequential damages resulting from the use and operation of this Product, or from the breach of this LIMITED WARRANTY, any implied warranties, or any contract with STANDARD HORIZON. IN CONNECTION WITH THE SALE OF ITS PRODUCTS, STANDARD HORIZON MAKES NO WARRANTIES, EXPRESS OR IMPLIED AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, EXCEPT AS EXPRESSLY SET FORTH HEREIN.

Some Countries in Europe and States of the USA do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how an implied warranty lasts, so the above limitation or exclusions may not apply. This warranty provides specific rights, there may be other rights available which may vary between countries in Europe or from state to state within the USA.

24 SPECIFICATIONS

Performance specifications are nominal, unless otherwise indicated, and are subject to change without notice. Measured in accordance with TIA/EIA-603.

24.1 GENERAL

Channels	All International, USA and Canadian
Normal Input Voltage	13.8 V DC
Operating Voltage Range	11 V to 16.5 V
Current Drain	
Standby	0.55 A
Receiver (at Maximum AF Output)	0.9 A
Transmit.....	5.0 A (Hi), 1.0 A (Lo)
DSC Transmitted Call Log	24
DSC Distress Call Log	27
DSC Received Call Log	64
Individual Call Directory	80
Group Call Directory	32
Waypoint Directory	100
Display Type	2.75" x 1.33" (70 x 34 mm)
	Full Dot Matrix (222 x 162 pixels)
Dimensions (WxHxD)	7.1" x 3.1" x 6.3" (180 x 80 x 160 mm)
Flush-Mount Dimensions (WxHxD).....	6.3" x 2.6" x 5.9" (161 x 65 x 150 mm)
Weight	3.2 lbs (1.45 kg)

24.2 TRANSMITTER

Frequency Range	156.025 MHz to 157.425 MHz
RF Output Power.....	25 W (Hi), 1 W (Lo)
Conducted Spurious Emissions.....	Less than -80 dBc (Hi), -66 dBc (Lo)
Audio Response	within +1/-3dB of a 6 dB/Octave pre-emphasis characteristic at 300 to 3000 Hz
Audio Distortion	Less than 5 %
Modulation	16K0G3E (for Voice), 16K0G2B (for DSC)
Frequency Stability	±0.0003 % (-20 °C to +60 °C)
FM Hum and Noise.....	50 dB

24.3 TRANSMITTER (for AIS) *GX6500 Only

Frequency.....	161.975 MHz (CH A), 162.025 MHz (CH B)
RF Output Power.....	2 W
Conducted Spurious Emissions.....	Less than -80 dBc (Hi), -66 dBc (Lo)
Audio Distortion.....	Less than 5 %
Modulation.....	16K0GXW (GMSK)
Frequency Stability.....	±0.0003 % (-20 °C to +60 °C)

24.4 RECEIVER (for Voice and DSC)

Frequency Range.....	156.050 MHz to 162.000 MHz
Sensitivity	
20 dB Quieting.....	0.35 µV
12 dB SINAD.....	0.30 µV
Squelch Sensitivity (Threshold).....	0.13 µV
Modulation Acceptance Bandwidth.....	±7.5 kHz
Selectivity (Typical)	
Spurious and Image Rejection.....	80 dB for Voice (75 dB for DSC)
Intermodulation and Rejection.....	80 dB for Voice (75 dB for DSC)
Audio Output.....	4.5 W (at 4 ohms external speaker output)
Audio Response.....	within +1/-3dB of a 6 dB/Octave de-emphasis characteristic at 300 to 3000 Hz
Frequency Stability.....	±0.0003 % (-20 °C to +60 °C)
Channel Spacing.....	25 kHz
DSC Format.....	ITU-R M.493-13
Antenuator (Local).....	Approx. 10 dB

24.5 RECEIVER (for AIS)

Frequency.....	161.975 MHz (CH A), 162.025 MHz (CH B)
Sensitivity.....	0.5 µV (at 12 dB SINAD)
Selectivity(Typical)	
Spurious and Image Rejection.....	70 dB
Intermodulation and Rejection.....	70 dB

24.6 GPS RECEIVER

Receiver Channels.....	66 Channels
Sensitivity.....	Less than -147 dBm
Time to First Fix.....	1 minute typical (@Cold Start) 5 seconds typical (@ Hot Start)
Geodetic Datum.....	WGS84

24.7 NMEA OUTPUT

4800 Baud selected:

NMEA 0183 Input (4800 baud).....GGA, GLL, GNS, RMC, GSA, & GSV

NMEA 0183 Output (4800 baud)..... DSC, DSE, GGA, GLL, GNS,
RMC, GSA & GSV

NMEA 0183-HS AIS Output (38400 baud)..... VDM

38400 Baud selected:

NMEA 0183-HS Input (38400 baud)GGA, GLL, GNS, RMC, GSA, & GSV

NMEA 0183-HS Output (38400 baud)..... DSC, DSE, GGA, GLL, GNS,
RMC, GSA, GSV & VDM

NMEA 0183-HS AIS Output (38400 baud)..... VDM

24.8 SCU-31 EXTERNAL GPS ANTENNA (*GX6000 Optional)


Receiver Channels.....66 Channels

Sensitivity.....Less than -147 dBm

Time to First Fix.....1 minute typical (@Cold Start)

5 seconds typical (@ Hot Start)

Geodetic Datum..... WGS84

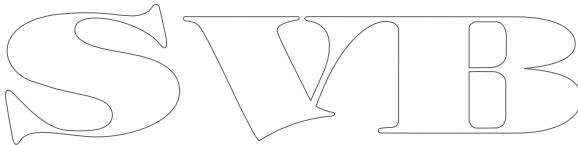

SVIB



YAESU MUSEN CO., LTD.

Tennozu Parkside Building
2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

YAESU USA

6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

YAESU UK

Unit 12, Sun Valley Business Park, Winnall Close
Winchester, Hampshire, SO23 0LB, U.K.

Copyright 2016
YAESU MUSEN CO., LTD.
All rights reserved.

No portion of this manual
may be reproduced
without the permission of
YAESU MUSEN CO., LTD.

Printed in China

