

Art. N.	Marca	Modello	Sign	Data	 Spezialversand für Yacht- & Bootszubehör
70260	Standard Horizon	HX870	FWI	19.06.2015	



Titolo	FAQ / Il menu DSC non è disponibile FAQ / The DSC Menu is not available
---------------	--

Nel caso non fosse possibile aprire il Menu DSC della ricetrasmittente così come descritto nel manuale, si prega di verificare se il gruppo di canali è impostato su DSC. La radio ricetrasmittete è dotata di due gruppi di canali "INT" (Internazionale) e "DSC". L'impostazione di fabbrica della radio HX870 è su INT. In questo gruppo di canali la funzione DSC è disabilitata.

Attivare il gruppo di canali come segue su DSC e quindi riprovare ad aprire il Menu DSC.

Modificare il gruppo di canali:

1. Premere il tasto "MENU" per accedere al menu. Selezione con l'aiuto dei tasti "CH▲/CH▼" la voce "SETUP".
2. Premere il tasto [SELECT] e selezionare con l'aiuto dei tasti "CH▲/CH▼" la voce "CH SETUP".
3. Ora premere il tasto [SELECT] e scegliere con l'aiuto dei tasti "CH▲/CH▼" la voce "CH GROUP".
4. Confermare premendo il tasto [SELECT].
5. Premere il tasto "CH▲/CH▼" e scegliere il gruppo di canali desiderato ("INTL" o "DSC").
6. Confermare premendo [ENTER].
7. Premere il tasto "CLR" per chiudere il menu.

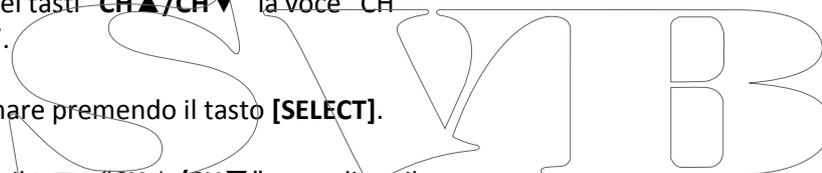

If the "DSC Menu" of the radio as described in the instructions is not available, please check that the HX870 is set to the radio channel group "DSC". Your radio has the channel groups "INT" (International)

Art. N.	Marca	Modello	Sign	Data	 Spezialversand für Yacht- & Bootszubehör
70260	Standard Horizon	HX870	FWI	19.06.2015	

Titolo	FAQ / Il menu DSC non è disponibile FAQ / The DSC Menu is not available
---------------	--

and "DSC". In the factory setting the channel group of the HX870 is set to "INT". In this channel group the DSC function is disabled.

Switch between the channel groups as follows and then check whether the "DSC Menu" is available in the "DSC" channel group.

Switch between channel group „INT“ and „DSC“:

1. Press the "MENU" key to display "Menu", then select "SETUP" with the "CH▲/CH▼" key.
2. Press the [SELECT] soft key, then press the "CH▲/CH▼" key to select "CH SETUP".
3. Press the [SELECT] soft key, then press the "CH▲/CH▼" key to select "CH GROUP".
4. Press the [SELECT] soft key.
5. Press the "CH▲/CH▼" key to select desired channel group "INTL" or "DSC".
6. Press the [ENTER] soft key to store the selected setting
7. Press "CLR" key to return to radio operation.

