


Articlenr.	Manufacturer	Model	Sign	Date	 Spezialversand für Yacht- & Bootszubehör
70260	Standard Horizon	HX870	FWI	19.06.2015	


Titel	FAQ / Das DSC Menü ist nicht aufrufbar FAQ / The DSC Menu is not available
--------------	---


Sollten Sie das „DSC Menü“ des Funkgerätes wie in der Anleitung beschrieben nicht öffnen können, prüfen Sie bitte, ob am Funkgerät die Kanalgruppe „DSC“ eingestellt ist. Ihr Funkgerät verfügt über die Kanalgruppen „INT“ (International) und „DSC“. In der Werkseinstellung steht die Kanalgruppe des HX870 auf INT. In dieser Kanalgruppe ist die DSC Funktion gesperrt.

Schalten Sie die Kanalgruppe wie folgt auf „DSC“ um und prüfen Sie anschließend ob sich das „DSC Menü“ öffnen lässt.

Kanalgruppe wechseln:

1. Drücken Sie die **“MENU”** Taste um das Menü aufzurufen. Wählen Sie dann mit Hilfe der **“CH▲/CH▼”** Tasten den Punkt **“SETUP”** aus.
2. Drücken Sie den **[SELECT]** soft key, und wählen Sie mit Hilfe der **“CH▲/CH▼”** Tasten den Punkt **“CH SETUP”** aus.
3. Drücken Sie jetzt den **[SELECT]** soft key und wählen Sie mit Hilfe der **“CH▲/CH▼”** Tasten den Punkt **“CH GROUP”** aus.
4. Bestätigen Sie mit dem **[SELECT]** soft key.
5. Drücken Sie die **“CH▲/CH▼”** Taste und wählen Sie die gewünschte Kanalgruppe (**“INTL”** oder **“DSC”**) aus.
6. Bestätigen Sie mit dem **[ENTER]** soft key.
7. Drücken Sie **“CLR”** um das Menü zu schließen.

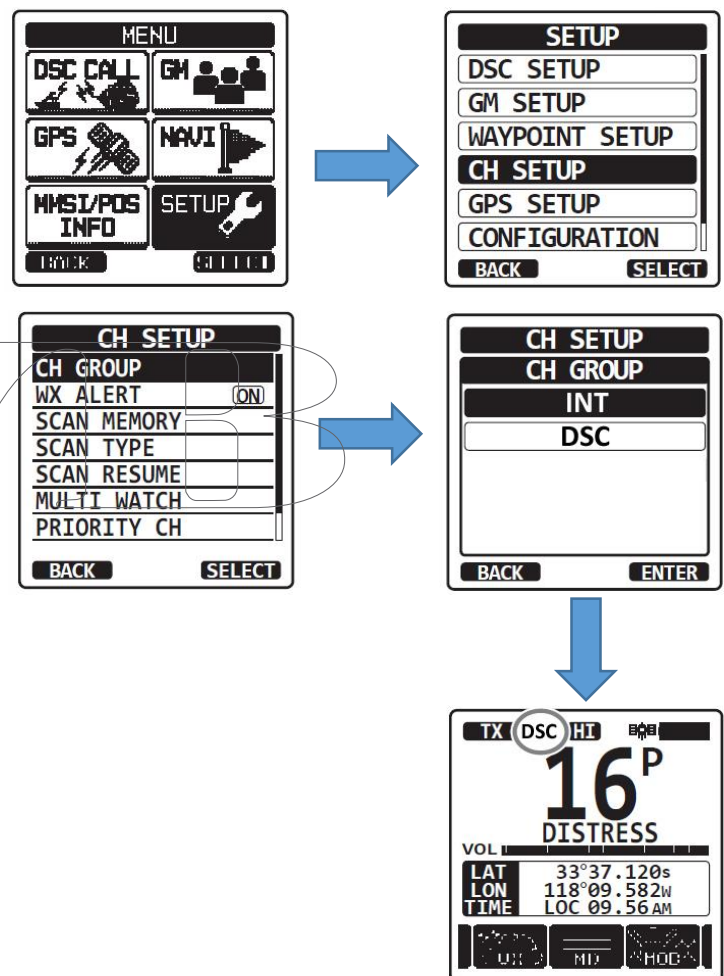

Articlenr.	Manufacturer	Model	Sign	Date	 Spezialversand für Yacht- & Bootszubehör
70260	Standard Horizon	HX870	FWI	19.06.2015	

Titel	FAQ / Das DSC Menü ist nicht aufrufbar FAQ / The DSC Menu is not available
-------	---

If the "DSC Menu" of the radio as described in the instructions is not available, please check that the HX870 is set to the radio channel group "DSC". Your radio has the channel groups "INT" (International) and "DSC". In the factory setting the channel group of the HX870 is set to "INT". In this channel group the DSC function is disabled.

Switch between the channel groups as follows and then check whether the "DSC Menu" is available in the "DSC" channel group.

Switch between channel group „INT“ and „DSC“:

1. Press the "MENU" key to display "Menu", then select "SETUP" with the "CH ▲/CH ▼" key.
2. Press the [SELECT] soft key, then press the "CH ▲/CH ▼" key to select "CH SETUP".
3. Press the [SELECT] soft key, then press the "CH ▲/CH ▼" key to select "CH GROUP".
4. Press the [SELECT] soft key.
5. Press the "CH ▲/CH ▼" key to select desired channel group "INTL" or "DSC".
6. Press the [ENTER] soft key to store the selected setting
7. Press "CLR" key to return to radio operation.

